


- ▶ Select **SIRIUS Service** and press  to confirm.  
The window on the right half of the display shows the telephone number of the provider (SIRIUS XM) and the serial number of your service module for receiving traffic messages.

### Registering for the SIRIUS XM traffic report service

- ▶ Call the traffic report provider's phone number shown on the screen.
- i** You can also have the satellite service activated online. To do so, visit the SIRIUS XM Radio website at <http://www.sirius.com> (USA) or <http://www.siriuscanada.com> (Canada).






Once the connection has been established:


- ▶ Follow the instructions of the operator.  
The activation process may take up to ten minutes.

If registration is not included when purchasing the system, your credit card details will be required to activate your account.

### Compass function

In the compass view, you can see the current direction of travel, the current height above sea level and the coordinates of the vehicle position, for example.

- ▶ **To switch on navigation mode:** press the **NAVI** function button.
- ▶ **To show the menu:** press  the COMAND controller.
- ▶ Select **Pos.** in the navigation system menu bar by sliding  and turning  the COMAND controller and press  to confirm.
- ▶ Select **Compass** and press  to confirm.

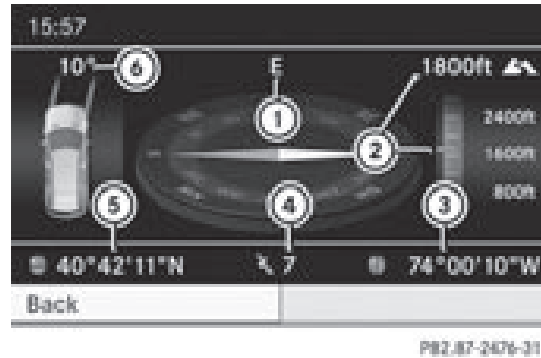






Compass (example)

- ① Current direction of travel
- ② Current height above average sea level, rounded
- ③ Current vehicle position: longitude coordinates
- ④ Number of GPS satellites currently being used
- ⑤ Current vehicle position: latitude coordinates
- ⑥ Currently set steering angle of the front wheels

- i** To display current height ②, the system must be able to receive at least four satellites. Steering angle ⑥ can be a maximum of 35° in both directions.

- ▶ **To exit the display:** confirm **Back** by pressing  or press the  button.

### Showing the map data version

- ▶ **To show the menu:** press  the COMAND controller.
- ▶ Select **Navi** in the main function bar by sliding  and turning  the COMAND controller and press  to confirm.
- ▶ Select **Map Version** and press  to confirm.  
The map data version number is shown. Information about new versions of the digital map can be obtained from an authorized Mercedes-Benz Center.