


P54.21-3039-09

- |   |                          |   |                                  |          |   |
|---|--------------------------|---|----------------------------------|----------|---|
| 1 | Trim                     | 6 | Cover                            | A40/9s11 | Audio/COMAND controller                         |
| 2 | Release handle cover     | 7 | Electrical connector             | S16/12   | Automatic transmission transmission mode button |
| 3 | Rear stowage compartment | 8 | Lower control panel control unit | S77      | Suspension button group                         |
| 4 | Catch hook               | 9 | Retaining clips                  |          |   |
| 5 | Center console           |   |                                  |          |   |

|    | Remove   |  |  |
|----|--|--|--|
| 1  | Open cover (6) and rear stowage compartment (3) of the center console (5)  |  |  |
| 2  | Unlock catch hooks (4) and remove release handle cover (2) forwards  |  |  |
| 3  | Position assembly wedge in the front area of the cover (1) and unclip retaining clips (9)  |  | *110589035900  |
| 4  | Lift panel (1) in the front area above the Audio/COMAND controller (A40/9s11) and pull out forwards until the electrical connectors (7) are accessible   |  | The panel (1) must be pressed down carefully in the rear area (arrows A) otherwise the panel (1) tilts and cannot be removed.                                      |
| 5  | Disconnect electrical connectors (7) and remove panel (1) with the lower control panel control unit (8)  |  |  |
| 6  | Unclip lower control panel control unit (8) with the automatic transmission transmission mode button (S16/12) and the suspension button group (S77) from the panel (1)                                       |  |  |
| 7  | Remove automatic transmission transmission mode button (S16/12) and remove suspension button group (S77) from the lower control panel control unit (8)   |  | Only when replacing the lower control panel control unit (8) or the automatic transmission transmission mode button (S16/12) or the suspension button group (S77). |
|    | <b>Install</b>   |  |  |
| 8  | Install automatic transmission transmission mode button (S16/12) and suspension button group (S77) in the lower control panel control unit (8)   |  | Only when replacing the lower control panel control unit (8) or the automatic transmission transmission mode button (S16/12) or the suspension button group (S77). |
| 9  | Position panel (1) in the rear area (arrows B) under the center console (5), slide backwards and clip in   |  | The panel (1) must be pressed down carefully in the rear area (arrows B) otherwise the panel (1) tilts and cannot be removed.                                      |
| 10 | Connect electrical connectors (7) to the automatic transmission transmission mode button (S16/12) and the suspension button group (S77) and clip the lower control panel control unit (8) into the panel (1) |  |  |
| 11 | Slide release handle cover (2) onto the  |  | The release handle cover (2) must  |

|    |  |  |  |
|----|--|--|--|
| 12 | Close cover (6) and the rear stowage compartment (3) |  |  |
|----|--|--|--|

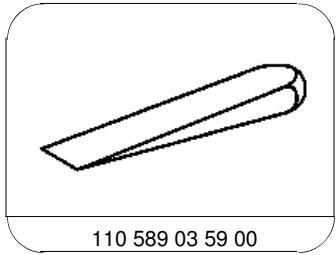

Mounting wedge