 
 


Operation

You can use the Voice Control System to:

- enter a state
- enter a province
- enter a city
- enter a district
- enter a street
- enter a house number
- enter an intersection
- enter a ZIP code
- enter a point of interest
- display POI symbols on the map
- enter, save or delete an intermediate destination
- Select a previous destination
- call up route information
- store a destination
- display the map
- zoom the map in/out
- set the map orientation
- read out/list the destination memory
- start and stop route guidance
- switch the driving instructions on/off
- have an alternative route calculated

i If the Voice Control System fails to recognize your voice, spell the name of the entry.

- ▶ **To select the navigation application:**
press the  button on the multifunction steering wheel.
- ▶ Say the command "Navigation".
- ▶ Press the  button on the multifunction steering wheel.
- ▶ Say one of the navigation commands explained below.

Commands

You cannot start route guidance until all the necessary address data has been entered.

The commands for entering an address can be found from (▷ page 19).

"Help navigation"

Using the command "Help navigation", you can have the main commands for the navigation system read out.

The main categories are read out first. After a main category has been selected, the available commands are read out.

"Route information"

You can use the command "Route information" to have the following information on your currently planned route read out:

- distance to destination
- approximate time of arrival
- remaining travel time

"Guidance instructions on"

When you use the command "Guidance instructions on", the Voice Control System repeats the last driving instruction. If the driving instruction output has been switched off up to this point, it is now switched on again.

"Guidance instructions off" or "Guidance instructions on"

You can use these commands to switch voice output for route guidance on/off.

"Map"

You can use this command to switch on the map or to switch to the map view.

"Zoom in" or "Zoom out"

You can use these commands to increase or decrease the scale of the map on the display.