
ENGINES 642.920 in MODEL 211.020 /022 /024 /220 /222 /620

ENGINES 642.921 in MODEL 211.084 /089 /284 /289

- 1 Air cleaner housing
- 1a Bolts
- 2 Cover
- 3 Air filter element

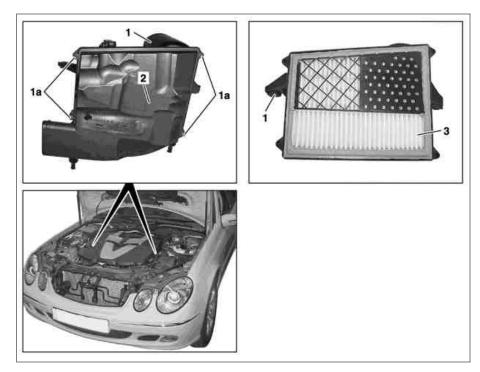

P09.10-2153-06

Modification notes

18.9.07	Notes on avoiding damage through contamination and foreign objects, added		
	Note: ignition switched off, added	Step 2	

XX	Remove/install and replace		
(3)	Notes on avoiding damage through contamination and foreign objects		AH00.00-P-5000-01A
1	Open engine hood and raise to vertical position		
⊯ AR	Opening engine hood, moving to upright position and closing		AR88.40-P-1000T
2	Remove engine trim panel	i Installation: Ignition switched off.	
F AR	Remove/install engine cover		AR01.10-P-2405TI
3	Remove left and right air filter housing (1)		
⊯ AR	Remove/install air filter housing		AR09.10-P-1150TI
4	Remove bolts (1a)		
5	Remove cover (2) from air filter housings (1)		
6	Remove air filter elements (3) from air filter housings (1)	i Installation: Replace air filter elements (3), do not clean.	
	Clean		
7	Clean air filter housing (1) and cover (2) from inside	Cleaner from package	*BR00.45-Z-1028-04A
8	Install in the reverse order		
9	Reset quantity mean value adaptation data using STAR DIAGNOSIS	i In the menu "Control unit adaptations" select the menu item "Quantity mean value adaptation data" and process.	

Repair materials

Number	Designation	Order number
BR00.45-Z-1028-04A	Cleaner from package	Adolf Würth GmbH & Co. KG Reinhold-Würth-Str. 12-17 74653 Künzelsau-Gaisbach Germany Tel. +49 7940 15-0