



 

 


## - Parts list -

<b>Mode</b>	MD mode	<b>Mod. des. overview</b>	E SEDAN
<b>FIN/MD</b>	212056	<b>Catalog</b>	D02
<b>VIN</b>		<b>Major assembly:</b>	
<b>Sales designation</b>	E 350	<b>Major assembly MD</b>	
<b>Assortment class</b>	Car	<b>Group</b>	83 - HEATING AND VENTILATION
<b>Market</b>	All	<b>Subgroup</b>	135 - OPERATING UNIT

Item no.	Part number	Designation/description	Quantity	Version
10	A 212 900 37 00	<b>CONTROL UNIT</b> HEATING AND AIR CONDITIONER <b>Replaced by:</b> A 212 900 41 00 Code: -050-494-581-670+800 ☐ [002, 009, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001	
10	A 212 900 41 00	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 59 02 Code: -050-494-581-670+800 ☐ [002, 010, 011, 012, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001	
10	A 212 900 59 02	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 74 04 Code: -050-494-581-670+800 ☐ [002, 013, 014, 015, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001	
10	A 212 900 74 04	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 86 08 Code: -050-494-581-670+800 ☐ [002, 016, 017, 018, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001	
10	A 212 900 86 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -050-494-581-670+800 ☐ [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001	
10	A 212 900 68 02	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 74 04 Code: -494-581-670+050+800 ☐ [002, 019, 020, 021, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001	
10	A 212 900 74 04	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 86 08 Code: -494-581-670+050+800 ☐ [002, 013, 020, 021, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001	
10	A 212 900 86 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -494-581-670+050+800 ☐ [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001	

10	A 212 900 38 00	<b>CONTROL UNIT</b> HEATING AND AIR CONDITIONER <b>Replaced by:</b> A 212 900 42 00 Code: -050+581+800/-050+581+670... [002, 009, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001
10	A 212 900 42 00	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 62 02 Code: -050+581+800/-050+581+670... [002, 010, 011, 012, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 62 02	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. 135 <b>Replaced by:</b> A 212 900 75 04 Code: -050+581+800/-050+581+670... [002, 013, 014, 015, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 75 04	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. 135 <b>Replaced by:</b> A 212 900 92 09 Code: -050+581+800/-050+581+670... [002, 016, 017, 018, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 92 09	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -050+581+800/-050+581+670... [022, 672] To Chassis: A 419518 To Date: 17/02/2011	001
10	A 212 900 87 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -050+581+800/-050+581+670... [023, 672] From Chassis: A 419519 From Date: 17/02/2011	001
10	A 212 900 71 02	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 75 04 Code: 050+581+800/050+581+670+8... [002, 019, 020, 021, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 75 04	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 92 09 Code: 050+581+800/050+581+670+8... [002, 013, 020, 021, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 92 09	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 050+581+800/050+581+670+8... [022, 672] To Chassis: A 419518 To Date: 17/02/2011	001
10	A 212 900 87 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 050+581+800/050+581+670+8... [023, 672] From Chassis: A 419519 From Date: 17/02/2011	001
10	A 212 900 39 00	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 43 00 Code: -050+494+800 [010, 672] To Chassis: A 045692 To Date: 10/06/2009	001












10	A 212 900 43 00	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 61 02 Code: -050+494+800  [002, 010, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001
10	A 212 900 61 02	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 76 04 Code: -050+494+800  [002, 013, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001
10	A 212 900 76 04	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 88 08 Code: -050+494+800  [002, 016, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001
10	A 212 900 88 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -050+494+800  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 70 02	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 76 04 Code: 050+494+800  [002, 019, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001
10	A 212 900 76 04	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 88 08 Code: 050+494+800  [002, 013, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001
10	A 212 900 88 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 050+494+800  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 40 00	<b>CONTROL UNIT</b> HEATING AND AIR CONDITIONER <b>Replaced by:</b> A 212 900 44 00 Code: -050-581+670+800  [002, 009, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001
10	A 212 900 44 00	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 60 02 Code: -050-581+670+800  [002, 010, 011, 012, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 60 02	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 77 04 Code: -050-581+670+800  [002, 013, 014, 015, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 77 04	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 89 08 Code: -050-581+670+800  [002, 016, 017, 018, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001

10	A 212 900 89 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -050-581+670+800  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 69 02	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 77 04 Code: -494-581+050+670+800  [002, 019, 020, 021, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 77 04	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 89 08 Code: -494-581+050+670+800  [002, 013, 020, 021, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 89 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -494-581+050+670+800  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 82 05	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 46 07 Code: -494-581-670+801  [002, 024, 017, 018, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 46 07	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 91 09 Code: -494-581-670+801  [002, 025, 026, 027, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 91 09	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 86 08 Code: -494-581-670+801  [002, 022, 028, 029, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 86 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -494-581-670+801  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 84 05	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 48 07 Code: 494+801  [002, 024, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001
10	A 212 900 48 07	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 494+801  [025, 672] To Chassis: A 316275 To Date: 27/08/2010	001
10	A 212 900 93 09	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 88 08 Code: 494+801  [030, 002, 022, 672] From Chassis: A 316276 From Date: 27/08/2010	001




10	A 212 900 88 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 494+801 [030, 672] From Chassis: A 316276 From Date: 27/08/2010	001
10	A 212 900 83 05	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 47 07 Code: 581+801/581+670+801 [002, 024, 017, 018, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 47 07	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 92 09 Code: 581+801/581+670+801 [002, 025, 026, 027, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 92 09	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 581+801/581+670+801 [022, 028, 029, 672] To Chassis: A 419518 To Date: 17/02/2011	001
10	A 212 900 87 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 581+801/581+670+801 [023, 031, 032, 672] From Chassis: A 419519 From Date: 17/02/2011	001
10	A 212 900 85 05	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 49 07 Code: -494-581+670+801 [002, 024, 017, 018, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 49 07	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 94 09 Code: -494-581+670+801 [002, 025, 026, 027, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 94 09	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 89 08 Code: -494-581+670+801 [002, 022, 028, 029, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 89 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -494-581+670+801/-494-581... [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 88 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -052+494+802 [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 89 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -052+670+802/-052+802+965 [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 86 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -052-494-581-670+802 [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001

10	A 212 900 87 08	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -052+581+802/-052+581+670...  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 84 11	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 31 14 Code: 052+581+802/052+581+670+8...  [002, 033, 034, 035, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 31 14	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 88 11 Code: 052+581+802/052+581+670+8...  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 88 11	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 052+581+802/052+581+670+8...  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 85 11	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 30 14 Code: 052+494+802  [002, 033, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001
10	A 212 900 30 14	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 89 11 Code: 052+494+802  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 89 11	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 052+494+802  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 86 11	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 29 14 Code: 052+670+802/052+802+965  [002, 033, 034, 035, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 29 14	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 90 11 Code: 052+670+802/052+802+965  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 90 11	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 052+670+802/052+802+965  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 87 11	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 803  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001

10	A 212 900 88 11	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 581+803/581+670+803/581+8... <input type="checkbox"/> [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 89 11	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 494+803 <input type="checkbox"/> [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 90 11	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 580+670+803/803+965 <input type="checkbox"/> [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 50 18	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 45 25 Code: 804 <input type="checkbox"/> [002, 036, 037, 038, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 45 25	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 01 28 Code: 804 <input type="checkbox"/> [002, 039, 040, 041, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 01 28	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 804 <input type="checkbox"/> [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 53 18	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 48 25 Code: 581+804/581+670+804/581+8... <input type="checkbox"/> [002, 036, 037, 038, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 48 25	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 04 28 Code: 581+804/581+670+804/581+8... <input type="checkbox"/> [002, 039, 040, 041, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 04 28	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 581+804/581+670+804/581+8... <input type="checkbox"/> [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 52 18	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 47 25 Code: 494+804 <input type="checkbox"/> [002, 036, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001
10	A 212 900 47 25	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 03 28 Code: 494+804 <input type="checkbox"/> [002, 039, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001

10	A 212 900 03 28	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 494+804  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 51 18	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 46 25 Code: 580+670+804/804+965  [002, 036, 037, 038, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 46 25	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 02 28 Code: 580+670+804/804+965  [002, 039, 040, 041, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 02 28	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 580+670+804/804+965  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 97 18	<b>CONTROL UNIT</b> <b>Replaced by:</b> A 212 900 61 26 Code: 805  [002, 042, 043, 044, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 61 26	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 65 27 Code: 805  [002, 045, 043, 044, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 65 27	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 805/806/807  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 00 19	<b>CONTROL UNIT</b> <b>Replaced by:</b> A 212 900 58 26 Code: 581+805/581+670+805/581+8...  [002, 042, 043, 044, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 58 26	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 68 27 Code: 581+805/581+670+805/581+8...  [002, 045, 043, 044, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 68 27	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 581+805/581+806/581+807/5...  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 99 18	<b>CONTROL UNIT</b> <b>Replaced by:</b> A 212 900 59 26 Code: 494+805  [002, 042, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001
10	A 212 900 59 26	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 67 27 Code: 494+805  [002, 045, 672] FIRST EXHAUST STOCK OF OLD PARTS UP TO IDENT NO.	001



10	A 212 900 67 27	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 494+805/494+806/494+807  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 98 18	<b>CONTROL UNIT</b> <b>Replaced by:</b> A 212 900 60 26 Code: 580+670+805/805+965  [002, 042, 043, 044, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 60 26	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 66 27 Code: 580+670+805/805+965  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 66 27	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: 580+670+805/580+670+806/5...  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 83 11	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 28 14 Code: -494-581-670-965+052+802  [002, 033, 034, 035, 672] FIRST EXHAUST STOCK OF OLD PARTS U...	001
10	A 212 900 28 14	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. <b>Replaced by:</b> A 212 900 87 11 Code: -494-581-670-965+052+802  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001
10	A 212 900 87 11	<b>CONTROL UNIT</b> OPERATING UNIT, HEATER AND AIR COND. Code: -494-581-670-965+052+802  [672] PART MUST BE CHECKED AFTER INSTALLATION FOR CURRENT FLASHWARE	001