



MODEL 212.0/ 1

- 5 Spare tire well trim (without code (669) Spare tire on steel rim or without code (690) Emergency spare tire)
- 7 Rear center section paneling
- 10 Front trunk floor paneling
- 11 Left side paneling
- 12 Right side paneling
- 19 Cross member paneling

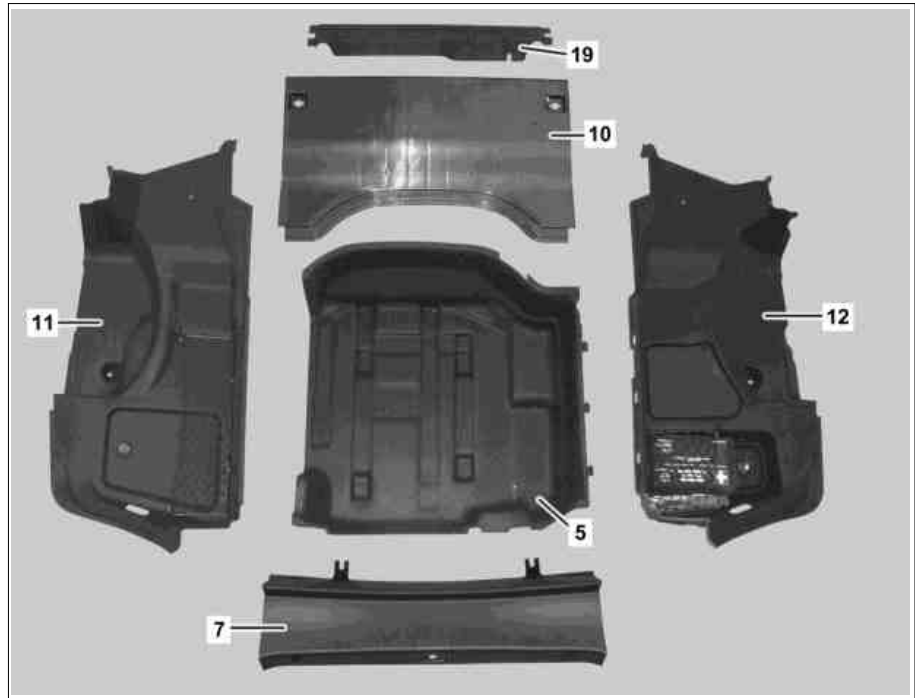


P68.30-3428-06

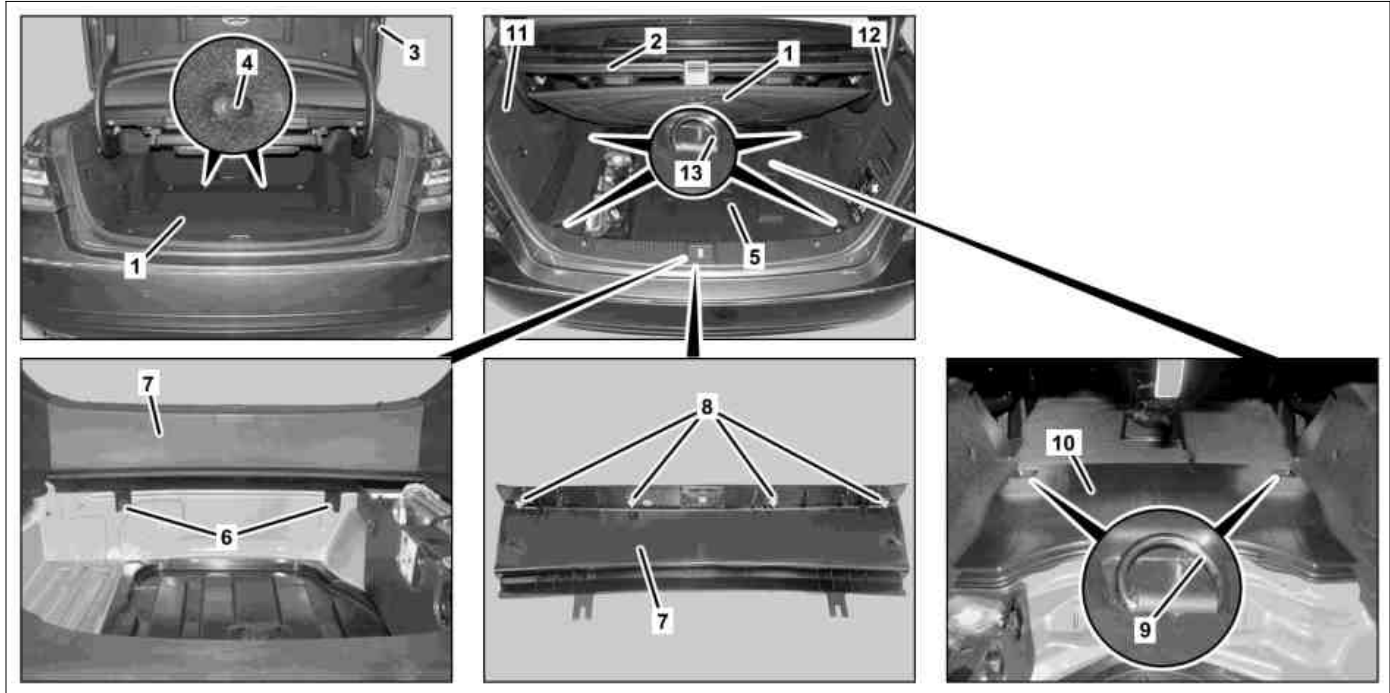

P68.30-3429-09

- | | | |
|--|---|--|
| <ul style="list-style-type: none"> 1 Cargo space flap 2 Frame seal 3 Trunk lid 4 Expansion clip 5 Spare tire well trim (without code (669) Spare tire on steel rim or without code (690) Emergency wheel) | <ul style="list-style-type: none"> 6 Nuts 7 Rear center section paneling 8 Clip 9 Anchoring lug | <ul style="list-style-type: none"> 10 Front trunk floor paneling 11 Left side paneling 12 Right side paneling 13 Anchoring lug |
|--|---|--|

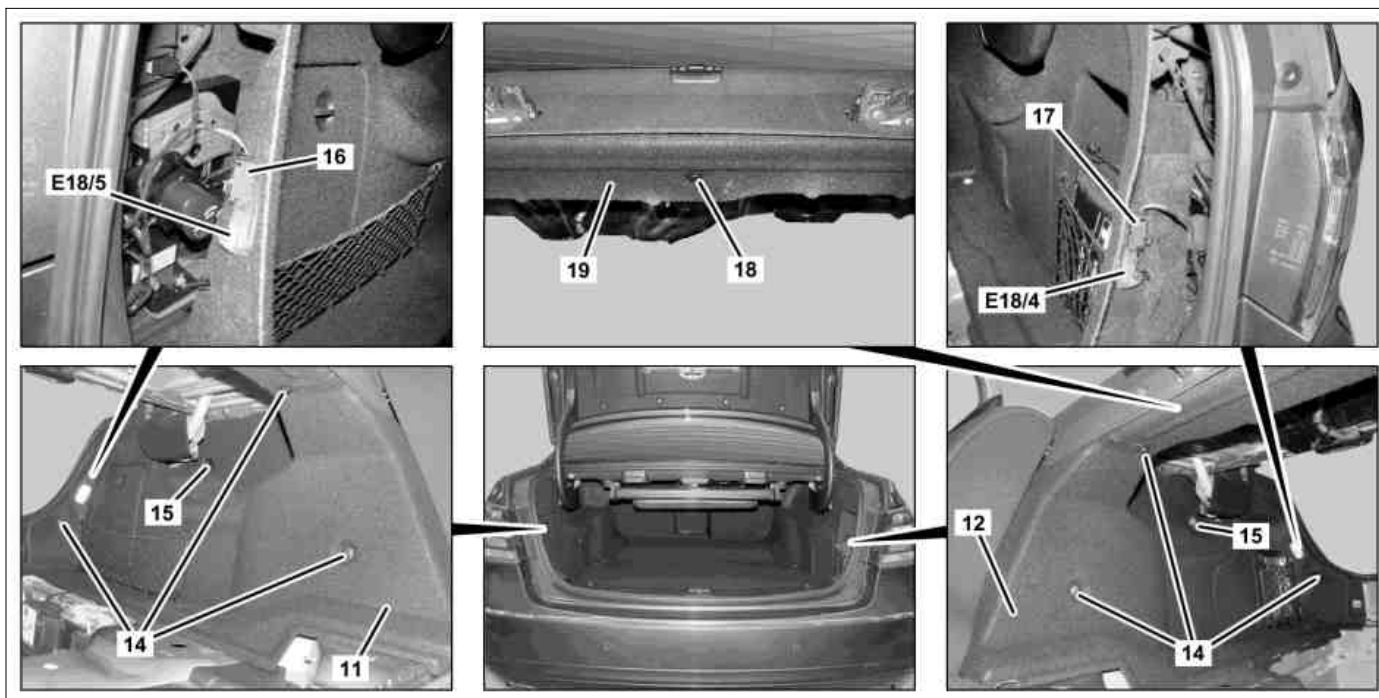



 

 
 




 
P68.30-3430-09

Shown with code (287) Through-loading feature

- 11 Left side paneling
- 12 Right side paneling
- 14 Expansion clip
- 15 Nut

- 16 Electrical connector
- 17 Electrical connector
- 18 Expansion clip
- 19 Cross member paneling


- E18/4 Right luggage compartment lamp
- E18/5 Left luggage compartment lamp

 	Remove/install		
1.1	Lift cargo space flap (1) and hook into sealing frame (2) on trunk lid (3)		If front trunk floor paneling (10) is not removed.
1.2	Remove expansion clip (4) and remove cargo space flap (1)		If the front trunk floor paneling (10) is removed  *452589016300
2	Remove spare tire well paneling (5)		On vehicles without code (669) Spare tire on steel rim or Without code (690) Emergency spare tire)
3	Loosen nuts (6)		Do not unscrew nuts (6) completely.
4	Unclip rear center section paneling (7) from clips (8) with assembly wedge and remove upward		*110589035900
5.1	Unlock rear seat backrest and push forward until left side paneling (11) and right side paneling (12) is accessible behind rear seat backrest.		When removing left side paneling (11) or right side paneling (12) on vehicles without code (287) Through-loading feature .
5.2	Fold over left and right rear seat backrest		When removing left side paneling (11) or right side paneling (12) on vehicles without code (287) Through-loading feature .
6.1	Remove anchoring lug (9) on left and right from front trunk floor paneling (10)		*BA68.50-P-1001-03I
6.2	Remove left and right anchoring lugs from front trunk floor paneling (10)		On vehicles without code (287) Through-loading feature, anchoring hooks are installed instead of anchoring lugs (9). 
7	Remove front trunk floor paneling (10)		
8	Remove anchoring lug (13) or anchoring hook from left side paneling (11) or right side paneling (12)		On vehicles without code (287) Through-loading feature, anchoring hooks are installed instead of anchoring lugs (13). 
9	Remove expansion clips (14) from left side paneling (11) or right side paneling (12)		*452589016300
10	Unscrew nuts (15)		
11	Disconnect electrical connector (16) from left trunk lamp (E18/5)		


13	Loosen left side paneling (11) and right side paneling (12) from wheel arches in lower area toward center of trunk and remove		
14	Remove expansion clip (18) from crossmember paneling (19)		*452589016300
15	Remove cross member paneling (19)		
16	Install in the reverse order		

Nm Cargo retainers

Number	Designation		Model 212
BA68.50-P-1001-03I	Bolt for anchoring lug	Nm	24

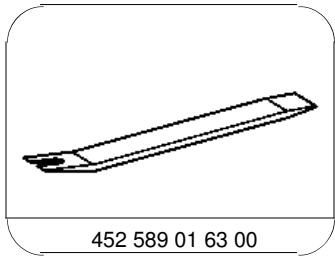

Snap-release tool

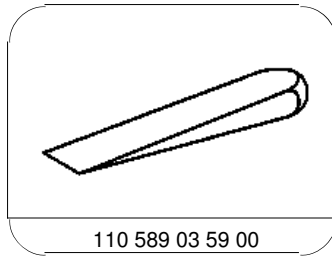

Mounting wedge