

 
P77.21-2269-09

## Shown on model 212.0

1 Wind deflector  
2 Drip molding  
3 Gasket  
4 Cover

5 Screw  
6 Net  
7 Spring

8 Guide rail  
9 Terminal strip  
10 Front glass cover

	Remove/install		
<b>⚠ Danger!</b>	<b>Risk of injury</b> caused by <b>fingers being pinched or crushed</b> when removing, installing or aligning hoods, doors, trunk lids, liftgates or sliding roof	Keep body parts and limbs well clear of moving parts.	<a href="#">AS00.00-Z-0011-01A</a>
1	Open front glass cover		
2	Remove cover (4) and screws (5)	<b>i</b> <b>Installation:</b> Pull wind deflector (1) downwards and slide until it lies flush with the seal (3). Then tighten the bolts (5).	
3	Check seal (3) for front glass cover (10), replace if necessary.	<b>i</b> Lay wind deflector (1) down toward rear until seal (3) is accessible. Lubricant, rubber assembly 1 l	<a href="#">*BR00.45-Z-1010-06A</a>
4	Lie wind deflector (1) forwards and remove springs (7)	Only when replacing springs (7).	
5	Remove left drip rail (2) on panoramic roof		<a href="#">AR88.80-P-4000EW</a>
6	Pull the terminal strip (9) found on the mesh (6) of the wind deflector (1) out to the left of the guide rail (8) and remove wind deflector (1)		
7	Install in the reverse order		

## Repair materials

Number	Designation	Order number
BR00.45-Z-1010-06A	Lubricant, rubber assembly 1 l	A 000 989 03 67