
Shown on model 204.0 with code (287) Through-loading feature

- 1 Side bolster
- Side paneling
- 2 3 Edge guard
- 4 Rear door sill molding
- 5 Clip (model 204)
- 6 Clips

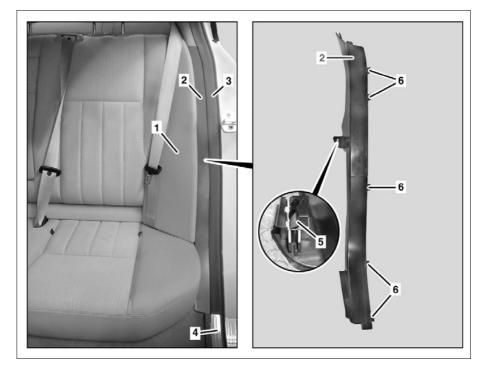

P68.30-3443-06

XX	Remove/install		
1.1	Remove left and right rear seat backrest side bolsters (1)	MODEL 204.0, 212.0 with CODE 287 (Through-loading feature) MODEL 204.2/9	
		MODEL 204.2/9	AR91.12-P-1710CX
		MODEL 204.0, 212.0	AR91.12-P-1710CW
		with CODE 287 (Through-loading feature)	
1.2	Remove rear seat backrest	MODEL 204.0, 212.0/1 without CODE 287 (Through-loading feature)	
		MODEL 204.0 MODEL 212.0/1	AR91.12-P-1620CW
		MODEL 212 with CODE 224 (Rear individual seat design)	AR91.12-P-1620EW
2.1	Unclip rear door sill (4) in area of B-pillar and remove toward front	MODEL 204.0/2/9	
2.2	Remove rear door sill (4)	MODEL 212.0/1	AR68.30-P-4100EW
3	Remove edge guard (3) in area of side paneling (2)		
4	Remove clip (5)	MODEL 204.0/2/9	
5	Unscrew nut	MODEL 212.0/1	
		i Side paneling (2) is fastened with two nuts instead of clips (5).	
6	Unhook clips (6) from body flange		
7	Remove side paneling (2)	i Installation: Ensure that side paneling (2) is seated correctly in paneling on C-pillar.	
8	Install in the reverse order		