


P91.12-3466-07

- 1 Rear seat backrest
- 2 Rear seat cushion

- 3 Rear center console
- 4 Screw

- 5 Screw

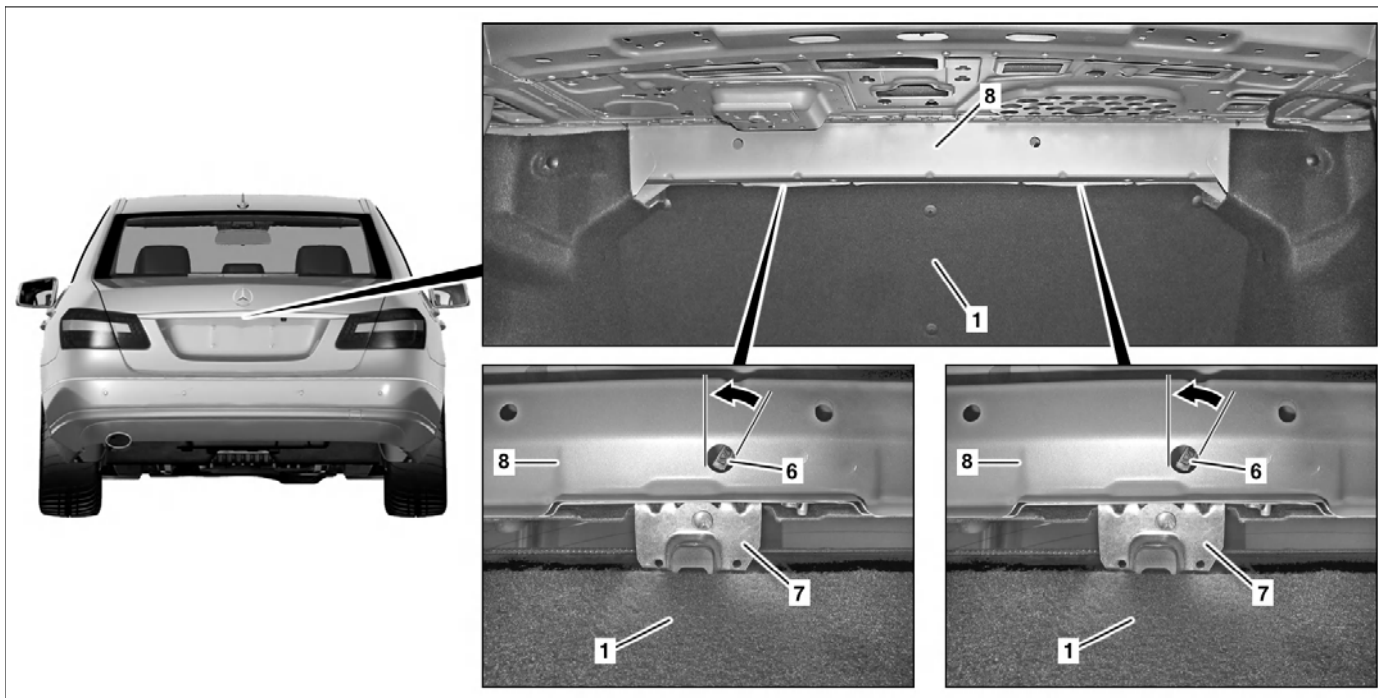

P91.12-3467-09

- 1 Rear seat backrest
- 6 Release lever

- 7 Backrest lock

- 8 Reinforcement



P91.12-3469-09

1 Rear seat backrest
 9 Electrical connector
 10 Mount

X54/23 Left rear seat heater electrical connector (with code (872)
 Electric seat heater for left and right rear seat)

X54/24 Right rear seat heater electrical connector (with code (872)
 Electric seat heater for left and right rear seat)

	Remove/install		
1	Remove both rear seat cushions (2)		AR91.12-P-1020EW
2	Remove rear center console (3)		AR68.20-P-2020EW
3	Remove bolts (4)		
4	Remove bolts (5)		*BA91.12-P-1001-03I
5	Through left and right opening in reinforcement (8), move release lever (6) of backrest catches (7) to left and press rear seat backrest (1) forward		
6	Pull out seat belts until rear seat backrest (1) can be removed, then lift rear seat backrest (1), guide out of bottom supports (10) and fold over forward until electrical connectors (9) of rear head restraints are accessible		
7	Disconnect electrical connectors (9) of rear head restraints		
8	Disconnect left rear seat heater electrical connector (X54/23) and right rear seat heater electrical connector (X54/24)		For vehicles with code (872) Electrically heated left and right rear seats
9	Remove rear seat backrest (1) from vehicle	Carefully remove rear seat backrest (1) from the vehicle, otherwise damage may be caused to the rear door and in the entrance area. Aid of helper required.	
10	Install in the reverse order		

Rear seats

Number	Designation	Model 212
BA91.12-P-1001-03I	Nut/screw, bottom of rear backrest to body	Nm 40