


ENGINE 272, 273, 156 in MODEL 212

- 1 Weatherstrip
 2 Sidebag paneling
 3 Bracket
 3a Release button

N118 Fuel pump control unit

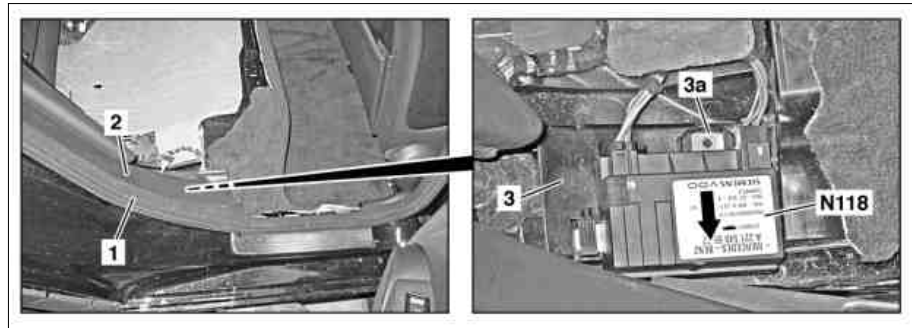

P47.40-2051-04

☒ ☒	Remove/install		
ⓘ	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Connect STAR DIAGNOSIS and read out variant coding from control unit (N118)	When replacing control unit (N118) i Installation: Transfer stored data to new control unit (N118).	
2	Remove rear seat cushion	Vehicles without Design individual rear seat system Vehicles with code (224) Design individual rear seat system	AR91.12-P-1020CW AR91.12-P-1020EW
3	Remove cover on weatherstrip (1)		
4	Detach weatherstrip (1) in the area of the control unit (N118)		
5	Unscrew nut of right sidebag trim (2) at the bottom	ⓘ Do not damage vehicle paintwork in the entry area!	
6	Pull sidebag trim (2) upwards carefully and place to one side		
7	Remove control unit (N118) in direction of arrow from bracket (3)	i Press release button (3a) downwards.	
8	Unlock electrical connectors at control unit (N118) and disconnect		
9	Install in the reverse order		
⚠ Danger!	Risk of accident caused by vehicle starting off by itself when engine is running. Risk of injury caused by contusions and burns during starting procedure or when working near the engine as it is running Carry out engine test run	Secure vehicle to prevent it from moving by itself. Wear closed and snug-fitting work clothes. Do not touch hot or rotating parts.	AS00.00-Z-0005-01A
10			