


ENGINE 271, 272, 273, 274 in MODEL 212

ENGINE 274 in MODEL 218

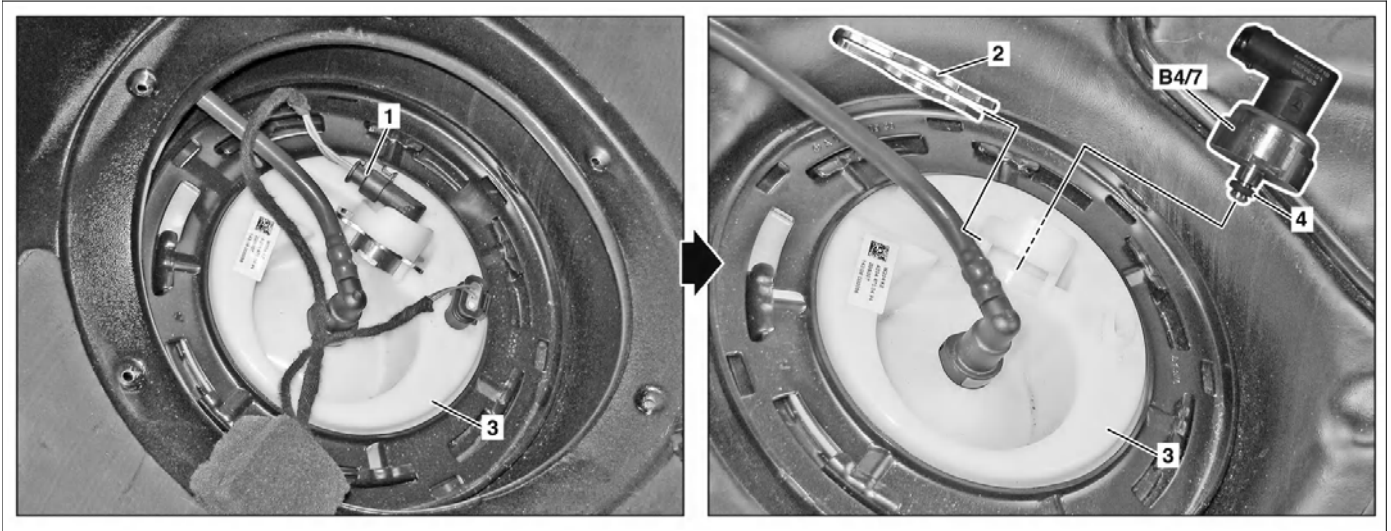

P07.04-2567-08

Shown on MODEL 212.003

1 Electrical connection
2 Clamp3 Fuel filter
4 O-ring

B4/7 Fuel pressure sensor

Danger!	Risk of explosion caused by fuel igniting, risk of poisoning caused by inhaling and swallowing fuel as well as risk of injury to eyes and skin caused by contact with fuel.	No fires, sparks, open flames or smoking. Pour fuels into suitable and appropriately marked containers only. Wear protective clothing when handling fuel.	AS47.00-Z-0001-01A
	Notes on avoiding damage through contamination and foreign objects		AH00.00-P-5000-01A
	Remove/install		
1	Switch off ignition and remove transmitter key		
2	Unscrew fuel filler flap, unscrew tank lid and close them again	in order to relieve pressure in the fuel tank.	
3	Remove seat cushion in the rear	ENGINE 274 in MODEL 218.9 ENGINE 274 in MODEL 218.3 ENGINE 271, 272, 273, 274 in MODEL 212 without CODE 224 (Rear individual seat design) ENGINE 271, 272, 273, 274 in MODEL 212 with CODE 224 (Rear individual seat design)	AR91.12-P-1020ELX AR91.12-P-1020EL AR91.12-P-1020CW AR91.12-P-1020EW
4	Remove cover for the left service opening	Installation: Carry out leak test before installing the cover. Screw/bolt, cover to vehicle floor	AR47.10-P-4100-02EW *BA47.10-P-1005-01M
5	Release and disconnect electrical connection (1) on pressure sensor (B4/7)		
6	Pry out clamp (2) with screwdriver in direction of vehicle front		
7	Pull fuel pressure sensor (B4/7) out of fuel filter (3)	Installation: Replace O-ring (4) and apply lubricant paste. Antifriction paste, rubber parts 2.5 kg, DBL 6867.00	*BR00.45-Z-1002-06A
8	Install in the reverse order		
Danger!	Risk of accident from vehicle starting off by itself when engine running. Risk of injury (bruises and burns) resulting from working on the engine while it is being started or when it is running.	Secure vehicle to prevent it from starting off by itself. Wear closed and snug-fitting work clothes. Do not touch hot or rotating parts.	AS00.00-Z-0005-01A
9	Start engine and check fuel system for leaktightness		

Nm Fuel tank

Number	Designation		MODEL 212	MODEL 218
BA47.10-P-1005-01M	Screw/bolt, cover to vehicle floor	Nm	3	3

Repair materials

Number	Designation	Order number
BR00.45-Z-1002-06A	Antifriction paste, rubber parts 2.5 kg, DBL 6867.00	A 000 989 01 60