


MODEL 218.9

MODEL 212.2



without CODE 224 (Rear individual seat design)

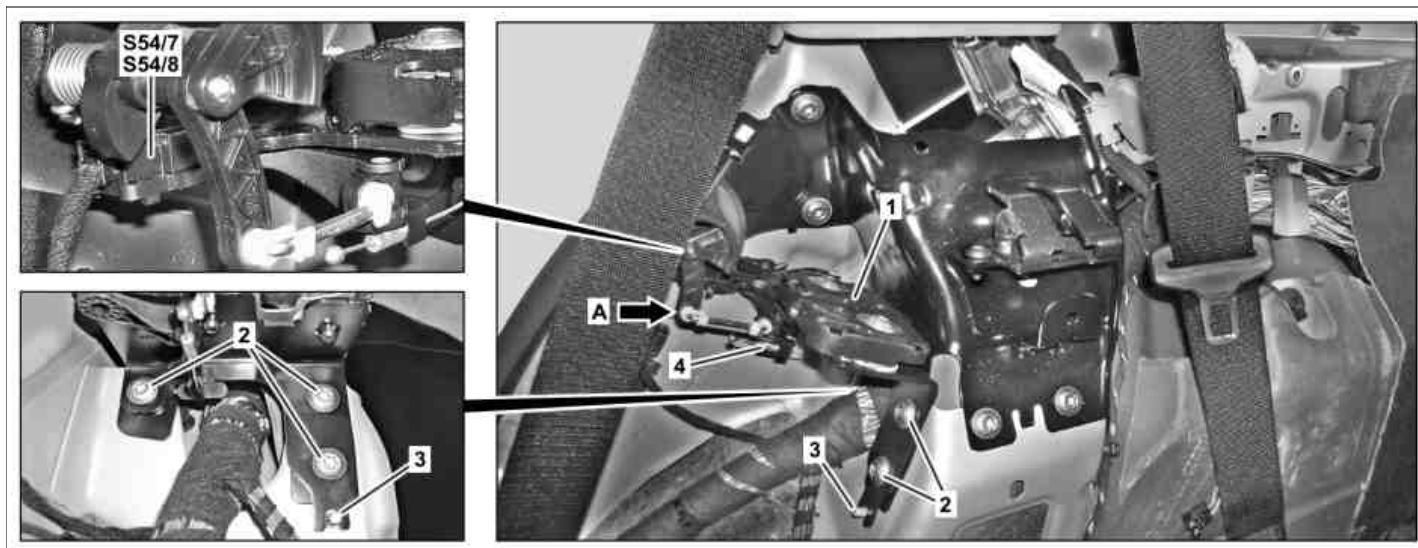

P91.12-3483-08

Shown on model 212.2 at right

1	Lock	3	Guide bolts	S 54/7	Left rear backrest lock switch
2	Screw	4	Cable	S 54/8	Right rear backrest lock switch

 	Remove/install		
1	Remove rear seat cushion	MODEL 212.2 without CODE 224 (Rear individual seat design)	AR91.12-P-1020CW
		MODEL 218.9	AR91.12-P-1020ELX
2.1	Remove left and right side bolster	MODEL 212.2 without CODE 224 (Rear individual seat design)	
		i The release handle of the rear backrest is screwed to the body and remains in the vehicle.	
2.2	Remove trim at C-pillar at bottom right or left	MODEL 218.9	AR68.30-P-4490ELX
3	Remove left or right side cargo area interior trim	MODEL 212.2 without CODE 224 (Rear individual seat design)	AR68.30-P-1180ES
		MODEL 218.9	AR68.30-P-1180ELX
4	Remove D-pillar panel	MODEL 212.2 without CODE 224 (Rear individual seat design)	AR68.30-P-4495ES
		MODEL 218.9	AR68.30-P-4495ELX
5	Unhook cable (4) at release handle on D-pillar		
6	Unhook actuator rod at retaining bracket (arrow A)	MODEL 212.2 without CODE 224 (Rear individual seat design)	

7	Disconnect left rear backrest lock switch electrical connector (S54/7) or right rear backrest lock switch electrical connector (S54/8) from lock (1)		
8	Remove screws/bolts (2) from lock (1)	i Installation: Ensure that lock (1) is positioned correctly in guide pin (3) Nm Bolt, mounting console	*BA91.40-P-1016-01Q
9	Remove lock (1) with cable (2)		
10	Install in the reverse order		

Nm **Seat belts/emergency tensioning retractors**

Number	Designation		MODEL 212.2	MODEL 218.9
BA91.40-P-1016-01Q	Bolt, mounting console	Nm	23	23