


MODEL 212.0/1
 MODEL 212.2

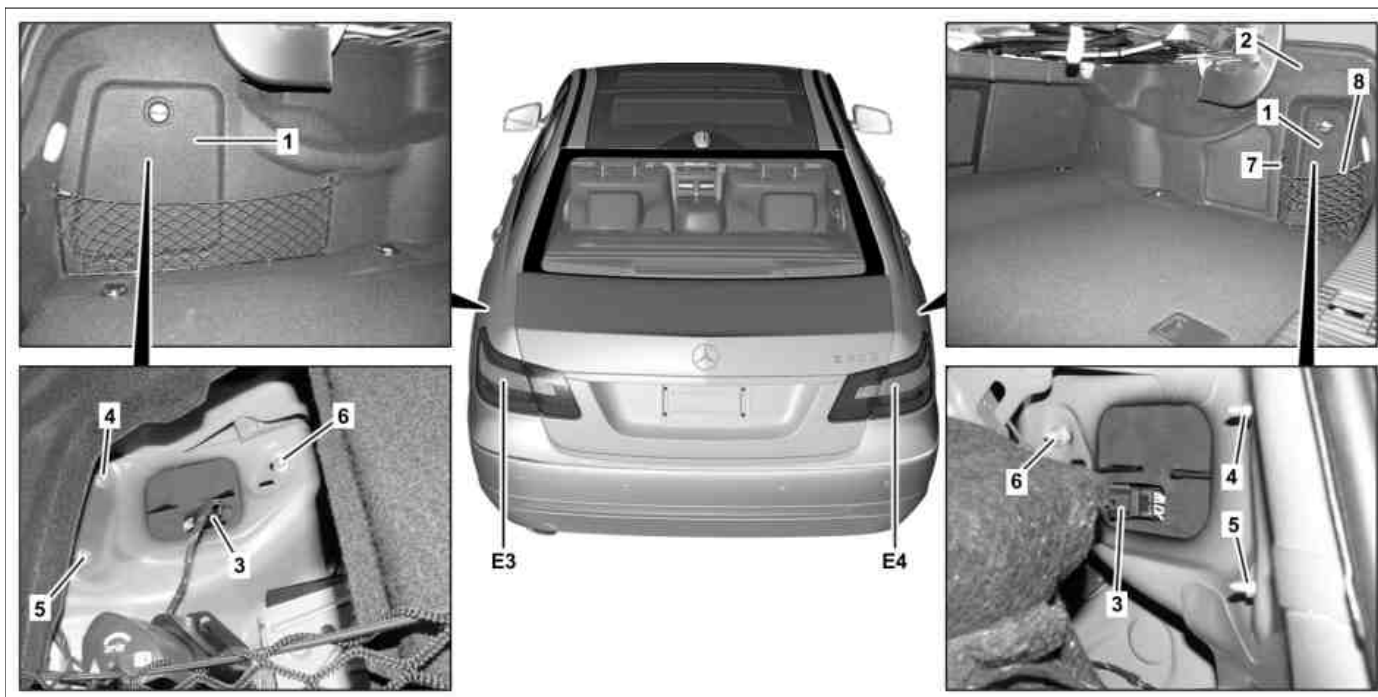

P82.10-5776-09

Shown on model 212.0

- | | | |
|------------------------|---------------|-------------------------|
| 1 Service flap | 5 Nut | E3 Left rear lamp unit |
| 2 Right side paneling | 6 Nut | E4 Right rear lamp unit |
| 3 Electrical connector | 7 Bracket | |
| 4 Nut | 8 Luggage net | |

	Danger !	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
		Notes on sensor system for trunk lid opening/closing		AH80.61-P-0001-01A
		Remove/install		
1		Open left or right service flap (1)		
2		Unhook bracket (7) from luggage net (8) from right side paneling (2)	MODEL 212.0/1 When removing right rear lamp unit (E4)	
3		Lift right side paneling (2) to one side until nuts (4, 5, 6) are accessible	MODEL 212.0/1 When removing right rear lamp unit (E4)	
4		Disconnect electrical connector (3) from left rear lamp unit (E3) or right rear lamp unit (E4)	MODEL 212.0/1	
5		Detach soundproofing under left or right service flap (1)	MODEL 212.2	
6		Remove foam material above nut (4) and stop plug above nut (5)	Until nuts (4, 5, 6) are accessible. MODEL 212.2	
7		Unscrew nuts (4, 5, 6)	Installation: To ensure that left rear lamp unit (E3) or right rear lamp unit (E4) is seated correctly, the nuts (4, 5, 6) must be tightened in the following tightening sequence: 1. Nut (4) 2. Nut (5) 3. Nut (6)	
8		Detach left rear lamp unit (E3) or right rear lamp unit (E4) and disconnect electrical connector (3)	MODEL 212.2	

9	Remove left rear lamp unit (E3) and right rear lamp unit (E4)		
10	Install in the reverse order		