


P91.12-3492-01



P91.12-3493-01

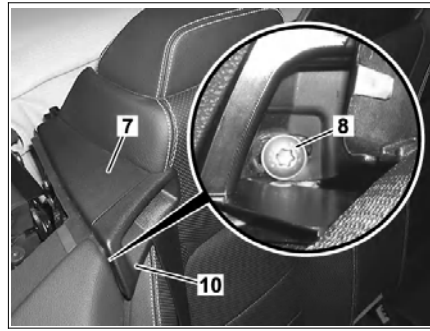


P91.12-3497-01

- 1 Clip
- 2 Panel
- 3 Rear seat backrest
- 4 Bow
- 5 Hook
- 6 Bracket
- 9 Screw

- 7 Cover
- 8 Screw

- 9 Screw
- 10 Seat belt cover

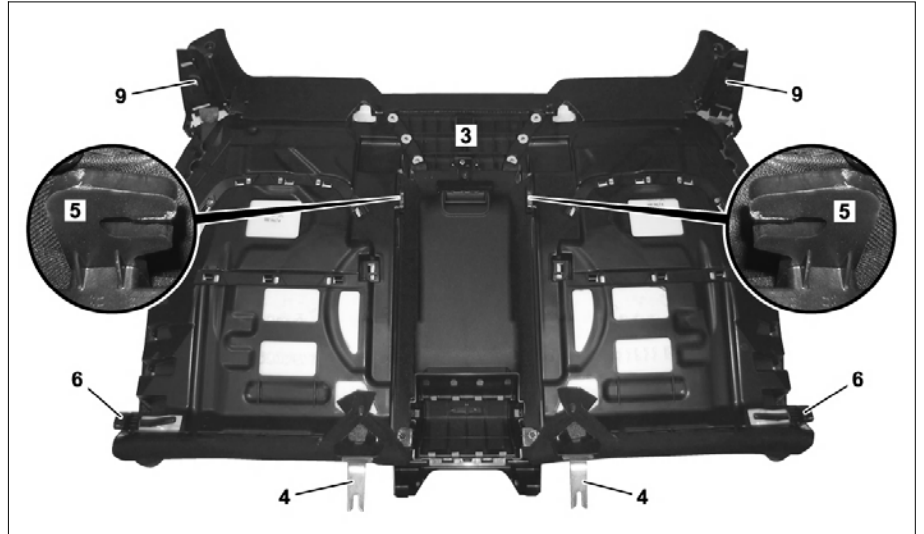

P91.10-3513-05

	<b>Risk of injury</b> caused by moving parts that can <b>pinch, crush</b> or, in extreme cases, even <b>sever</b> extremities	No parts of the body or limbs should be within the operating range of the mechanism when moving components.	AS00.00-Z-0009-01A
1	Open soft top	<b>i</b> Lower soft top and leave soft top compartment cover upright.	
2	Remove rear seat cushion		AR91.12-P-1020EC
3	Unscrew bolt on belt end fitting of seat belt	<b>i</b> <b>Installation:</b> Pay attention to correct seat belt routing.	AR91.40-P-0681ECA
4	Remove clip (1) and remove cover (2) upward		
5	Unclip seat belt cover (10)		
6	Remove screw/bolt (8) and unclip cover (7) from seat belt guide		
7	Remove screw/bolt (9) from rear seat backrest (3)		
8	Loosen nut from bracket (4)	<b>i</b> Nut remains in vehicle.	
9	Unclip bracket (6) of rear seat backrest (3) from side paneling		
10	Carefully extend rear seat backrest (3) upward and lift out of vehicle	<b>i</b> <b>Installation:</b> Ensure that hook (5) is seated correctly in rear panel.	
11	Install in the reverse order		