


MODEL 207, 212, 218

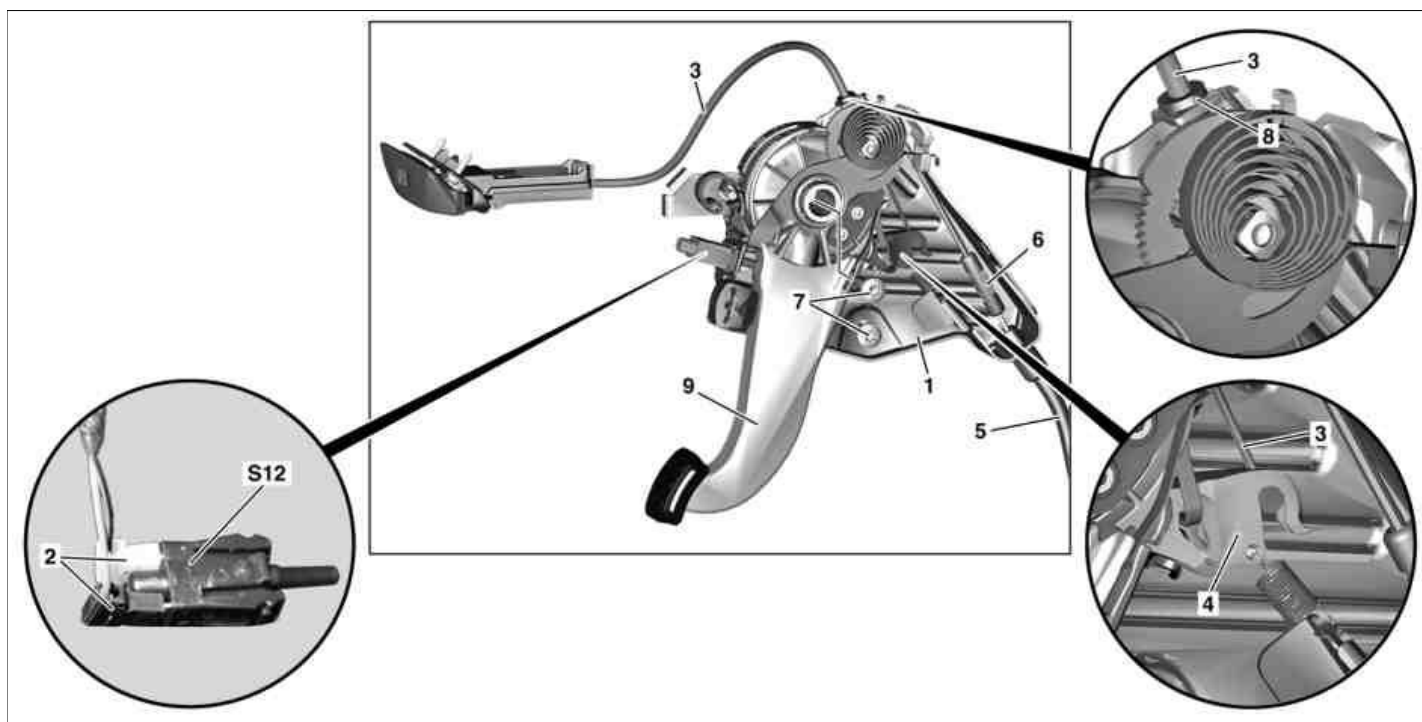

P42.20-2365-09

1 Parking brake pedal assembly

2 Electrical connector

3 Release cable

4 Support lug

5 Front brake cable

6 Separation point

7 Screw

8 Retaining clip

9 Parking brake pedal


S12 Parking brake indicator switch

	Remove/install		
	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
1	Secure vehicle to prevent it rolling away and release parking brake		
2	Remove left cover below dashboard		
3	Detach cover of parking brake pedal assembly (1)		
4	Disconnect electrical connectors (2) at parking brake indicator switch (S12)		
5	Unhook release cable (3) from support lug (4)		
6	Press separating point (6) down using assembly tool and detach front brake cable (5)	Do not unhook front brake cable (5) with pliers as otherwise the rubber guard may be damaged. Assembly tool	*204589001600
7	Remove bolts (7)		*BA42.20-P-1001-01L
8	Detach front brake cable (5) from parking brake pedal assembly (1)	Snap-release tool	*129589116300
9	Unclip retaining clip (8) for release cable (3) and remove parking brake pedal assembly (1)		
10	Remove parking brake indicator switch (S12)	When replacing the parking brake pedal assembly (1).	
11	Install in the reverse order		
12	Operate parking brake pedal (9) several times in succession		
	Checking		
13	Check pedal travel on parking brake pedal (9)	If necessary: ↓ Adjusting parking brake.	AR42.20-P-0540EW

Parking brake


Number	Designation	Model 207	Model 212	Model 218

BA42.20-P-1001-01L	Bolt, foot-operated parking brake pedal assembly at front wall pillar	Nm	17	17

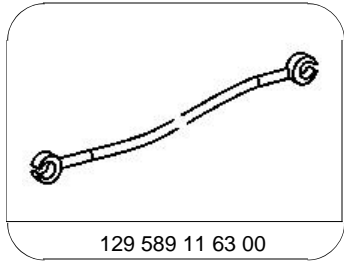

129 589 11 63 00

Snap-release tool

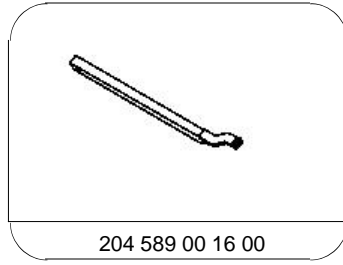

204 589 00 16 00

Assembly tool