
**MODEL 212.0** 

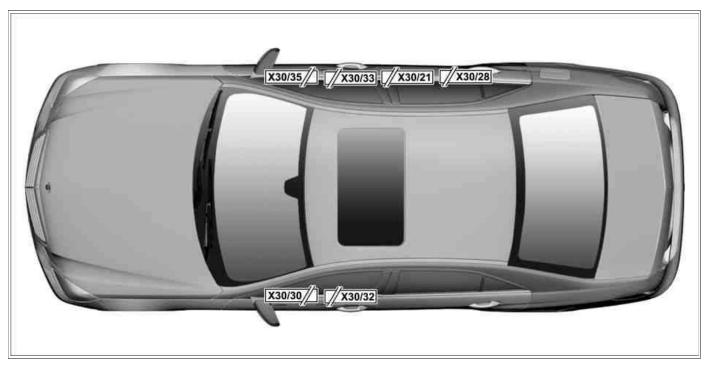

P00.19-4422-09

#### Shown on model 212.0

X30/21 X30/28	Drive train CAN voltage distributor electrical connector Vehicle dynamics CAN voltage	X30/30	Vehicle floor chassis CAN voltage distributor electrical connector	X30/33	Right vehicle floor interior CAN voltage distributor electrical connector
	distributor electrical connector	X30/32	Left vehicle floor interior CAN voltage distributor electrical connector	X30/35	Telematics CAN voltage distributor electrical connector

#### **CAN** hub assignment

- Drive train CAN voltage distributor electrical connector
- Vehicle dynamics CAN voltage distributor electrical connector
- Vehicle floor chassis CAN voltage distributor electrical connector
- Left vehicle floor interior CAN voltage distributor electrical connector
- Right vehicle floor interior CAN voltage distributor electrical connector
- Telematics CAN voltage distributor electrical connector

### Drive train CAN voltage distributor electrical connector

- Front SAM control unit with fuse and relay module (N10/1)
- CDI control unit (N3/9) (on diesel engine)
- ME-SFI [ME] control unit (N3/10) (on gasoline engine)
- Intelligent servo module for DIRECT SELECT (A80) (with transmission 722.9)

- Electronic transmission-control control unit (N15/3) (on transmission 722.6)
- Electronic selector lever module control unit (N15/5) (with transmission 722)
- Fuel pump control unit (N118)
- Right footwell ground point (W15/1)
- Fully integrated transmission control unit (Y3/8n4) (with transmission 722.9)

#### Vehicle dynamics CAN voltage distributor electrical connector

- DISTRONIC electric controller unit (A89) (with code (233) DISTRONIC PLUS)
- Yaw rate sensor for lateral and longitudinal acceleration (B24/15) (with code (233) DISTRONIC PLUS)
   Premium Electronic Stability Program control unit (N30/7) (with code (233) DISTRONIC PLUS)
- Radar sensors control unit (N62/1)
   (with code (233) DISTRONIC PLUS or code (234) Blind Spot
   Assist)

# Vehicle floor chassis CAN voltage distributor electrical connector

- Instrument cluster (A1)
- Multifunction camera (A40/11)
   (with code (476) Automatic Lane Detection or code (513) Speed Limit Assist or code (608) Adaptive Highbeam Assist)
- Left front reversible emergency tensioning retractor (A76)
- Right front reversible emergency tensioning retractor (A76/1)
- Supplemental restraint system control unit (N2/10)
- CDI control unit
- ME-SFI [ME] control unit
- Front SAM control unit with fuse and relay module
- Electronic transmission-control control unit
- Electronic Stability Program control unit (without code (233) DISTRONIC PLUS) or Premium Electronic Stability Program control unit

- PARKTRONIC control unit (N62)
   (with code (230) Exclusive parking assist without code (498)
   Japan version, with code (220) PARKTRONIC and code (498)

   Japan version)
- Radar sensors control unit
- Electronic ignition lock control unit (N73)
- Steering column module control unit (N80)
- Tire pressure monitoring control unit (N88)
   (with code (475) Tire pressure monitor (Premium))
- Night View Assist control unit (N101) (with code (610) Night View Assist)
- Left footwell ground point (W15/2)

------

# Left vehicle floor interior CAN voltage distributor electrical connector

- Instrument cluster
- Front SAM control unit with fuse and relay module
- Automatic air conditioning control and operating unit (N22/7)
- Driver seat control unit (N32/1) (with code (275) Memory package for electrically adjustable front seats)
- Control unit for trunk lid control (N121) (with code 881) Remote trunk closing (HDFS))
- Panoramic sliding roof control module (A98) (with code (413) Panoramic glass sunroof with top sliding sunroof)
- Steering wheel heater function (N25/7) (with code (443) Steering wheel heater)
- Pneumatic pump for dynamic multicontour seat (M40/1) (with code (432) Dynamic multicontour seat, left and right)

- Reversing camera control unit (N66/2) (with code (218) Reversing camera and code (498) Japan version)
- Trailer recognition control unit (N28/1) (for code (550) Trailer hitch)
- Left front dynamic multicontour seat control unit (N32/19) (with code (432) Dynamic multicontour seat, left and right)
- Left front door control unit (N69/1)
- Left rear door control unit (N69/3)
- Overhead control panel control unit (N70) (with code (414) Power glass tilting/sliding sunroof)
- Electronic ignition switch control unit
- Left front footwell ground point
- Right vehicle floor interior CAN voltage distributor electrical connector

# Right vehicle floor interior CAN voltage distributor electrical connector

- Radio (A2) (with code (510) Audio 20 with CD changer or with code (523) MB Audio 20 radio)
- Radio with auto pilot system (A2/56) (with code (511) Audio 50 APS with DVD changer or with code (525) MB Audio 50 APS radio)
- Stationary heater control unit (A6n1) (with code (228) Stationary heater)
- COMAND controller unit (A40/3)
   (with code (512) COMAND APS with DVD changer or with code (527) COMAND APS with single DVD drive (with navigation) or with code (528) COMAND incl. DVD changer)
- Rear SAM control unit with fuse and relay module (N10/2)

 Rear seat heater control unit (N25/6) (with code (872) Electric seat heater for left and right rear seat)

 Special-purpose vehicle multifunction control unit (N26/9) (with code (965) Electrical preinstallation for rental vehicles)

 Front passenger seat control unit (N32/2) (with code (275) Memory package for electrically adjustable front seats)

- Right front dynamic multicontour seat control unit (N32/22) (with code (432) Dynamic multicontour seat, left and right)
- Right front door control unit (N69/2)
- Right rear door control unit (N69/4)
- Keyless-Go control unit (N69/5) (with code (889) Keyless-Go)
- WSS (Weight Sensing System) control unit (N110) (with code (494) USA version)
- Left vehicle floor interior CAN voltage distributor electrical connector

### Telematics CAN voltage distributor electrical connector

- Radio
- Radio with auto pilot system
- COMAND control unit
- DVD player

(with code (864) Rear entertainment system)

- Left rear display (A40/5) (with code (864) Rear entertainment system)
- Right rear display (A40/6)
   (with code (864) Rear entertainment system)

- Audio/COMAND display (A40/8)
- Audio/COMAND control panel (A40/9)
- TV tuner (analog/digital) (A90/1) (with code (863) Digital/analog TV tuner)
- TV digital tuner (A90/3) (with code (527) COMAND APS with single DVD drive (with navigation) and code (498) Japan version)
- Left front footwell ground point (CAN) (W15/5)

₽E	Wiring diagram of drive train CAN	Potential distributor X30/21	PE00.19-P-2170-99DAA
<b>₽</b> PE	Wiring diagram of vehicle dynamics CAN	Potential distributor X30/28	PE00.19-P-2190-99DAA
<b>⊯</b> PE	Wiring diagram of chassis CAN	Potential distributor X30/30	PE00.19-P-2195-99DAA
₽PE	Wiring diagram of interior CAN	Potential distributor X30/32	PE00.19-P-2185-99DAA
		Potential distributor X30/33	PE00.19-P-2185-99DAB
<b>⊯</b> PE	Wiring diagram of telematics CAN	Potential distributor X30/35	PE00.19-P-2180-99DAA