


MODEL 204.0 /2 /9, 212, 218

Rear control and operating unit

Shown on model 204

- 1 Air vent
 2 Catch hook
 3 Catch hook

N22/4 Rear automatic air conditioning
 operating unit

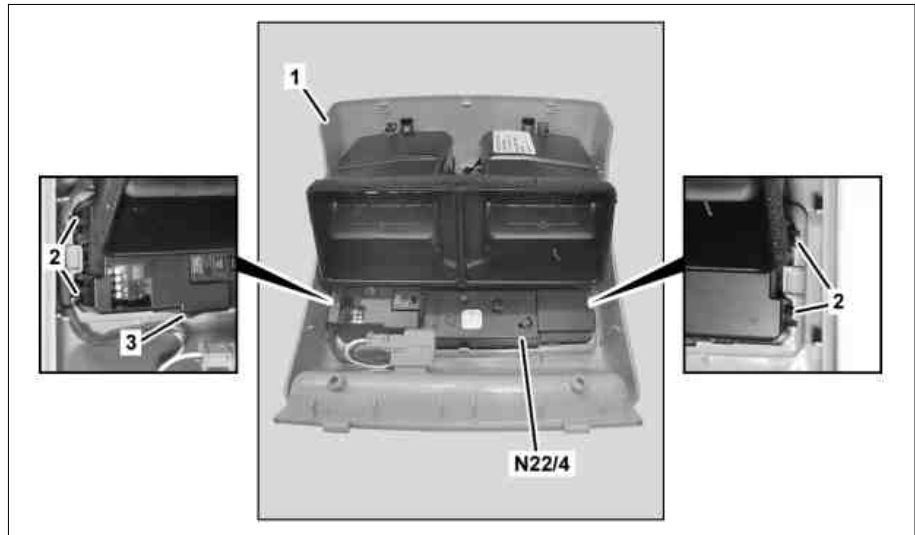

P83.40-3907-05

☒ ☒	Remove/install		
⚠	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove rear air nozzle (1)	Model 204, 212 Model 218.3	AR83.10-P-4800CW AR83.10-P-4800EL
2	Unclip rear automatic air conditioning operating unit (N22/4) from catch hooks (2) and detach at air vent (1)		
3	Unclip rear automatic air conditioning operating unit (N22/4) from catch hooks (3) and remove from air vent (1)		
4	Install in the reverse order		