



P09.00-2056-07

- 1 Hose  
2 Centrifuge cover  
3 Retaining clamp  
4 Air duct housing

- 4a Notch  
4b Notch  
5 Gasket

- B2/5 Hot film mass air flow sensor  
M16/6 Throttle valve actuator

- A CLIC clamp

☒ ☒	Remove/install		
ⓘ	Notes on avoiding damage through contamination and foreign objects		AH00.00-P-5000-01A
1	Remove air filter housing		AR09.10-P-1150EWS
2	Remove hot film mass air flow sensor (B2/5)		AR07.07-P-1453EW
3	Detach hose (1) at centrifuge cover (2)		
4	Detach retaining clamp (3) on electric wiring harness from air duct housing (4)		
5	Push notch (4a) downwards and swing away air duct housing (4) below from throttle valve actuator (M16/6)		
6	Raise notch (4b) and remove air duct housing (4) from throttle valve actuator (M16/6)		
7	Detach hose (1) at air duct housing (4)	Only when replacing air duct housing (4)	
8	Check seals (5) and replace if necessary		
9	Install in the reverse order		