

<b>Item</b>	<b>Designation</b>	<b>Coordinates</b>
<b><u>A0</u></b>	Color code key	113L
<b><u>Code 4U7</u></b>	Start/stop voltage dip protection	1G
<b><u>Code 218</u></b>	Backup camera	15H 23H
<b><u>Code B03</u></b>	ECO start/stop function	1G 8G
<b><u>E3</u></b>	Left rear lamp unit	41L 51L 77L 88L
<b><u>E3/1</u></b>	Inner left rear lamp unit	21L 33L 61L 68L
<b><u>E3/1e2</u></b>	Left inside taillight	22L 34L 63L 70L
<b><u>E3/1e3</u></b>	Left backup lamp	21L 33L 61L 69L
<b><u>E3/1e4</u></b>	Inner left stop lamp and taillamp	22L 34L 62L 70L
<b><u>E3/1e5</u></b>	Left rear fog lamp	21L 33L 62L 69L
<b><u>E3/1e6</u></b>	Inner left background light	22L 34L 62L 69L

<b>Item</b>	<b>Designation</b>	<b>Coordinates</b>
<b><u>E3e1</u></b>	Left rear turn signal lamp	43L 50L 79L 87L
<b><u>E3e6</u></b>	Left side-marker lamp	42L 50L 78L 86L
<b><u>E3e11</u></b>	Outer left brake light and taillight	43L 51L 79L 87L
<b><u>E3e15</u></b>	Outer left background light	43L 50L 78L 86L
<b><u>E4</u></b>	Right rear lamp unit	57L 94L
<b><u>E4/1</u></b>	Inner right rear lamp unit	38L 73L
<b><u>E4/1e2</u></b>	Right inside taillight	40L 76L
<b><u>E4/1e3</u></b>	Right backup lamp	39L 74L
<b><u>E4/1e4</u></b>	Inner right brake light and taillight	40L 75L
<b><u>E4/1e5</u></b>	Right rear fog lamp	39L 75L
<b><u>E4/1e6</u></b>	Inner right background light	39L 75L
<b><u>E4e1</u></b>	Right rear turn signal lamp	55L 91L
<b><u>E4e6</u></b>	Right side-marker lamp	55L

Item	Designation	Coordinates
<u>E4e11</u>	Outer right brake light and taillight	92L 54L 91L
<u>E4e15</u>	Outer right background light	56L 93L
<u>E19/1</u>	Left license plate lamp	103L 98L
<u>E19/2</u>	Right license plate lamp	105L 99L
<u>E21</u>	Center stop lamp	102L 97L
<u>E21x1</u>	Center brake lamp electrical connector	102J 96J
<u>F32</u>	Front electrical prefuse box	4L
<u>F32f158</u>	Prefuse 158	2K
<u>F32f163</u>	Prefuse 163	2K
<u>F32f164</u>	Prefuse 164	6K
<u>F33</u>	Rear prefuse box	13L
<u>F33f172</u>	Prefuse 172	11K
<u>F97</u>	Rear SAM control unit with fuse and relay module circuit 30 fuse	8J
<u>N10/2</u>	Rear SAM control unit with fuse and relay module	4A 101A 12A 20A 28A 36A 44A 52A 61A 69A 77A 85A

<b>Item</b>	<b>Designation</b>	<b>Coordinates</b>
		93A
<b><u>N66/10</u></b>	Backup camera voltage supply module	17L 26L
<b><u>U54</u></b>	Valid for all except Japan	15H 23H
<b><u>U57</u></b>	Valid for model 212.2	100G 23H 36H 46H 57H 64H 72H 81H 94H
<b><u>U58</u></b>	Valid for model 212.0/1	15H 38H 41H 56H 60H 73H 76H 93H 96G
<b><u>U118</u></b>	Valid for front battery	6G
<b><u>U119</u></b>	Valid for rear battery	11G
<b><u>U240</u></b>	Valid for all except ECO start/stop function	1G 6G
<b><u>U880</u></b>	Valid for diesel engine 642	7H
<b><u>U968</u></b>	Valid for mild hybrid drive	1H
<b><u>W7</u></b>	Right rear wheel well ground point	23J 38H 56H 63J 74H

Item	Designation	Coordinates
		93H 97G 99G
<u>W7/1</u>	Right taillamp trunk ground point	41H 77H
<u>W48</u>	Left rear roof frame ground point	53L 89L
<u>X8/45</u>	Left vehicle interior and tailgate electrical connector	26J
<u>X8/47</u>	Left and right liftgate electrical connector	29J 47J 64J 66J 82J 83J
<u>Z6/1z2</u>	Circuit 31 connector sleeve	35J 71J
<u>Z6/1z4</u>	Circuit 31 connector sleeve	52J 89J
<u>Z6/1z6</u>	Circuit 31 connector sleeve	101H 104H
<u>Z6/1z7</u>	Circuit 31 connector sleeve	37H 72H
<u>Z6/1z8</u>	Circuit 31 connector sleeve	58H 94H
<u>Z38</u>	Backup lamp connector sleeve	20L 32L 60L