


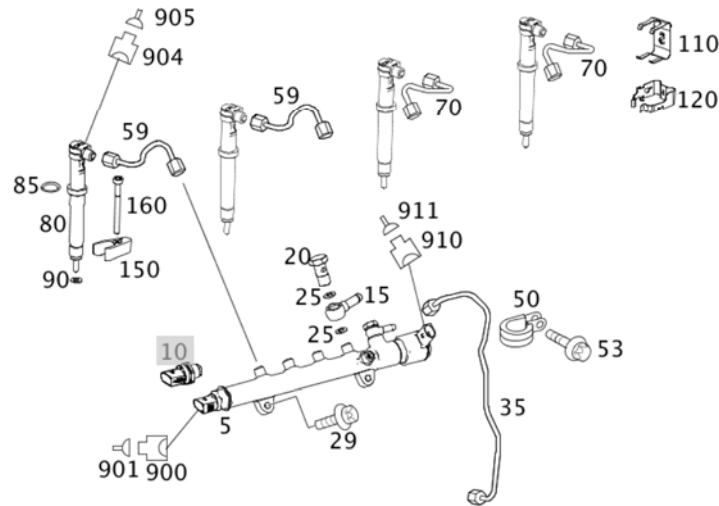













- Parts list -










Mode	BM mode	Catalog	D21
VIN/mod. des.	WDD2122021A654655	Major assembly	Chassis
VIN		Major assy. mod. des.	C212202
Assortment class	PC	Group	07 FUEL INJECTION
Market		Sub-group	105 NOZZLE HOLDER,LINES & ATTACHMENT PARTS
BM overview	E 220 CDI / D		




















Copyright 2019-10-28 Daimler AG

Image ID: drawing_B07105000065

Item	Part number	Designation/additional information	Qty
5	A 651 070 04 95	FUEL DISTRIBUTOR  Code: F090/(F204/F212)+M013+-A11/F447/F636/F639 /F900/F906/F907/064;  Plant information  Fault location 07208	1
5	A 651 070 07 00 	FUEL DISTRIBUTOR  Code: F212+B03+-A11;	1
15	A 000 078 01 33 	* BANJO UNION  Fault location 47148	1
20	N 000000 004749 	* BANJO BOLT	1
25	N 000000 006035 	* SEALING RING	2
29	A 001 990 90 22	SCREW FUEL DISTRIBUTOR AT CYLINDER HEAD	2
35	A 651 070 30 33	PRESSURE LINE FUEL DISTRIBUTOR TO HIGH PRESSURE PUMP Replaced by: A 651 070 44 33  Plant information  Fault location 07256	1
35	A 651 070 44 33	PRESSURE LINE FUEL DISTRIBUTOR TO HIGH PRESSURE PUMP Replaces: A6510703033  Fault location 07256	1
50	N 000000 006288	CLAMP ATTACHMENT DELIVERY LINE	2
53	N 910143 006001	HEXALOBULAR BOLT ATTACHMENT DELIVERY LINE; M6X16	2
59	A 651 070 24 33	PRESSURE LINE PRESSURE LINE TO DISTRIBUTOR TO CYLINDER 1 AND 2 Replaced by: A 651 070 42 33  Fault location 07283	2
59	A 651 070 42 33	PRESSURE LINE PRESSURE LINE TO DISTRIBUTOR TO CYLINDER 1 AND 2 Replaces: A6510702433  Fault location 07283	2

Item	Part number	Designation/additional information	Qty
70	A 651 070 25 33	PRESSURE LINE PRESSURE LINE TO DISTRIBUTOR TO CYLINDER 3 AND 4 Replaced by: A 651 070 43 33  Fault location 07285	2
70	A 651 070 43 33	PRESSURE LINE PRESSURE LINE TO DISTRIBUTOR TO CYLINDER 3 AND 4 Replaces: A6510702533  Fault location 07285	2
80	A 651 070 49 87 	INJECTOR FOR COMMON RAIL INJECTION NOZZLE  Code: (F090/(F204/F212)+M013/F636/F639/F900/F906/064)+-(700/790);  [697] PART IS ONLY OR ALSO SUPPLIED AS RECONDITIONED PART  Plant information  Fault location 07207  Alternative parts are available	4
85	A 022 997 60 45 	* O-RING 15.6 X 1.78  Code: B03/ME04;  [003754] ONLY VALID FOR A 651 070 04 87; A 651 070 11 87; A 651 070 12 87; A 651 070 26 87; A 651 070 27 87;  Fault location 07249	4
90	A 611 017 00 60	SEAL. RING, SPECIAL SHAPE NOZZLE TO CYLINDER HEAD. HEIGHT:; 1,56MM  [003761] WITH THE STANDARD CYLINDER HEAD, ONLY USE SEALING RING A 611 017 00 60. WITH REWORKED CYLINDER HEAD, NOTE MARKING (X) NEXT TO GLOW PLUG BORES: USE 1X=A 611 017 07 60, 2X=A 611 017 06 60, 3X=A 611 017 00 60.  Fault location 07249	4
90	A 611 017 03 60	SEALING RING NOZZLE TO CYLINDER HEAD. HEIGHT:; 1,76MM Replaced by: A 611 017 06 60  [003761] WITH THE STANDARD CYLINDER HEAD, ONLY USE SEALING RING A 611 017 00 60. WITH REWORKED CYLINDER HEAD, NOTE MARKING (X) NEXT TO GLOW PLUG BORES: USE 1X=A 611 017 07 60, 2X=A 611 017 06 60, 3X=A 611 017 00 60.	4

Item	Part number	Designation/additional information	Qty
90	A 611 017 06 60	SEALING RING NOZZLE TO CYLINDER HEAD. HEIGHT:; 1,76MM Replaces: A6110170360  [003761] WITH THE STANDARD CYLINDER HEAD, ONLY USE SEALING RING A 611 017 00 60. WITH REWORKED CYLINDER HEAD, NOTE MARKING (X) NEXT TO GLOW PLUG BORES: USE 1X=A 611 017 07 60, 2X=A 611 017 06 60, 3X=A 611 017 00 60.  Fault location 07249	4
90	A 611 017 07 60	SEALING RING NOZZLE TO CYLINDER HEAD. HEIGHT:; 1,96MM  [003761] WITH THE STANDARD CYLINDER HEAD, ONLY USE SEALING RING A 611 017 00 60. WITH REWORKED CYLINDER HEAD, NOTE MARKING (X) NEXT TO GLOW PLUG BORES: USE 1X=A 611 017 07 60, 2X=A 611 017 06 60, 3X=A 611 017 00 60.  Fault location 07249	4
110	A 651 159 50 40	BRACKET TOP  [417] IS NO LONGER DELIVERED, ORDER DELIVERY CONTENTS  Fault location 07292	1
120	A 651 159 51 40	BRACKET BOTTOM Replaced by: A 651 159 79 40  Plant information  Fault location 07292	4
120	A 651 159 79 40	BRACKET BOTTOM Replaces: A6511595140  Fault location 07292	4
120	A 651 159 52 40	BRACKET BOTTOM  Code: 064;  Fault location 07292	1
150	A 651 016 04 38	BRACKET  Code: (F090/(F204/F212)+M013/F117/F156/F176/F246 /F091/F636/F639/F900/F906/064)+-700;  Plant information  Fault location 07292	4
160	A 001 990 26 07	SPHERICAL COLLAR BOLT BRACKET TO CYLINDER HEAD; M7X79	4

Item	Part number	Designation/additional information	Qty
180	A 000 982 89 09	PROTECTIVE CAP FOR REPAIR TO CDI COMPONENTS	10
900	A 023 545 52 26	COUPLING, ELECTRICAL RAIL PRESSURE SENSOR B4/7; 3-PIN SLK2.8	1
901	A 009 545 80 26	CONTACT SOCKET RAIL PRESSURE SENSOR B4/7; 0.22-0.5 MM2 SLK2.8	NB
901	A 000 545 71 80	GASKET RAIL PRESSURE SENSOR B4/7; 1.1-2.1 MM SLK2.8	NB
904	A 052 545 38 26	PLUG HOUSING BOSCH; 2-PIN SLK2.8	1
905	A 009 545 81 26	 Code: -F156+-927+-429+-800+-801; CONTACT SOCKET BOSCH; 0.75-1.0 MM2 SLK2.8	NB
905	A 000 545 71 80	 Code: -F156+-927+-429+-800+-801; GASKET BOSCH; 1.1-2.1 MM SLK2.8	NB
910	A 052 545 39 26	 Code: -F156+-927+-429+-800+-801; CLUTCH HOUSING PRESSURE CONTROL VALVE Y74; 2-PIN COD.B;SLK2.8	1
911	A 009 545 81 26	CONTACT SOCKET PRESSURE REGULATOR VALVE SKL2.8;Y74; 0.75-1.0 MM2 SLK2.8	NB
911	A 000 545 71 80	GASKET PRESSURE REGULATOR VALVE Y74; 1.1-2.1 MM SLK2.8	NB
911	A 000 545 49 84	ADAPTER PRESSURE REGULATOR VALVE Y74	NB