

MODEL	204.0/2/3 with CODE 614 (Bi-xenon headlamp unit)
MODEL	204.0/2/3 with CODE 615 (Bi-xenon headlamps with active light function)
MODEL	204.0/2/3 with CODE 616 (Bi-xenon headlamp unit with integrated asymmetric curve illumination)
MODEL	204.0/2/3 with CODE 618 (Bi-xenon headlamps)
MODEL	204.0/2/3 with CODE 621 (Intelligent Light System (left-hand traffic))
MODEL	204.0/2/3 with CODE 622 (Intelligent Light System)
MODEL	204.9 with CODE 614 (Bi-xenon headlamp unit)
MODEL	204.9 with CODE 615 (Bi-xenon headlamps with active light function)
MODEL	204.9 with CODE 616 (Bi-xenon headlamp unit with integrated asymmetric curve illumination)
MODEL	204.9 with CODE 621 (Intelligent Light System (left-hand traffic))
MODEL	204.9 with CODE 622 (Intelligent Light System)
MODEL	207, 212 with CODE 615 (Bi-xenon headlamps with active light function)
MODEL	207, 212 with CODE 616 (Bi-xenon headlamp unit with integrated asymmetric curve illumination)
MODEL	207, 212 with CODE 621 (Intelligent Light System (left-hand traffic))
MODEL	207, 212 with CODE 622 (Intelligent Light System)
MODEL	207, 212 with CODE 640 (Headlamps, LED, dynamic, SAE, right-side traffic)
MODEL	207, 212 with CODE 641 (Headlamps, LED, dynamic, left-side traffic)
MODEL	207, 212 with CODE 642 (Headlamps, LED, dynamic, right-side traffic)
MODEL	218




P82.10-5513-07

Shown on model 204.0

1	Lever	3	Bracket
2	Nut	B22/8	Left front level sensor

Shown on model 212

- 1 Lever
- 2 Nut
- 3 Bracket
- 4 Mounting clip (MODEL 212, 218)
- 5 Cross strut (MODEL 212, 218)
- B22/8 Left front level sensor

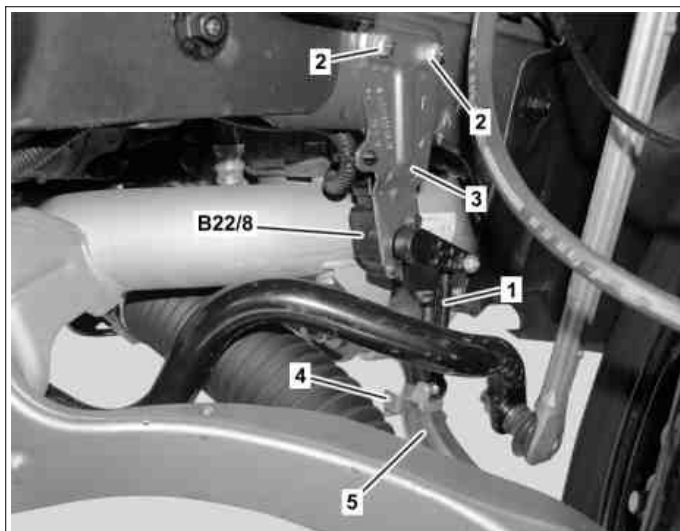

P82.10-5688-11

ⓘ	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
↕ ↕	Remove/install		
	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between vehicle lift columns and position the four support plates at the vehicle lift support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
1	Lift vehicle on vehicle lift		
2	Push left fender liner front section to one side in area of left front level sensor (B22/8)	Model 204.9	
3	Unclip electrical wiring harness from bracket (3)		
4	Disconnect electrical connection from left front level sensor (B22/8).		
5.1	Unclip lever (1) at torsion bar	MODEL 204.0/2/3, 207	
5.2	Unclip lever (1) at strut rod	Model 204.9	
5.3	Unclip mounting clip (4) at lever (1) of cross strut (5)	MODEL 212, 218	
6	Unscrew nuts (2)		
7	Remove bracket (3) with left front level sensor (B22/8)		
8	Remove lever (1) from left front level sensor (B22/8)	Model 204.9 When replacing left front level sensor (B22/8).	
9	Install in the reverse order		
10	Connect diagnostic system, read out fault memory and adjust zero position of headlamps		
↔ AD			AD00.00-P-2000-04A
11	Check headlamp setting and correct if necessary	MODEL 204 MODEL 207, 212, 218	AP82.10-P-8260CW AP82.10-P-8260EW
↔ AP			
↔ AP			