


**MODEL 204 as of 1.6.10**  
**MODEL 207 as of 1.6.10**  
**MODEL 212 as of 1.6.10**  
**MODEL 218**

**Illustrated on model 218.3**

- 2 Electrical connector
- 3 Markings
- 4 Cable tie
- 5 Electrical connector

A32 AC housing  
A32m1 Blower motor

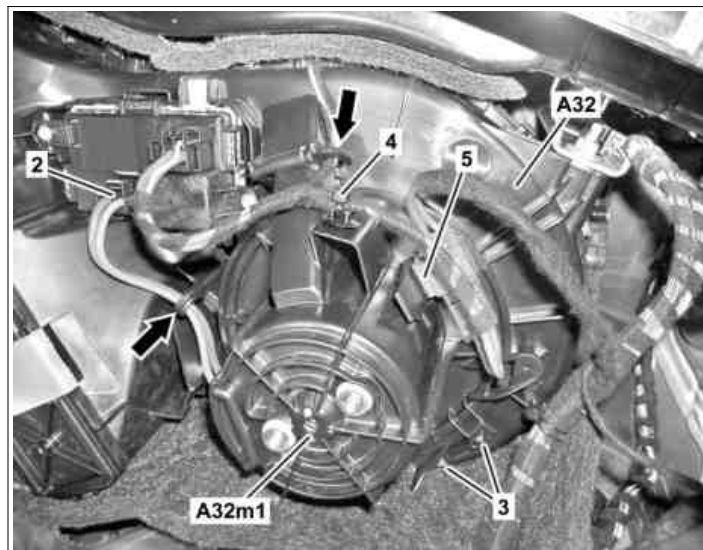

P83.10-2765-11

**Shown on model 204.2**

- 1 Tab



P83.30-4796-01

**Modification notes**

15.2.12	Remove glove box, added	Step 1.2	
---------	-------------------------	----------	--

		<b>Remove/install</b>	
ⓘ		Information on preventing damage to electronic components due to electrostatic discharge	AH54.00-P-0001-01A
1.1		Remove cover on right under the dashboard	Model 204.9, 207, 212 Model 218 AR68.10-P-1520CW
1.2		Remove glove box	Model 204.0/2/3 AR68.10-P-1200CW
2		Disconnect electrical connector (2)	
3		Unclip electrical connector (5) from blower motor (A32m1)	
4		Detach cable tie (4) from electrical line	
5		Unhook electrical line from retaining tab (arrow) of blower motor (A32m1)	
6		Release shackle (1)	ⓘ Press shackle lightly downwards.
7		Twist blower motor (A32m1) until markings (3) match. This unlocks the bayonet connection.	ⓘ The rotation arrow between the two markings (3) designates the rotation direction when installing the blower motor (A32m1).
8		Remove blower motor (A32m1) from air conditioning housing (A32) and remove downward from instrument panel.	ⓘ The narrow space makes it difficult to remove and install the blower motor (A32m1).

