


MODEL 204 as of 1.6.10
MODEL 207 as of 1.6.10
MODEL 212 as of 1.6.10
MODEL 218

Shown on model 218

- 2 *Electrical connector*
- 6 *Electrical connector*
- 7 *Gasket*
- 8 *Bolts*

- A32 *AC housing*
- A32n1 *Blower regulator*

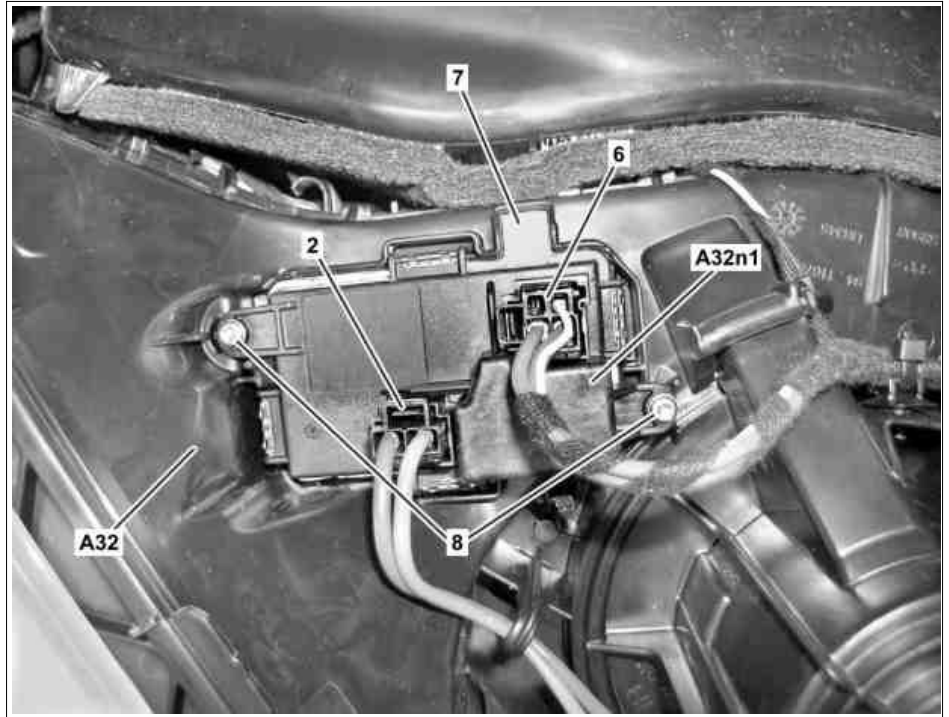

P83.10-2766-06

	Remove/install		
ⓘ	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove cover below dashboard on right	Model 204, 207, 212 Model 218	AR68.10-P-1520CW
2	Disconnect electrical connector (2, 6)		
3	Remove bolts (8)		
4	Remove blower regulator (A32n1) downwards out of air conditioner housing (A32)	i Replace seal (7), check for correct seating of seal (7).	
5	Install in the reverse order		