


**MODEL 212**  
as of model year 2014


- 1 Screw  
2 Screw  
3 Screw  
E1 Left front lamp unit  
E2 Right front lamp unit

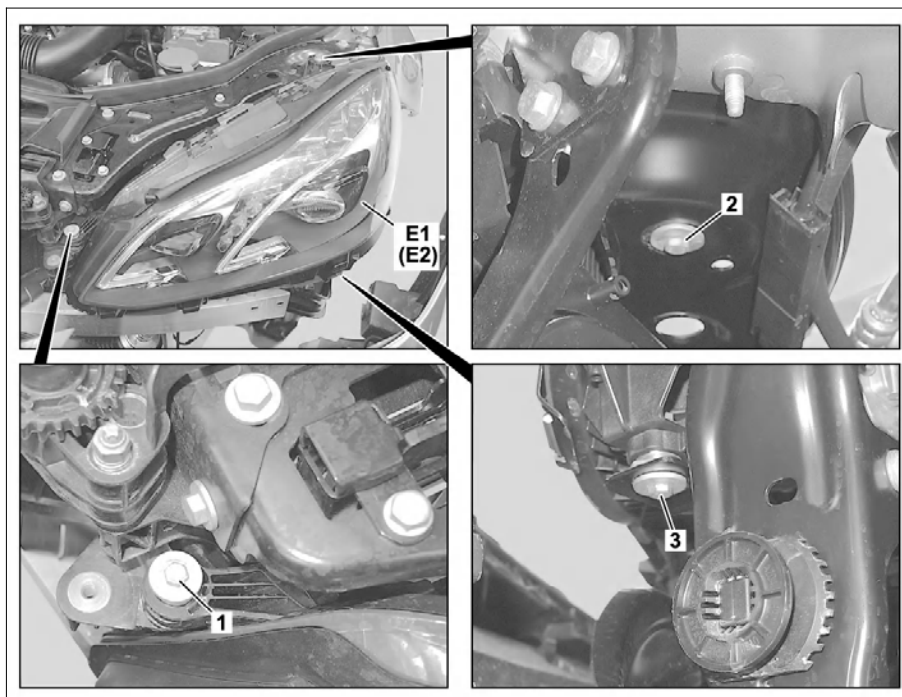

P82.10-7221-06

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	<b>Remove/install</b>		
1 	Carry out initial startup of left front lamp unit (E1) or right front lamp unit (E2) Connect STAR DIAGNOSIS and read out fault memory	When replacing the left front lamp unit (E1) or the right front lamp unit (E2).  <b>i</b> <b>Installation:</b> Note Data Matrix code on the left front lamp unit (E1) or right front lamp unit (E2).	AD00.00-P-2000-04A
2	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit		
3.1	Detach front bumper	When removing left front lamp unit (E1) or right front lamp unit (E2).	AR88.20-P-2000EWM
3.2	Remove front bumper	When removing left front lamp unit (E1) and right front lamp unit (E2).	AR88.20-P-2000EWM
4	Remove screws (1, 2, 3)	<b>i</b> <b>Installation:</b> Only screw in screws/bolts (1, 2, 3) until they make contact, as it may be necessary to check and adjust the gap dimensions after front bumper installation. Gap dimension Feeler gauge	*BE60.00-P-1006-01U *129589032100
5	Disconnect electrical connector from left front lamp unit (E1) or right front lamp unit (E2)		
6	Remove left front lamp unit (E1) or right front lamp unit (E2)		



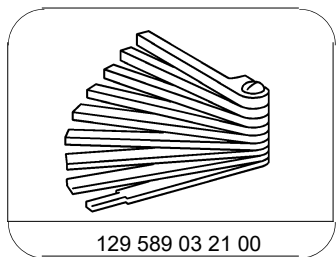

129 589 03 21 00

Feeler gauge