



P82.62-3490-09

- | | | | | | |
|---|---|---|---------|-------|-------------------------------------|
| 1 | Left side paneling | 4 | Nuts | N40/3 | Sound system amplifier control unit |
| 2 | Electrical connector | 5 | Bracket | | |
| 3 | Electrical connector with fiber optic cable | | | | |

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Notes on avoiding damage to fiber optic cables during repair work		AH82.60-P-0001-05AK
1	Buffer basic data of sound system amplifier control unit (N40/3) in STAR DIAGNOSIS	When replacing the sound system amplifier control unit (N40/3). Installation: Transmit buffered basic data to new sound system amplifier control unit (N40/3).	
	Connect STAR DIAGNOSIS and read out fault memory		AD00.00-P-2000-04A
2	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit	KEYLESS-GO start/stop button only on vehicles with code (889) Keyless-Go.	
3	Remove left side paneling (1)		AR68.30-P-4600EW
4	Disconnect electrical connector (2)		
5	Disconnect electrical connector with fiber optic cable (3) and cover equipment connector at sound system amplifier control unit (N40/3)		
	Notes on avoiding damage to fiber optic cables during repair work	With Media Oriented System Transport (MOST)	AH82.60-P-0001-05AK
6	Unscrew nuts (4)		
7	Remove sound system amplifier control unit (N40/3) from bracket (5)		
8	Install in the reverse order		