

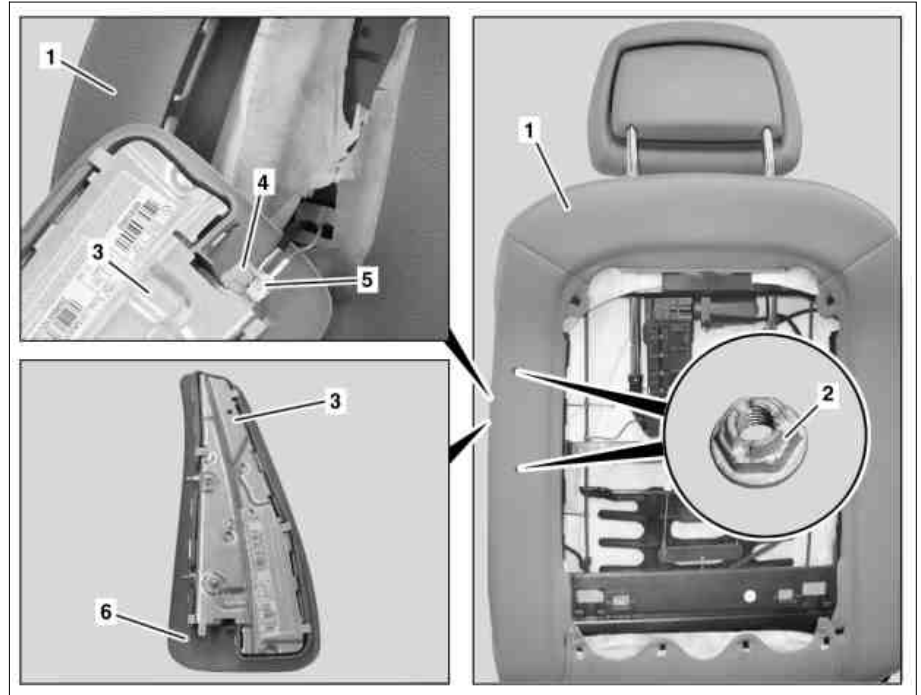
MODEL 212

MODEL 204.0 (except 204.077), 204.2 (except 204.277), 204.9






 

MODEL 218

Shown on model 204.0

- 1 Seat backrest
- 2 Nut
- 3 Sidebag unit
- 4 Electrical connector
- 5 Electrical connector
- 6 Cover



P91.60-3398-06

	Remove/install		
 Danger !	Risk of injury caused by performing testing or repair work on airbag or emergency tensioning retractor units.	Store airbag units with deployment side facing up; do not expose to temperatures greater than 100 °C. When working on these units, disconnect the power supply.	AS91.00-Z-0001-01A
	Notes on performing repair, body work and welding on vehicles with airbags and RTE units		AH91.00-P-0002-01M
	Assessment of airbag and belt tensioner units in accident vehicles		AH91.00-P-0006-01B
	Legal requirements on handling and storing airbags and emergency tensioning retractor units		AH91.00-P-0004-01A
1	Move left or right front seat forwards		
2	Adjust backrest (1) toward front.		
3	Disconnect battery ground line	MODEL 204.0 (except 204.077), 204.2 (except 204.277), 204.9 MODEL 212, 218	AR54.10-P-0003CW AR54.10-P-0003EW AR91.10-P-1910CW
4	Remove seat-back lining at backrest (1)		*BA91.60-P-1008-01M
5	Unscrew nuts (2)	 Fastener, sidebag unit to backrest frame	
6	Remove sidebag unit (3)		
7	Disconnect electrical connectors (4, 5)	 Installation: First connect electrical connector (5). To prevent inadvertent activation or malfunctions of the sidebag unit (3).	
8	Remove sidebag unit (3)		
9	Install in the reverse order		
10	Check supplemental restraint system (SRS) with STAR DIAGNOSIS	After replacing sidebag unit (3).	AD00.00-P-2000-04A

 Airbag

Number	Designation		MODEL 204.0/2/9	MODEL 212
BA91.60-P-1008-01M	Fastener, sidebag unit to backrest frame	Nm	6	6

Nm Airbag

Number	Designation		MODEL 218
BA91.60-P-1008-01M	Fastener, sidebag unit to backrest frame	Nm	6