


MODEL 212, 218

Shown on model 212

- 1 Stabilizer bar
- 2 Front axle carrier
- 3 Nut
- 4 Link rod
- 5 Bolts
- 6 Rubber bushing
- 7 Bearing shell

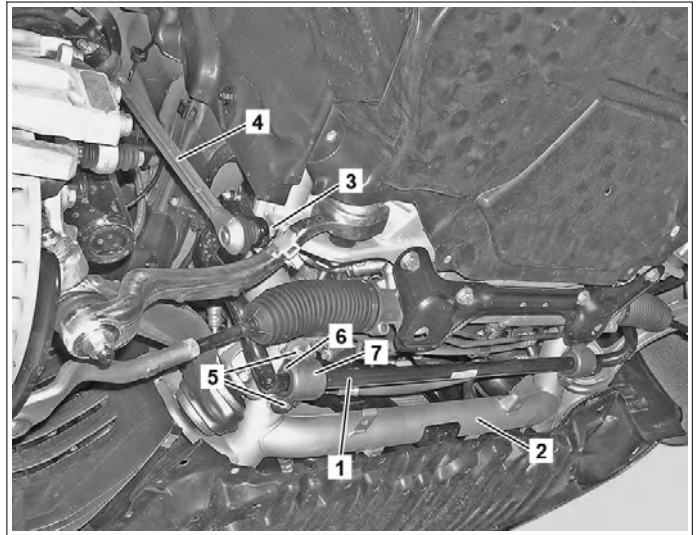

P32.20-2246-11

☒ ☒	Remove/install		
	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between columns of vehicle lift and position four support plates at vehicle lift support points specified by vehicle manufacturer.	AS00.00-Z-0010-01A
ⓘ	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
		ⓘ When working on the front-end assembly, be careful not to scratch, mark or notch the surfaces of aluminum parts. Otherwise the service life of the of the parts will be reduced.	
		ⓘ Installation: Tighten nuts and bolts of chassis components only when vehicle is in the ready-to-drive condition.	
1.1	Remove center section of the lower engine compartment paneling	Vehicles with gasoline engine	AR61.20-P-1105EW
1.2	Remove center bottom section of soundproofing	Vehicles with diesel engine	AR94.30-P-5300EW
2	Remove cover panel from rack-and-pinion steering	Model 218	
3	Remove nut (3) on both sides and push link rods (4) out of torsion bar (1)	<p>☒ Check rubber boots of link rods (4) for damage and replace link rods (4) if necessary.</p> <p>ⓘ When unscrewing the nuts (3) counterhold at the spherical bolts with interior torx.</p> <p>Nm</p>	*BA32.20-P-1001-02P
4	Remove retaining plate from rack-and-pinion steering	Model 212.077/277	
		<p>ⓘ Fasten rack-and-pinion steering using cable ties onto the front axle carrier.</p> <p>ⓘ Installation: Replace bolts and nuts.</p> <p>Nm</p> <p>Nm</p>	*BA46.20-P-1001-01N *BA46.20-P-1002-01N
5	Remove bolts (5) on front axle carrier (2) and remove torsion bar (1)	<p>☒ Check rubber mount (6) and bearing shells (7) for damage and wear and replace torsion bar (1) if necessary.</p> <p>ⓘ The rubber mount (6) and bearing shells (7) are vulcanized to the torsion bar (1).</p> <p>Nm</p>	*BA32.20-P-1003-02P
6	Install in the reverse order		

Nm Front axle stabilizer bar

Number	Designation	Model 212	Model 218

BA32.20-P-1001-02P	Nut, link rod to stabilizer bar	Nm	98	98
BA32.20-P-1003-02P	Bolt, torsion bar to front axle carrier	Nm	30	30

Nm Steering gear

Number	Designation			Model 212 without 4- MATIC
BA46.20-P-1001-01N	Fastening for rack-and-pinion steering to front axle carrier	Stage 1	Nm	70
		Stage 2	⌘°	90
BA46.20-P-1002-01N	Bolt, retaining plate of rack-and-pinion steering to front axle carrier		Nm	110