


Model 166, 172, 212, 218, 231, 292

Modification notes

29.03.2018	General information added.		
20.06.2018	Information on handling bolt revised.	Operation step 3	

Shown on model 212

- 1 Steering wheel
1s Screw
1r Electrical connector

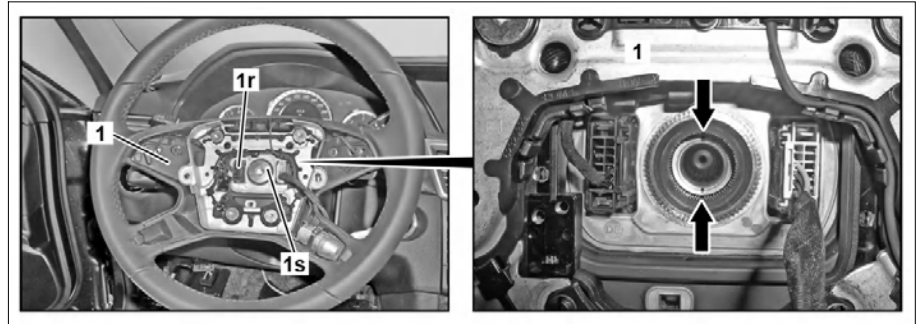

P46.10-3086-04

	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
	Notes on safety-relevant components		AH00.00-Z-0019-01A
	Remove/install		
1	Turn steering wheel (1) to center position.	The front wheels must be in the straight-ahead position.	
2	Remove airbag unit from steering wheel (1).	Model 166, 292 Model 172, 218, 231 Model 212 as of model year 2012 Model 212 up to model year 2012	AR91.60-P-0660GQ AR91.60-P-0660EL AR91.60-P-0660EW
3	Counterhold steering wheel (1) and remove bolt (1s).	Installation: Use the bolt (1s) again and mark with a water-soluble pen (color dot). Model 166, 292 Screw/bolt, steering wheel to steering shaft Model 172, 231 Bolt, steering wheel to steering shaft Model 212, 218 Screw/bolt, steering wheel to steering shaft If the bolt (1s) already bears a marking (color dot) ↓ replace bolt (1s).	*BA46.10-P-1001-02G *BA46.10-P-1001-02A *BA46.10-P-1001-02J
4	Release and disconnect electrical connector (1r).		
5	Remove steering wheel (1).	Installation: Align recesses of the splines (arrow) in the steering wheel (1) with the markings on the steering shaft.	
6	Install in the reverse order.		

Steering wheel

Number	Designation		Model 172	Model 231
BA46.10-P-1001-02A	Bolt, steering wheel to steering shaft	Nm	80	80

Steering wheel

Number	Designation		Model 166	Model 292
BA46.10-P-1001-02G	Screw/bolt, steering wheel to steering shaft	Nm	80	80

Nm Steering wheel

Number	Designation		Model 212	Model 218
BA46.10-P-1001-02J	Screw/bolt, steering wheel to steering shaft	Nm	80	80