


Model 207, 212
up to model year 2012

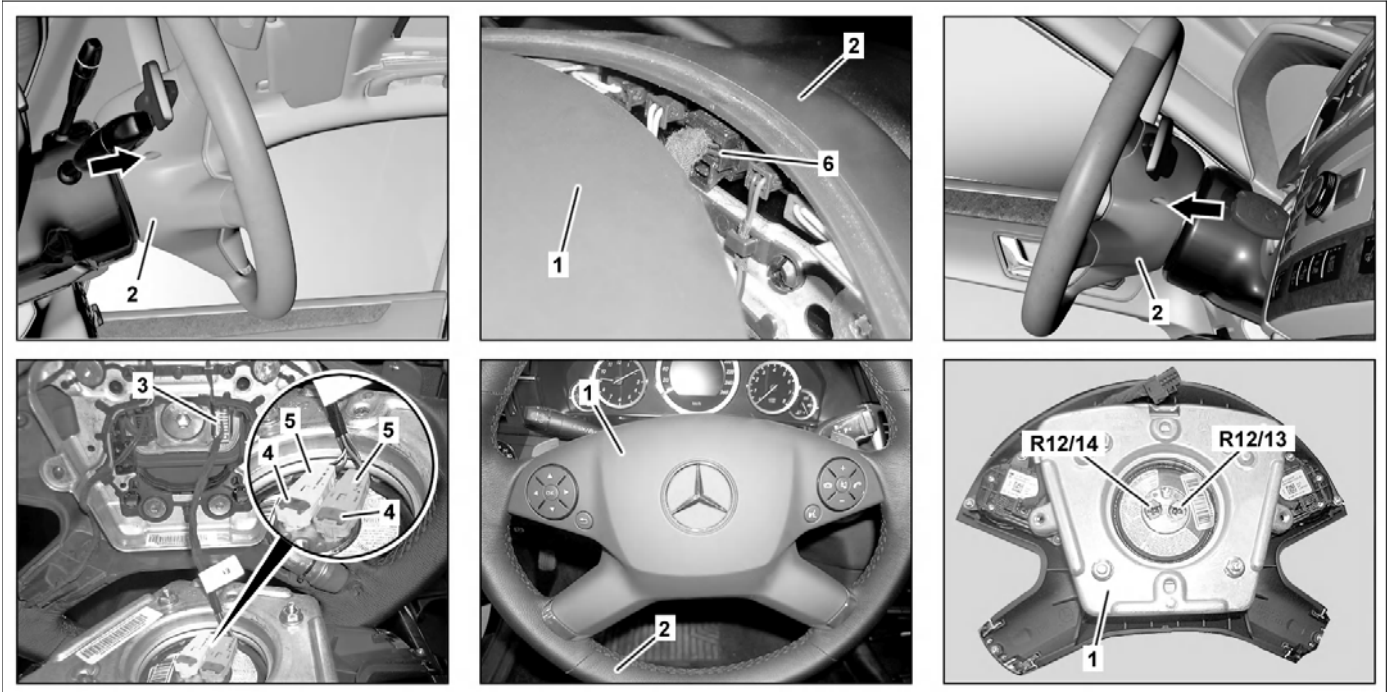


P91.60-3939-09

Shown on model 212 with 4-spoke design steering wheel

- 1 Driver airbag
- 2 Steering wheel
- 3 Electrical connector

- 4 Lock tabs
- 5 Electrical connectors
- 6 Electrical connector

- R12/13 Driver airbag squib 1
- R12/14 Driver airbag squib 2

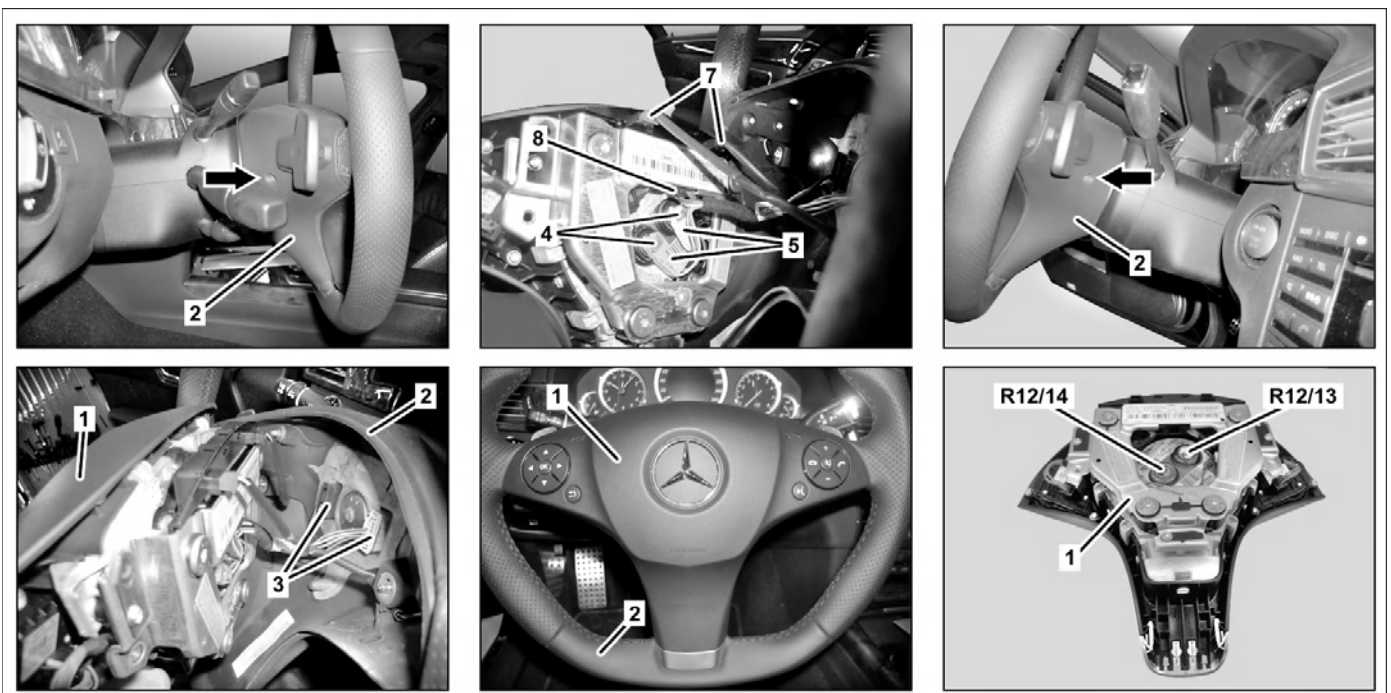

P91.60-3940-09


Shown on model 212 with 3-spoke design steering wheel

| | | | | | |
|---|-----------------------|---|-----------------------|--------|-----------------------|
| 1 | Driver airbag | 4 | Lock tabs | 8 | Electrical connector |
| 2 | Steering wheel | 5 | Electrical connectors | R12/13 | Driver airbag squib 1 |
| 3 | Electrical connectors | 7 | Electrical connectors | R12/14 | Driver airbag squib 2 |


| | | | | |
|-----|----------------|--|---|--------------------------------------|
| | Warning | Risk of injury during testing and repair operations related to pyrotechnical components | Do not expose pyrotechnical component parts to temperatures above 100 °C or 212 °F. Disconnect current supply when working on such component parts. | AS91.00-Z-0008-01A |
| | | Information on preventing damage to electronic components due to electrostatic discharge | | AH54.00-P-0001-01A |
| | | Information, assessment and legal requirements when working with, handling and storing pyrotechnical components | | AH91.00-Z-0000-10A |
| | | Remove/install | | |
| 1 | | Place steering column in the central height position | | |
| 2 | | Switch off ignition and store transmitter key outside of transmission range (at least 2 m) | | |
| 3 | | Disconnect ground line of battery | | AR54.10-P-0003EW |
| 4 | | Insert screwdriver bit into openings (arrows) on steering wheel (2) and remove screws/bolts at left and right from driver airbag (1) | Screw/bolt, airbag to steering wheel Screwdriver bit | *BA91.60-P-1005-01M *126589001000 |
| 5.1 | | Remove driver airbag (1) far enough from steering wheel (2) so that the electrical connectors (7, 8) are accessible | On steering wheel in 3-spoke design. | |
| 5.2 | | Remove driver airbag (1) far enough from steering wheel (2) until electrical connector (6) is accessible | On steering wheel in 4-spoke design. | |
| 6 | | Disconnect electrical connections (7) | Model 212 up to model year 2012 On steering wheel in 3-spoke design. | |
| 7.1 | | Disconnect electrical connector (8) | On steering wheel in 3-spoke design. | |
| 7.2 | | Disconnect electrical connector (6) | On steering wheel in 4-spoke design. | |
| 8 | | Remove driver airbag (1) from steering wheel (2) until electrical connectors (5) are accessible | | |
| 9 | | Release lock tabs (4) and disconnect electrical connectors (5) | Removal lever | *203589043300 |
| 10 | | Remove driver airbag (1) from steering wheel (2) | | |
| 11 | | Install in the reverse order | | |
| | | Check | | |
| 12 | | Check and erase vehicle fault memory using the diagnostic system | When replacing the driver airbag (1). | AD00.00-P-2000-04A |

Airbag

| Number | Designation | Model 207 | Model 212 |
|--------------------|--------------------------------------|-----------|-----------|
| BA91.60-P-1005-01M | Screw/bolt, airbag to steering wheel | Nm 7 | 7 |

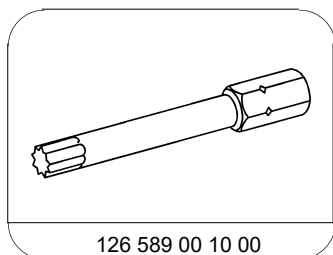

Screwdriver bit

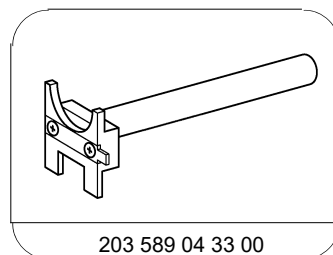

Removal lever