


**MODEL 463.202/236/237**  
as of model year 2010  
up to model year 2013, /model refinement package 2012

**MODEL 463.222/270/271/303/340/341**  
As of model year 2010

**MODEL 463.346**  
up to model year 2013  
/model refinement package 2012

Shown on model 204.0, left front seat

- 1 Seat adjustment mechanism  
2 Cover  
3 Bracket (model 204)

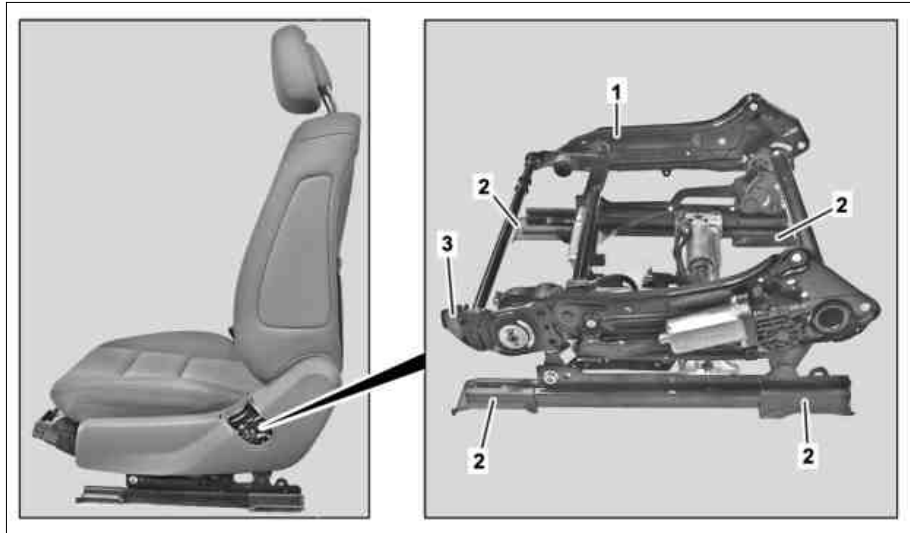

P91.10-3479-05

☒ ☒	Remove/install		
1	Remove left or right front seat backrest	Model 204, 207, 212, 218 MODEL 463	AR91.10-P-1060CW AR91.10-P-1060GP
2	Remove seat belt buckle	<b>i</b> When replacing seat adjustment mechanism (1).	AR91.40-P-1515CW
3	Remove driver seat control unit (N32/1) or front passenger seat control unit (N32/2) from seat adjustment mechanism (1)	<b>i</b> MODEL 204, 207 with code (242) Electrically adjustable front passenger seat with memory function or with code (275) Memory package (driver seat, steering column, mirrors), when replacing seat adjustment (1). Model 212, 218 with code (275) Memory package for electrically adjustable front seats, when replacing seat adjustment mechanism (1). Model 463, when replacing seat adjustment mechanism (1).	
4	Detach pneumatic line from seat adjustment mechanism (1)	<b>i</b> MODEL 204.0/2, 207, 212, 218 with code (409) Left/right front multicontour seats, when replacing seat adjustment mechanism (1). Model 463 with code (SM7) Left front multicontour seat or code (SM8) Front passenger multicontour seat, when replacing the seat adjustment mechanism (1). <b>i</b> <b>Installation:</b> Observe routing of pneumatic line.	
5	Remove covers (2)	<b>i</b> Model 204, 207, 212, 218, when replacing the seat adjustment mechanism (1)	
6	Remove bracket (3)	<b>i</b> Model 204, when replacing seat adjustment mechanism (1).	
7	Install in the reverse order		