


P91.10-3252-09

Shown on left front seat in model 204.0 with code (409) Left/right front multicontour seats and with code (873) Seat heater for left and right front seat


- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>1 Seat cushion</li> <li>2 Wiring harness</li> <li>3 Screw</li> <li>4 Bow</li> <li>5 Bearing shell</li> <li>6 Electrical connector for seat heater (with code (873) Seat heater for left and right front seats)</li> </ul> | <ul style="list-style-type: none"> <li>7 Pneumatic line (Model 204.0/2/3, 207, 212, 218 with code (409) Left/right front multicontour seats, model 212 with code (432) Left and right dynamic multicontour seat Model 218 with code (432) Active multicontour seat)</li> </ul> |
|  | <ul style="list-style-type: none"> <li>X55/3 Driver seat connector block</li> <li>X55/4 Front passenger seat connector block</li> </ul>  |

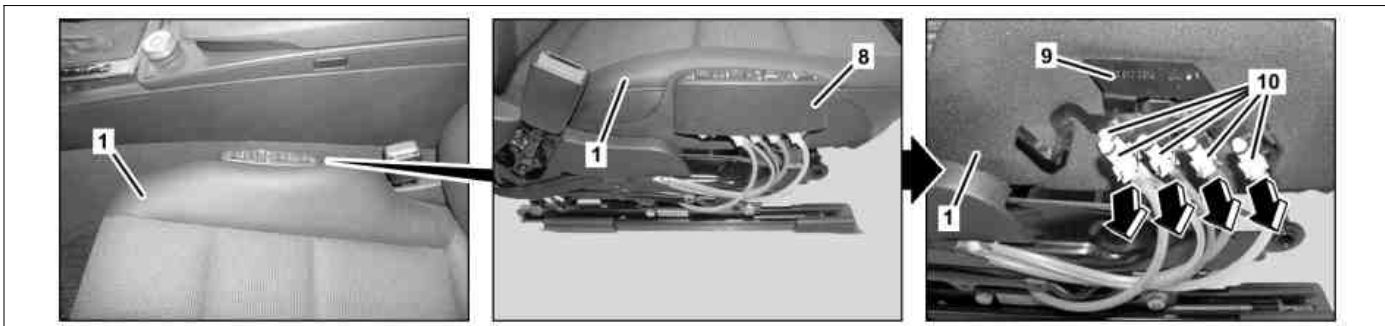

P91.10-3253-07

Model 204.0/2/3 (except 204.077/277), 207, 212, 218 with code (409) Left/right front multicontour seats, shown on left front seat


- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li>1 Seat cushion</li> <li>8 Control valve (with code (409) Front left/right multicontour seats)</li> </ul> | <ul style="list-style-type: none"> <li>9 Bracket (with code (409) Left/right front multicontour seats)</li> <li>10 Pneumatic lines (with code (409) Front left/right multicontour seats)</li> </ul> |
|---|---|

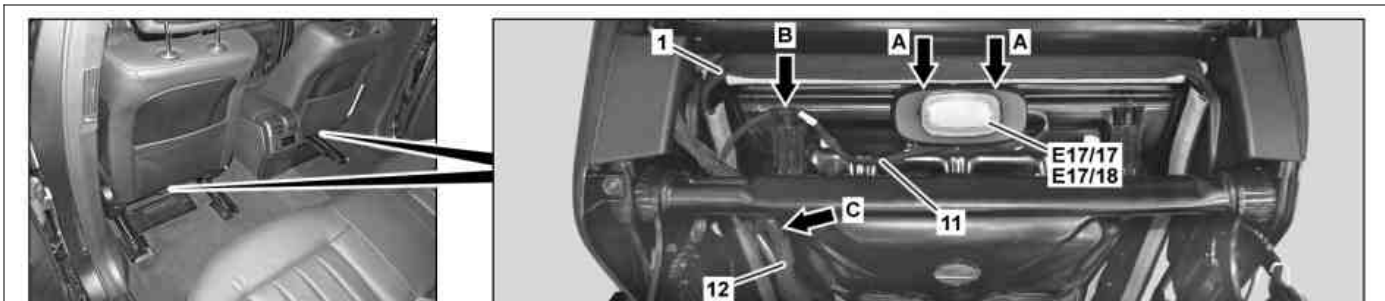

**Model 218, 212 with code (954) Avantgarde or with code (955)****Elegance**

- 1 Seat cushion  
 11 Electrical wiring harness (model 218, 212 with code (954) Avantgarde or with code (955) Elegance)  
 12 Wiring harness

- E17/17 Left rear footwell lamp (model 218, 212 with code (954) Avantgarde or with code (955) Elegance)  
 E17/18 Right rear footwell lamp (model 218, 212 with code (954) Avantgarde or with code (955) Elegance)

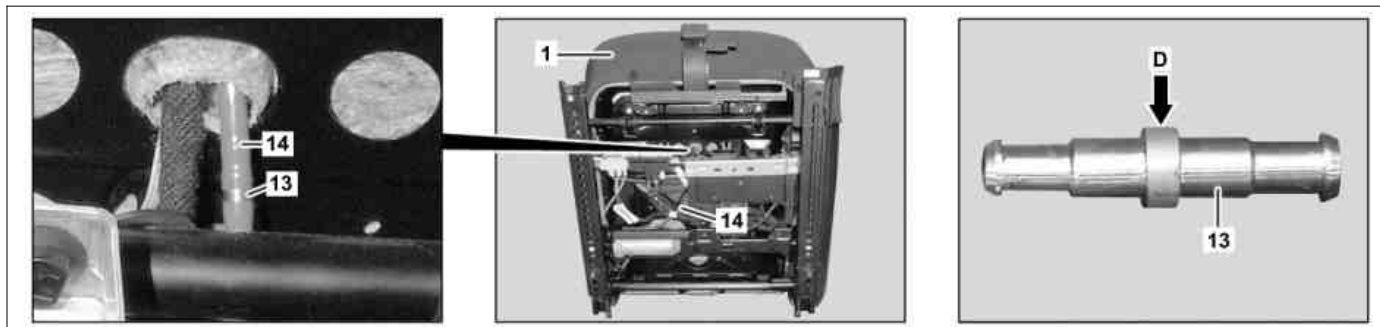

P91.25-2511-07







**Model 212 with code (432) Left and right dynamic multicontour seat, model 218 with code (432) Active multicontour seat**

  
1 Seat cushion

13 Pneumatic cable connector


14 Pneumatic line

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove fire extinguisher	Model 218 with code (682) Fire extinguisher	
2.1	Move front seat all the way back and fold front and rear seat cushions (1) all the way up	When removing seat cushion (1) from driver seat in vehicles without code (873) Seat heater for left and right front seats	
2.2	Release front seat and tilt backwards with connected lines and seat belt (anchor fitting)	Model 204.0/2/3, 207, 212, 218 with removal of seat cushion (1) at driver seat with code (873) Seat heater for left and right front seat or model 204, 207, 212, 218 with removal of seat cushion (1) at front passenger seat With model 218 do not move the backrest to the rear.	AR91.10-P-1000CW
3	Disconnect ground line for on-board electrical system battery (G1)	Model 204 Model 207, 212, 218	AR54.10-P-0003CW AR54.10-P-0003EW
4	Expose electrical wiring harness (2) at seat adjustment mechanism and disconnect at driver seat connector block (X55/3) or front passenger seat connector block (X55/4)	The number of electrical connectors depends on the equipment installed.	
5	Disconnect pneumatic line (7) from bottom of seat adjustment mechanism	Model 204.0/2/3, 207, 212, 218 with code (409) Left/right front multicontour seats Model 212 with code (432) Left and right dynamic multicontour seat Model 218 with code (432) Active multicontour seat Pliers	*000589043700
6.1	Remove switch for dynamic seat	Model 212 with code (432) Left and right dynamic multicontour seat model 218 with code (432) Active multicontour seat	AR91.25-P-1820EW
6.2	Remove control valve (8)	Model 204.0/2/3 (except 204.077/277), 207, 212, 218 with code (409) Left/right front multicontour seats	AR91.25-P-1710CW
7	Unclip pneumatic lines (10) from bracket (9)	Model 204.0/2/3 (except 204.077/277), 207, 212, 218 with code (409) Left/right front multicontour seats <b>Installation:</b> Check that the routing and attachment of the pneumatic lines (10) are correct.	
8	Expose pneumatic lines (10) at bottom of seat cushion (1)	Model 204.0/2/3 (except 204.077/277), 207, 212, 218 with code (409) Left/right front multicontour seats	

9	Unclip driver seat connector block (X55/3) or front passenger seat connector block (X55/4) and turn to one side until seat heater electrical connector (6) can be disconnected	On vehicles with code (873) Seat heater for right and left front seats	
10	Disconnect seat heater electrical connector (6) from driver seat connector block (X55/3) or front passenger seat connector block (X55/4)	On vehicles with code (873) Seat heater for right and left front seats	
11	Unclip housing halves of seat heater electrical connector coupling (6) from each other	On vehicles with code (873) Seat heater for right and left front seats	
12	Disconnect seat occupied recognition electrical connector from front passenger seat connector block (X55/4)	 When removing seat cushion (1) from front passenger seat.	
13	Raise seat cushion (1) at rear and unclip left rear footwell lamp (E17/17) or right rear footwell lamp (E17/18) at seat cushion (1) (arrows A)	Model 218, 212 with code (954) Avantgarde or with code (955) Elegance	
14	Unclip electrical wiring harness (11) at seat cushion (1) from bracket (arrow B)	Model 218, 212 with code (954) Avantgarde or with code (955) Elegance	
15	Unclip electrical wiring harness (12) at bottom of seat cushion (1) (arrow C)	Model 212	
16	Expose electrical lines belonging to seat cushion (1) at seat adjustment mechanism	 Number of electrical lines differs according to configuration.  <b>Installation:</b> Check that the routing and attachment of the electrical lines are correct.	
17	Cut through pneumatic line (14) below seat cushion (1) at an easily accessible location	Model 212 with code (432) Left and right dynamic multicontour seat model 218 with code (432) Active multicontour seat  Pneumatic line (14) must not be disconnected from a pneumatic cable connector (13) that is already present, otherwise leaks may occur at pneumatic line (14).  <b>Installation:</b> Connect pneumatic line (14) as shown using a pneumatic cable connector (13). Slide both sides of pneumatic line (14) up to collar (arrow D) onto pneumatic cable connector (13).  Knife	<a href="#">*000589122800</a>
18	Remove screws/bolts (3)		
19	Unclip and remove bracket (4)		
20	Fold up bearing shells (5)		
21	Remove seat cushion (1)		
22	Install in the reverse order		

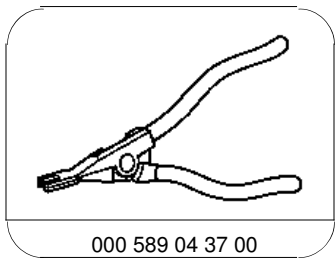

Pliers

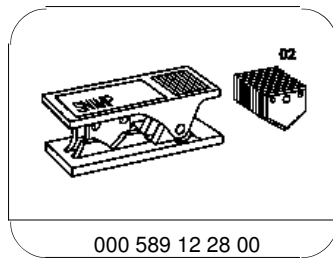

Slitting knife