



AR47.20-P-5510-01EW	Disconnect fuel line, stick together		
<b>⚠ Danger!</b>	<b>Risk of explosion</b> caused by fuel igniting, <b>risk of poisoning</b> caused by inhaling and swallowing fuel and <b>risk of injury</b> to eyes and skin caused by contact with fuel	No fire, sparks, open flames or smoking. Pour fuels only into suitable and appropriately marked containers. Wear protective clothing when handling fuel.	<b>AS47.00-Z-0001-01A</b>

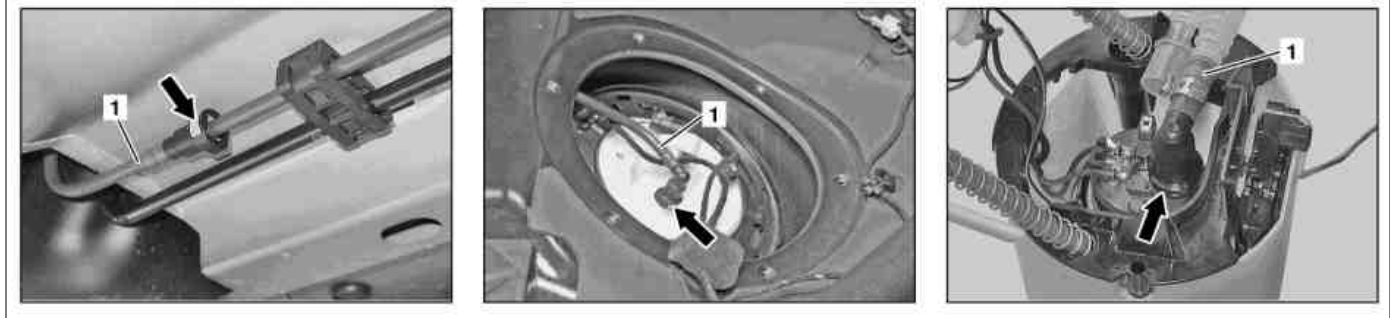

P47.25-2100-07

**Vehicle with gasoline engine**

1 Fuel pipe

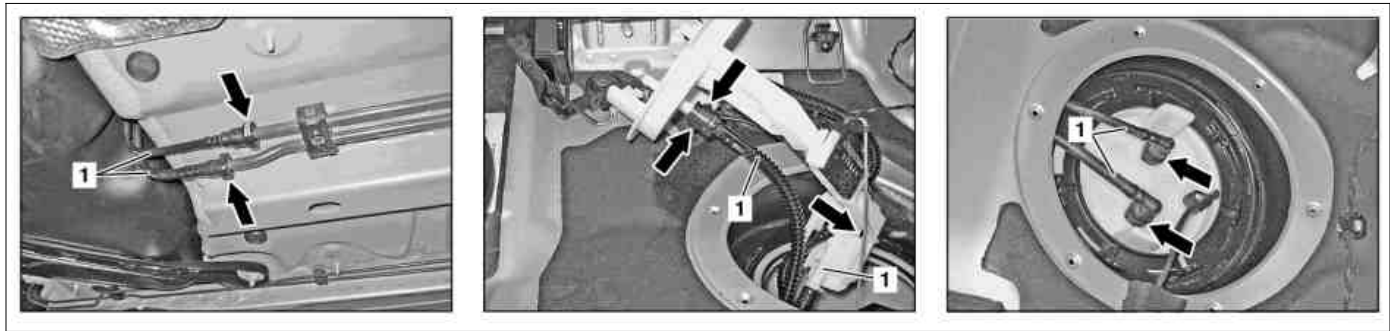

P47.25-2101-07

**Vehicle with diesel engine**

**Detach fuel line (1)**

**i** Before removal, the work environment must be carefully cleaned.

- 1 Press lock for fuel line (1) by hand or with a screwdriver in the direction of the arrow and detach fuel line (1) from fitting or fuel line.

1 Fuel pipe

**Install fuel line (1)**

- 2 Place fuel line (1) on fitting or fuel line.  
 Check for correct locking by pulling on the connector.