


Model all (CAR)
with code 871 (HANDS-FREE ACCESS)

Overview

This document contains information on:

- Location
- Task

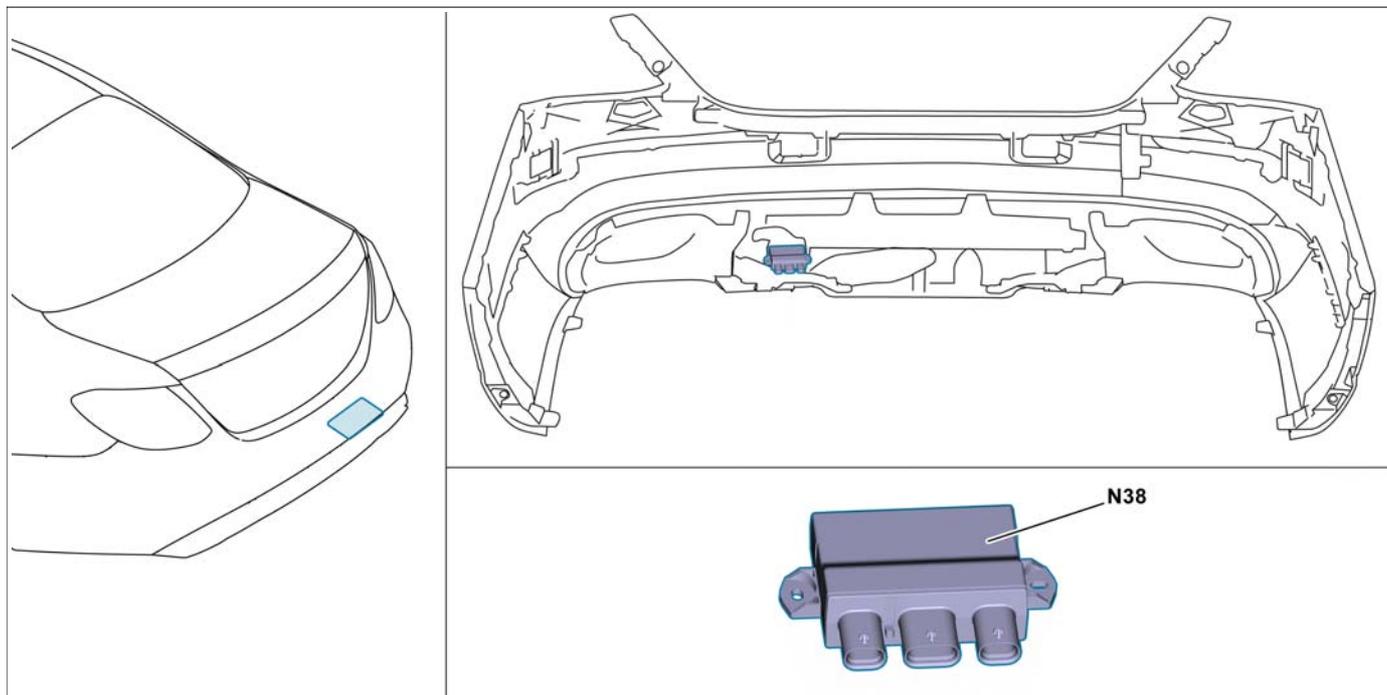

P80.61-3144-79

N38 Rear switching module

Location

The HSM is located in the paneling of the rear bumper.

Task

The rear switch module reads in the signals of the following sensors:

- Rear switching module up sensor (A87/1)
- Rear switching module down sensor (A87/2)

The rear switch module evaluates the sensor signals and transmits the appropriate requests to the electronic ignition lock control unit (N73).