


**MODEL 207, 212, 218**

Illustration shows model 212.002

- A1p13 Multifunction display  
 S110s1 Scroll forward/back button  
 S110s3 System selection button  
 S110s4 "Back" and voice control system OFF button  
 S110s6 OK button  
 S111s3 Accept/terminate phone call button

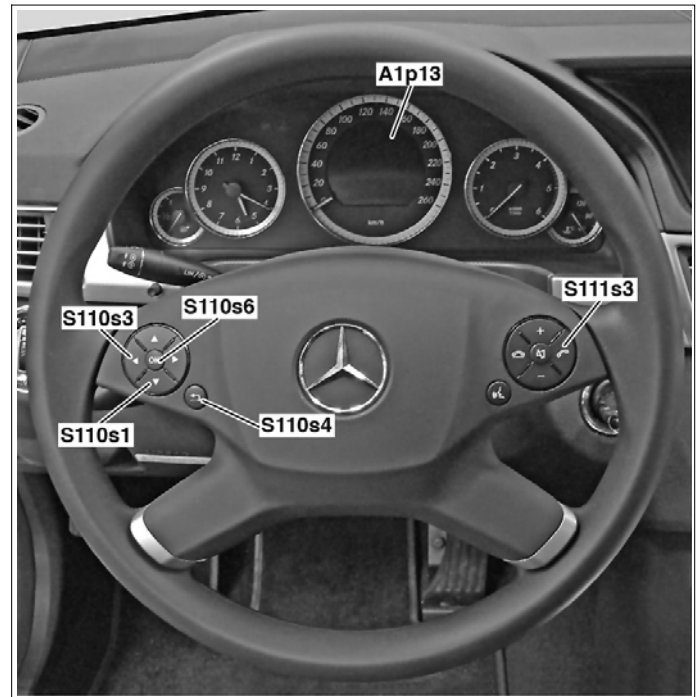

P54.30-9911-12

		Reset		
1	➔ AR	Close engine hood Opening engine hood, moving to upright position and closing	MODEL 207, 212, 218 MODEL 207, 212	AR88.40-P-1000EW
2		Close doors and trunk lid or liftgate		
3		Turn transmitter key in electronic ignition lock control unit to position "1"	<b>i</b> The standard display (kilometer counter) must appear in the multifunction display (A1p13), if necessary press scroll forwards and back button (S110s1) repeatedly.	
4		Press the system selection button (S110s3) repeatedly until the menu item "trip" with highlighter is stored in the multifunction display (A1p13)	<b>i</b> "Trip" remains selected for approx. 5 s. Operation step 5 must be carried out within this time.	
5		First press and hold down Accept and end phone call button (S111s3) and then within 1 s also press and hold down OK button (S110s6) for approx. 5 seconds	<b>i</b> The workshop menu with the "Vehicle data", "Dynamometer test" and "ASSYST PLUS" tabs appears in the multifunction display (A1p13).	
6		Press scroll forward/back button (S110s1) repeatedly until "ASSYST PLUS" is highlighted and confirm selection by pressing OK button (S110s6)	<b>i</b> The indexes "Service data" and "Full service" (A1p13) appear in the multifunction display.	
7		Press scroll forward/back button (S110s1) to highlight "Full service" and then confirm selection by pressing OK button (S110s6)	<b>i</b> The current service items appear in the multifunction display (A1p13).	
8		Press scroll forward/back button (S110s1) repeatedly until "Confirm serv." is highlighted in the multifunction display (A1p13) and confirm selection by pressing OK button (S110s6)	<b>i</b> "Service carried out?" or the oil selection appears in the multifunction display (A1p13).	
9		Select specification of used engine oil using scroll forward button of the scroll forward/back button (S110s1) and confirm selection by pressing OK button (S110s6)	<b>i</b> In order to achieve the maximum kilometer interval, engine oil for gasoline engines must be used and confirmed as per Specifications for Operating Fluids sheet 229.5 and engine oil for diesel engines must be used and confirmed as per Specifications for Operating Fluids sheet 229.51.	
10		Press scroll forward/back button (S110s1) until "Yes" is highlighted and confirm selection by pressing OK button (S110s6)	<b>i</b> "No take-back possible" appears in the multifunction display (A1p13).	

11	Press scroll forward/back button (S110s1) until "Confirmation" is highlighted and confirm selection by pressing OK button (S110s6)	<b>i</b> "Full service carried out" appears in the multifunction display (A1p13).	
12	Press the OK button (S110s6) and press the "Back" and VCS OFF (S110s4) button repeatedly until the multifunction display (A1p13) shows the standard display (kilometer counter)		
13	Turn transmitter key in electronic ignition lock control unit to position "0"		