 
	Remove/install		
1	Remove coolant level switch	<p> The coolant level switch can not be removed from the coolant expansion reservoir. If the coolant level switch has to be replaced then the complete coolant expansion reservoir has to be replaced. ↓ Remove coolant expansion reservoir</p>	<p>AR20.30-P-4950EL</p>
2	Install in the reverse order		