
MODEL 212

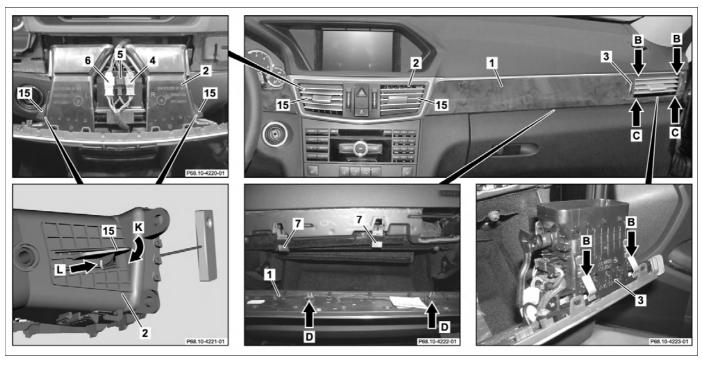



P68.10-4219-09

- 1 Passenger side trim strip
- 2 Center air outlet
- 3 Side air vent

- 4 Electrical connector (with code (954) Avantgarde or with code (955) Elegance)
- 5 Electrical connector


- 6 Electrical connector
- 7 Retaining clamp
- 15 Catch hook

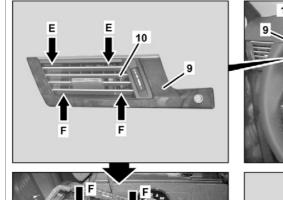

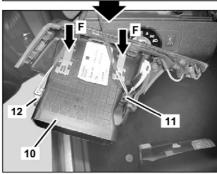





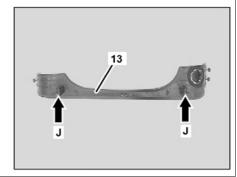


P68.10-4093-09

- 1 Passenger side trim strip
- 9 Driver side trim strip
- 10 Side air vent

- 11 Electrical connector
- 12 Electrical connector (with code (954) Avantgarde or with code (955) Elegance)
- 13 Instrument cluster trim strip
- 14 Instrument cluster covering

53 53	Remove/install	

Remove side air vent (3) When replacing passenger side trim strip (1). AR83.10-P-4740E				
Pull retaining clips (7) downward beyond catch point and leave in cutout for glove compartment Hook extraction hooks into openings on catch hook (arrows B and C) Loosen passenger side trim strip (1) with side air vent (3) from instrument panel by pulling extraction hook (arrows B and C) Install extraction hook in openings of catch hooks (15) on center air vent (2) and push catch hook in direction of vent center (arrows K) Hook extraction hook on catch hook (15) carefully in center air vent (2) (arrows L) and loosen passenger side trim strip (1) with center air vent (2) cut of instrument panel by pulling extraction hook in content (2) and push catch hook in direction of vent center (arrows K) Hook extraction hook on catch hook (15) carefully in center air vent (2) (arrows L) and loosen passenger side trim strip (1) with center air vent (2) out of instrument panel by pulling extraction hook Pull passenger side trim strip (1) with side air vent (3) and center air vent (2) out of instrument panel by pulling extraction hook in companies on catch hook (arrows E and F) Remove passenger side trim strip (1) Remove side air vent (2) Priver side trim strip (9) Hook extraction hook into openings on catch hook (arrows E and F) Loosen driver side trim strip (9) with side air vent (10) from instrument panel by pulling extraction hook Loosen driver side trim strip (9) with side air vent (10) out of instrument panel by pulling extraction hook Remove side air vent (3) Loosen driver side trim strip (9) with side air vent (10) out of instrument panel until electrical connector (11, 12) are accessible Disconnect electrical connectors (11, 12) Remove side air vent (10) Manually press pins (arrows G and H) on instrument cluster trim strip (13) Manually press pins (arrows G and H) on instrument cluster trim strip (13) Manually press pins (arrows G and H) on instrument cluster trim strip (13) Manually press pins (arrows G and H) on instrument cluster trim strip (13) Manually press pins (arrows G and H) on instrument	i	strip (9) and instrument cluster trim strip (13) can be removed separately. To remove instrument cluster trim strip (13), loosen driver side trim strip (9) and passenger side trim strip (1) and allow to hang down with electrica		
Pull retaining clips (?) downward beyond catch point and leave in cutout for glove compartment				
catch point and leave in cutout for glove compartment The compartment of the compartment	-			
Loosen passenger side trim strip (1) with side air vent (3) from instrument panel by pulling extraction hook in openings of catch hooks (15) on center air vent (2) and push catch hook in direction of vent center (arrows K) 1 Center air vent (2) is unlocked 2 Center air vent (3) and center air vent (2) is unlocked 2 Center air vent (3) is unlocked 3 Center air vent (4) is unlocked 3 Center air vent (6) is unlocked 3 Center air vent (7) is unlocked 3 Center air vent (8) is unlocked 3 Center air vent (8) is unlocked 3 Center air vent (9) is unlocked 3 Center air vent (9) is unlocked 3 Center air vent (9) is unlo	2	catch point and leave in cutout for glove	(7) are seated correctly in pins (arrows D) on	
air vent (3) from instrument panel by pulling extraction hook Install extraction hook in openings of catch hooks (15) on center air vent (2) and push catch hook in direction of vent center (arrows K) Install extraction hook in openings of catch hooks (15) on center air vent (2) and push catch hook in direction of vent center (arrows K) Install extraction hook on catch hook (15) carefully in center air vent (2) (arrows L) and loosen passenger side trim strip (1) with center air vent (2) out of instrument panel by pulling extraction hook Pull passenger side trim strip (1) with side air vent (3) and center air vent (2) out of instrument panel by pulling extraction hook Pull passenger side trim strip (1) with side air vent (3) and center air vent (2) out of instrument panel Remove passenger side trim strip (1) Remove passenger side trim strip (1) Remove passenger side trim strip (1) Remove side air vent (2) When replacing passenger side trim strip (1). AR83.10-P-47400 Torver side trim strip (9) When replacing passenger side trim strip (1). AR83.10-P-47300 Thoosen driver side trin strip (9) with side air vent (10) from instrument panel by pulling extraction hook Loosen driver side trim strip (9) with side air vent (10) from instrument panel by pulling extraction hook Pull driver side trim strip (9) with side air vent (10) from instrument panel until electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Disconnect electrical connectors (11, 12) Disconnect electrical connectors (11, 12) Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. When replacing driver side trim strip (9). AR83.10-P-47400 Instrument cluster trim strip (13) Menually press pins (arrows G and H) on instrument cluster trim strip (13) out of instrument cluster trim	3		3	*140589023300
Install extraction hook in openings of catch hooks (15) on center air vent (2) and push catch hook in direction of vent center (arrows K) Hook extraction hook on catch hook (15) carefully in center air vent (2) (arrows L) and loosen passenger side trim strip (1) with center air vent (2) out of instrument panel by pulling extraction hook Pull passenger side trim strip (1) with side air vent (3) and center air vent (2) out of instrument panel by pulling extraction hook Remove passenger side trim strip (1) with side air vent (3) and center air vent (2) out of instrument panel Remove passenger side trim strip (1) Remove center air vent (2) Remove side air vent (2) Hook extraction hook in dopenings on catch hook (arrows E and F) Loosen driver side trim strip (9) with side air vent (10) from instrument panel by pulling extraction hook Pull driver side trim strip (9) with side air vent (10) out of instrument panel until electrical connectors (11, 12) are accessible Pull driver side trim strip (9) with side air vent (10) out of instrument panel until electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Pull driver side trim strip (9) with side air vent (10) out of instrument panel until electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Pull driver side trim strip (9) with side air vent (10) out of instrument panel until electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Remove side air vent (10) Manually press pins (arrows G and H) on instrument cluster trim strip (13) out of instrument cluster panel (14) Uncilp catch hook (arrows J) from instrument panel cover (14)	4	air vent (3) from instrument panel by pulling	passenger side trim strip (1).	*140589023300
catch hook in direction of vent center (arrows K) Hook extraction hook on catch hook (15) carefully in center air vent (2) (arrows L) and loosen passenger side tim strip (1) with center air vent (2) out of instrument panel by pulling extraction hook Pull passenger side trim strip (1) with side air vent (3) and center air vent (2) out of instrument panel by pulling extraction hook Remove passenger side trim strip (1) with side air vent (3) and center air vent (2) out of instrument panel Remove passenger side trim strip (1) Remove center air vent (2) Pull passenger side trim strip (1) Remove center air vent (2) When replacing passenger side trim strip (1). AR83.10-P-47406 Priver side trim strip (9) Pull out carefully, danger of breaking driver side trim strip (1). AR83.10-P-47406 When replacing passenger side trim strip (1). AR83.10-P-47406 Pull out carefully, danger of breaking driver side trim strip (1) in instrument panel by pulling extraction hook Pull driver side trim strip (9) with side air vent (10) from instrument panel by pulling extraction hook Pull driver side trim strip (9) with side air vent (10) out of instrument panel until electrical connectors (11, 12) are accessible Disconnect electrical connectors (11, 12) I Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Pull driver side trim strip (1) Remove side air vent (10) Instrument cluster trim strip (13) Manually press pins (arrows G and H) on instrument cluster trim strip (13) out of instrument cluster prine strip (13) out of instrument cluster prine strip (13) out of instrument cluster prine strip (13) out of instrument panel cover (14) Pull driver side carch hook (arrows J) from instrument panel cover (14)	5	Install extraction book in openings of catch		
Hook extraction hook on catch hook (15) carefully in center air vent (2) (arrows L) and loosen passenger side trim strip (1) with center air vent (2) out of instrument panel by pulling extraction hook 7 Pull passenger side trim strip (1) with side air vent (3) and center air vent (2) out of instrument panel by pulling extraction hook 8 Disconnect electrical connectors (4, 5, 6) 9 Remove passenger side trim strip (1) 10 Remove center air vent (2) 11 Remove side air vent (3) 12 Hook extraction hook into openings on catch hook (arrows E and F) 13 Loosen driver side trim strip (9) with side air vent (10) from instrument panel by pulling extraction hook 14 Pull driver side trim strip (9) with side air vent (10) tof instrument panel until electrical connectors (11, 12) are accessible 15 Disconnect electrical connectors (11, 12) 16 Remove side air vent (10) 17 Manually press pins (arrows G and H) on instrument cluster trim strip (13) 18 Unclip catch hook (arrows J) from instrument panel cover (14).		hooks (15) on center air vent (2) and push catch hook in direction of vent center (arrows		
carefully in center air vent (2) (arrows L) and loosen passenger side trim strip (1) with center air vent (2) out of instrument panel by pulling extraction hook 7 Pull passenger side trim strip (1) with side air vent (3) and center air vent (2) out of instrument panel 8 Disconnect electrical connectors (4, 5, 6) 9 Remove passenger side trim strip (1) 10 Remove passenger side trim strip (1) 11 Remove side air vent (2) 12 Hook extraction hook into openings on catch hook (arrows E and F) 13 Loosen driver side trim strip (9) with side air vent (10) from instrument panel by pulling extraction hook 14 Pull driver side trim strip (9) with side air vent (10) ut of instrument cacessible 15 Disconnect electrical connectors (11, 12) 16 Remove side air vent (10) 17 Manually press pins (arrows G and H) on instrument cluster trim strip (13) 18 Uncip catch hook (arrows J) from instrument panel cover (14).			<u> </u>	*140589023300
Pull passenger side trim strip (1) with side air vent (3) and center air vent (2) out of instrument panel	6	carefully in center air vent (2) (arrows L) and loosen passenger side trim strip (1) with center air vent (2) out of instrument panel by		
vent (3) and center air vent (2) out of instrument panel			8	*140589023300
(954) Avantgarde or code (955) Elegance.	7	vent (3) and center air vent (2) out of		
Remove center air vent (2) When replacing passenger side trim strip (1). AR83.10-P-4503E	8	Disconnect electrical connectors (4, 5, 6)	i Electrical connector (4) only with code (954) Avantgarde or code (955) Elegance.	
Remove side air vent (3) When replacing passenger side trim strip (1). AR83.10-P-4740E	9	Remove passenger side trim strip (1)		
Driver side trim strip (9) Hook extraction hook into openings on catch hook (arrows E and F) Loosen driver side trim strip (9) with side air vent (10) from instrument panel by pulling extraction hook Pull driver side trim strip (9) with side air vent (10) out of instrument panel until electrical connectors (11, 12) are accessible Disconnect electrical connectors (11, 12) Disconnect electrical connectors (11, 12) Remove side air vent (10) Instrument cluster trim strip (13) Manually press pins (arrows G and H) on instrument cluster panel (14) Munclip catch hook (arrows J) from instrument panel cover (14) Installation: Ensure that catch hooks (arrows J) are seated correctly in instrument panel cover (14).	10	Remove center air vent (2)	When replacing passenger side trim strip (1).	AR83.10-P-4503EW
Hook extraction hook into openings on catch hook (arrows E and F) Loosen driver side trim strip (9) with side air vent (10) from instrument panel by pulling extraction hook Pull driver side trim strip (9) with side air vent (10) out of instrument panel until electrical connectors (11, 12) are accessible Disconnect electrical connectors (11, 12) Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Menove side air vent (10) Instrument cluster trim strip (13) Manually press pins (arrows G and H) on instrument cluster trim strip (13) out of instrument cluster trim strip (13) out of instrument cluster panel (14) Unclip catch hook (arrows J) from instrument panel cover (14).	11	Remove side air vent (3)	When replacing passenger side trim strip (1).	AR83.10-P-4740EW
hook (arrows E and F) Loosen driver side trim strip (9) with side air vent (10) from instrument panel by pulling extraction hook Pull driver side trim strip (9) with side air vent (10) out of instrument panel until electrical connectors (11, 12) are accessible Disconnect electrical connectors (11, 12) Disconnect electrical connectors (11, 12) Remove side air vent (10) Instrument cluster trim strip (13) Manually press pins (arrows G and H) on instrument cluster trim strip (13) out of instrument cluster trim strip (13) out of instrument cluster panel (14) Unclip catch hook (arrows J) from instrument panel cover (14).		Driver side trim strip (9)		
vent (10) from instrument panel by pulling extraction hook 14 Pull driver side trim strip (9) with side air vent (10) out of instrument panel until electrical connectors (11, 12) are accessible 15 Disconnect electrical connectors (11, 12) 1 Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. 16 Remove side air vent (10) Instrument cluster trim strip (13) 17 Manually press pins (arrows G and H) on instrument cluster trim strip (13) out of instrument cluster panel (14) 18 Unclip catch hook (arrows J) from instrument panel cover (14).	12		3	*140589023300
Pull driver side trim strip (9) with side air vent (10) out of instrument panel until electrical connectors (11, 12) are accessible Disconnect electrical connectors (11, 12) Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Remove side air vent (10) Instrument cluster trim strip (13) Manually press pins (arrows G and H) on instrument cluster trim strip (13) out of instrument cluster panel (14) Unclip catch hook (arrows J) from instrument panel cover (14). Installation: Ensure that catch hooks (arrows J) are seated correctly in instrument panel cover (14).	13	vent (10) from instrument panel by pulling	Pull out carefully, danger of breaking driver side trim strip (9).	
(10) out of instrument panel until electrical connectors (11, 12) are accessible Disconnect electrical connectors (11, 12) Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Remove side air vent (10) When replacing driver side trim strip (9). Instrument cluster trim strip (13) Manually press pins (arrows G and H) on instrument cluster trim strip (13) out of instrument cluster panel (14) Unclip catch hook (arrows J) from instrument panel cover (14).			3	*140589023300
Disconnect electrical connectors (11, 12) I Electrical connector (12) only with code (954) Avantgarde or code (955) Elegance. Remove side air vent (10) Instrument cluster trim strip (13) Manually press pins (arrows G and H) on instrument cluster trim strip (13) out of instrument cluster panel (14) Unclip catch hook (arrows J) from instrument panel cover (14) I Installation: Ensure that catch hooks (arrows J) are seated correctly in instrument panel cover (14).	14	(10) out of instrument panel until electrical	i Electrical connector (12) only with code	
Remove side air vent (10) Instrument cluster trim strip (13) Manually press pins (arrows G and H) on instrument cluster trim strip (13) out of instrument cluster panel (14) Unclip catch hook (arrows J) from instrument panel cover (14) Installation: Ensure that catch hooks (arrows J) are seated correctly in instrument panel cover (14).	15			
Instrument cluster trim strip (13) Manually press pins (arrows G and H) on instrument cluster trim strip (13) out of instrument cluster panel (14) Unclip catch hook (arrows J) from instrument panel cover (14) Installation: Ensure that catch hooks (arrows J) are seated correctly in instrument panel cover (14).	16	Remove side air vent (10)		AR83.10-P-4740EW
Manually press pins (arrows G and H) on instrument cluster trim strip (13) out of instrument cluster panel (14) Unclip catch hook (arrows J) from instrument panel cover (14) Installation: Ensure that catch hooks (arrows J) are seated correctly in instrument panel cover (14).	-	` '	, <u>, , , , , , , , , , , , , , , , , , </u>	
panel cover (14) (arrows J) are seated correctly in instrument panel cover (14).	17	Manually press pins (arrows G and H) on instrument cluster trim strip (13) out of		
	18	, , ,	(arrows J) are seated correctly in instrument	
19 Remove instrument panel trim strip (13)	19	Remove instrument panel trim strip (13)	, ,	
20 Install in the reverse order	20			

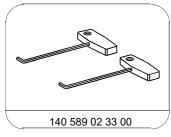

Pulling hook