

**Model** 117, 166, 172, 176, 190, 197, 205, 207, 212, 217, 218, 222, 231, 246, 253, 292  
**Model** 204  
 with code 442 (Luxury multifunction steering wheel)



P54.33-3472-01



P54.33-3473-01



P54.33-3474-01

**Shown in mode 212.002, valid for model 197, 204 with code 442 (Comfort multifunction steering wheel), 207, 212**

- 1 System selection button
- 2 Accept phone call button
- 3 OK button.
- 4 Scroll forward/back button
- 5 "Back" button
- 6 Multifunction display

**Shown in model 172, valid for model 117, 166, 172, 176, 218, 231, 242, 246**

- 1 System selection button
- 2 Accept phone call button
- 3 OK button.
- 4 Scroll forward/back button
- 5 "Back" button
- 6 Multifunction display

**Shown in model 222, valid for model 190, 205, 217, 253, 222**

- 1 System selection button
- 2 Accept phone call button
- 3 OK button.
- 4 Scroll forward/back button
- 5 "Back" button
- 6 Multifunction display

**Shown in mode 292, valid for model 292**

- 1 System selection button
- 2 Accept phone call button
- 3 OK button.
- 4 Scroll forward/back button
- 5 "Back" button
- 6 Multifunction display



P00.20-2878-01

Open workshop level			
1	Close engine hood, doors and trunk lid or liftgate		
2	Switch electronic ignition lock control unit to position "1" (circuit 15R)	<b>i</b> There must be no fault messages in the multifunction display (6).	
3	Press system selection button (1) repeatedly until menu item "Trip" is highlighted in multifunction display (6), and then confirm with OK button. (3)		
4	Press scroll forward/back button (4) repeatedly until standard "Total distance" display appears in "Trip" menu in multifunction display (6)	<b>i</b> Operation step 5 must be performed within approx. 5 s after the standard "Total distance" display appears.	
5	First press and hold down accept phone call button (2), then within 1 s additionally press OK button. (3) and hold down for approx. 5 s	<b>i</b> The workshop menu with the following tabs appears in the multifunction display (6): "Vehicle data", "Dynamometer test", "Change brake lining" (depending on equipment installed), "ASSYST PLUS", "Head-up-display" (depending on equipment installed).	
Close workshop level			

6	Press "Back" button (5) repeatedly until standard display (total distance) appears in multifunction display (6)		
7	Switch electronic ignition lock control unit to position "0"		