



P77.20-2737-09

**Shown on model 212.0**

1 Rear guide rails

2 Panoramic sliding sunroof

3 Pivot arms

🔧	Clean		
	<b>Risk of injury</b> caused by <b>fingers being pinched or crushed</b> when removing, installing or aligning hoods, doors, trunk lids, liftgates or sliding roof	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0011-01A
1	Drip three drops of special sliding roof antifriction agent into each rear guide rail (1)	Special antifriction agent	*BR00.45-Z-1055-06A
2	Switch on ignition and open panoramic sliding roof (2)		
3	Use rag to clean crosshatched area of wind deflector pivot arms (3)		
4	Clean the upper and lower guide rails (arrows) over the entire length with rags		
5	Apply thin coating of antifriction paste to crosshatched area of wind deflector pivot arms (3)	Lubricant paste	*BR00.45-Z-1004-06A
6	Coat contact surfaces of guide rails (arrows) over the entire length with a thin coating of lubricating paste	Lubricant paste	*BR00.45-Z-1004-06A
7	Perform function test on panoramic sliding roof (2)		
8	Remove excess lubricant		
9	Close panoramic sliding roof (2) and switch off ignition		

**Repair materials**

Number	Designation	Order number
BR00.45-Z-1004-06A	Synthetic grease, sliding roof 500 g, DB supply specification 6827.60	A 001 989 46 51
BR00.45-Z-1055-06A	Special sliding compound	A 000 989 36 60