


P91.18-2255-09


**Shown on model 204.0 with code (409)
Left/right front multicontour seats and
code (873) Seat heater for left and right
front seat**

- | | | |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1 Cover</p> <p>2 Seat cushion frame</p> <p>3 Electrical wiring harness for seat occupied recognition, front passenger seat (front passenger seat only)</p> <p>4 Electrical wiring harness for seat heater (with code (873) Seat heater for left and right front seats)</p> | <p>5 Pneumatic line
(Model 204.0/2/3, 207, 212, 218 with code (409) Left/right front multicontour seats, model 212 with code (432) Left and right dynamic multicontour seat model 218 with code (432) Active multicontour seat)</p> | <p>6 Clips
(Model 204.0/2/3, 207, 212, 218 with code (409) Left/right front multicontour seats, model 212 with code (432) Left and right dynamic multicontour seat, model 218 with code (432) Active multicontour seat)</p> |
| <p>7 Bracket
(Model 204.0/2/3, 207, 212, 218 with code (409) Left/right front multicontour seats, model 212 with code (432) Left and right dynamic multicontour seat, model 218 with code (432) Active multicontour seat)</p> | <p>8 Screws/bolts
(Model 204.0/2/3, 207, 212, 218 with code (409) Left/right front multicontour seats, model 212 with code (432) Left and right dynamic multicontour seat, model 218 with code (432) Active multicontour seat)</p> | <p>9 Padding</p> <p>10 Staple wires</p> <p>11 Staple wires</p> <p>12 Staple wire (model 204.0/2/3, 207, 212, 218 with code (409) Left/right front multicontour seats, model 212 with code (432) Left and right dynamic multicontour seat, model 218 with code (432) Active multicontour seat)</p> |

**Model 212, 218 shown on right front seat cushion with code
(873) Left and right front seat heating**

- | |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1 Cover</p> <p>4 Electrical wiring harness for seat heater (with code (873) Seat heater for left and right front seats)</p> <p>9 Padding</p> <p>13 Electrical connector for seat heater (with code (873) Seat heater for left and right front seats)</p> <p>14 Staple wire</p> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

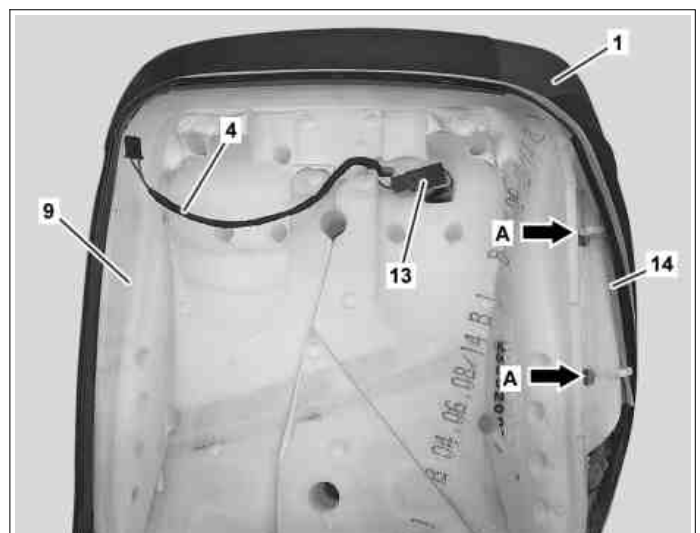

	Remove/install		
1	Remove seat cushion		AR91.10-P-3310CW
2	Remove tray for fire extinguisher	Model 218 with code (682) Fire extinguisher	
3	Unhook cover (1) from seat cushion frame (2)		
4	Remove screws/bolts (8) and remove bracket (7)	Model 204.0/2/3, 207, 212, 218 with code (409) Left/right front multicontour seats, Model 212 with code (432) Left and right dynamic multicontour seat, model 218 with code (432) Active multicontour seat	
5	Slip cover (1) over padding (9)		
6	Unclip staple wire (12) from clips (6)	Model 204, 207, Model 212 with code (432) Left and right dynamic multicontour seat, model 218 with code (432) Active multicontour seat	
7	Lift cover (1) with padding (9)		
8	Guide electrical wiring harness for front passenger seat occupied recognition (3) through seat cushion frame (2)	i Only on passenger seat.	
9	Guide pneumatic line (5) through seat cushion frame (2)	Model 204.0/2/3, 207, 212, 218 with code (409) Left/right front multicontour seats, Model 212 with code (432) Left and right dynamic multicontour seat, model 218 with code (432) Active multicontour seat	
10.1	Guide electrical wiring harness for seat heater (4) through seat cushion frame (2)	i On vehicles with code (873) Left and right front seat heater.	
10.2	Route electrical wiring harness for seat heater (4) and electrical wiring harness for seat ventilation motors through the seat cushion frame (2)	i On vehicles with code (401) Front comfort seats, incl. seat heating and seat ventilation.	
11	Remove cover (1) with padding (9)		
12	Disconnect seat heater electrical connector (13) at bottom of cushion (9)	Model 212, 218 with code (873) Seat heater, left and right front seat.	
13	Unclip staple wire (14) from padding (9) (arrows A)	Model 212, 218	
14	Unclip staple wires (10, 11) from padding (9)	i On model 212, 218 only the upper staple wire (11) is fitted.	
15	Lift cover (1) and guide electrical wiring harness for seat heater (4) through padding (9)	i On vehicles with code (873) Left and right front seat heater.	
16	Remove cover (1) from padding (9)		
17	Pull staple wires (10, 11) out of cover (1)	i When replacing the cover (1). The option of removing the staple wires (10, 11) from the cover (1) depends on the vehicle equipment and may vary as a result. i On model 212, 218 only the upper staple wire (11) is fitted.	
18	Pull staple wire (12) out of cover (1)	Model 204.0/2/3, 207, 212, 218 with code (409) Left/right front multicontour seats, model 212 with code (432) Left and right dynamic multicontour seat, model 218 with code (432) Active multicontour seat i When replacing the cover (1). The option of removing the staple wire (12) from the cover (1) depends on the vehicle equipment and may vary as a result.	
19	Modify heating elements of seat heater at cover (1)	i When replacing the upholstery (1) on the driver seat in vehicles with code (873) Seat heater for left and right front seats. i The heating elements of the seat heater can be used again.	
20	Install in the reverse order		