


MODEL 212
with CODE 432 (Left and right dynamic multicontour seat)

MODEL 218
with CODE 432 (Left and right dynamic multicontour seat)



 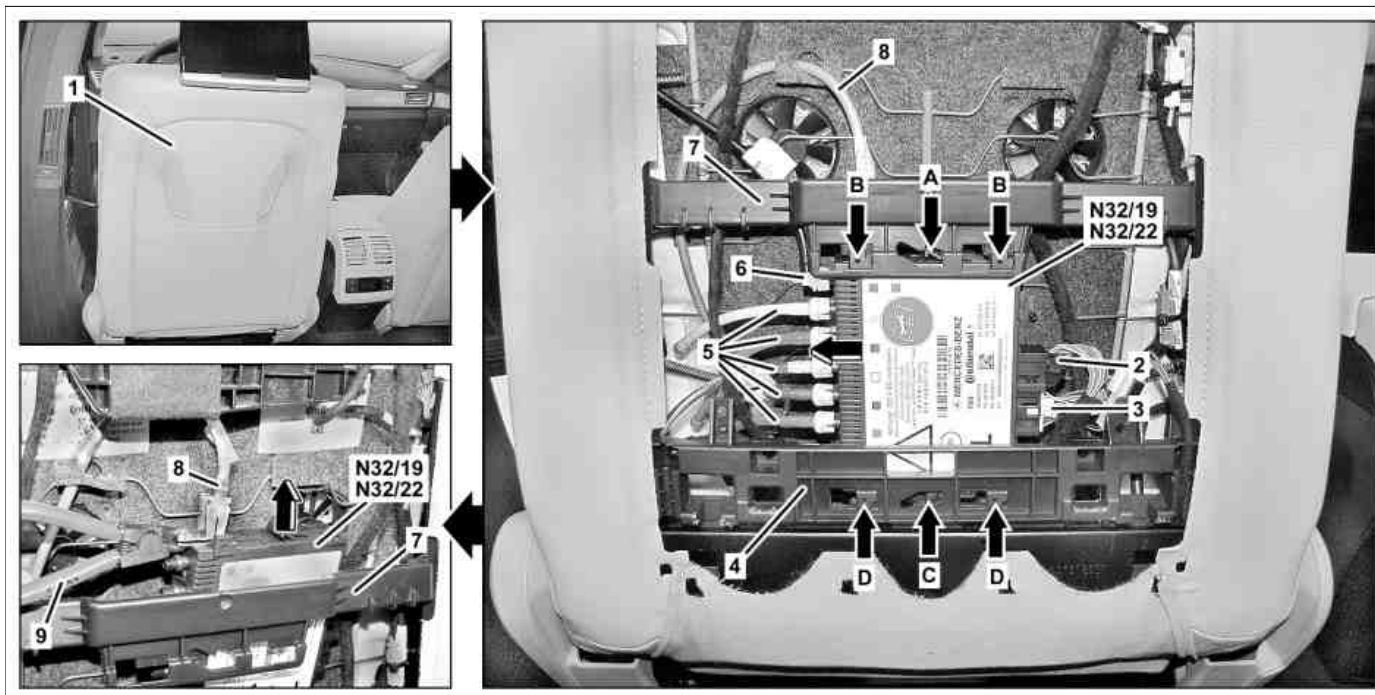



P91.25-2508-09

Shown on model 212.0

- | | | | | | |
|---|----------------------|---|-----------------|--------|---|
| 1 | Seat-back lining | 5 | Pneumatic lines | 9 | Pliers |
| 2 | Electrical connector | 6 | Pneumatic line | N32/19 | Left front active multicontour seat control unit |
| 3 | Electrical connector | 7 | Brace | N32/22 | Right front active multicontour seat control unit |
| 4 | Brace | 8 | Pneumatic line | | |

ⓘ	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
⊗ ⊗	Remove/install		
1	Connect diagnostic system and carry out initial startup of left front active multicontour seat control unit (N32/19) or right front active multicontour seat control unit (N32/22)	When replacing the left front active multicontour seat control unit (N32/19) or the right front active multicontour seat control unit (N32/22).	
AD			AD00.00-P-2000-04A
2	Adjust left or right front seat forward and move backrest into upright position		
3.1	Switch off ignition and remove transmitter key from electronic ignition lock control unit	MODEL 212 with CODE 432 (Left and right dynamic multicontour seat) without CODE 889 (KEYLESS-GO) MODEL 218 with CODE 432 (Left and right dynamic multicontour seat) without CODE 889 (KEYLESS-GO)	
3.2	Switch off ignition and remove transmitter key or KEYLESS-GO start/stop button from electronic ignition lock control unit	MODEL 212 with CODE 432 (Left and right dynamic multicontour seat) without CODE 889 (KEYLESS-GO) MODEL 218 with CODE 432 (Left and right dynamic multicontour seat) without CODE 889 (KEYLESS-GO)	

4	Remove seat-back lining (1)		AR91.10-P-1910CW
5	Disconnect electrical connections (2, 3)		
6	Disconnect pneumatic lines (5) with pliers (9)	 Pliers	*000589043700
7	Release catch hooks (arrows A, C) and guide supports (arrows B, D) of the left front active multicontour seat control unit (N32/19) or the right front active multicontour seat control unit (N32/22) out of braces (4, 7)		
8	Disconnect pneumatic line (6) with pliers (9)	 Pliers	*000589043700
9	Lift left front active multicontour seat control unit (N32/19) or right front active multicontour seat control unit (N32/22) and disconnect pneumatic line (8) with pliers (9)	 Pliers	*000589043700
10	Remove left front active multicontour seat control unit (N32/19) or right front active multicontour seat control unit (N32/22) toward top		
11	Install in the reverse order		

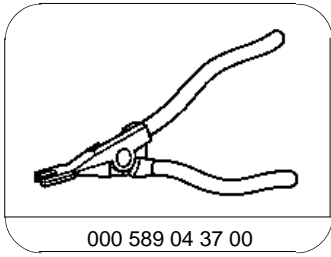

Pliers