


- Model 117, 156, 166, 172, 176, 190, 197, 205, 207, 212, 217, 218, 231, 242, 246, 253, 292
- Model 204
with code 442 (Luxury multifunction steering wheel)
- Model 222
up to model year 2018
- Model 463 as of 6/1/12

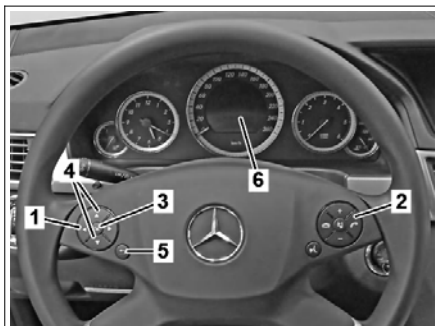

P54.33-3472-01



P54.33-3473-01



P54.33-3474-01

Shown on model 212.002, valid for model 197, 204 with code 442 (Comfort multifunction steering wheel), 207, 212

- 1 System selection button
- 2 Accept phone call button
- 3 OK button.
- 4 Scroll forward/back button
- 5 "Back" button
- 6 Multifunction display

Shown on model 172, valid for model 117, 156, 166, 172, 176, 218, 231, 242, 246, 463 as from 01.06.12

- 1 System selection button
- 2 Accept phone call button
- 3 OK button.
- 4 Scroll forward/back button
- 5 "Back" button
- 6 Multifunction display

Shown on model 222 up to model year 2018, valid for model 190, 205, 217, 253, 222 up to model year 2018

- 1 System selection button
- 2 Accept phone call button
- 3 OK button.
- 4 Scroll forward/back button
- 5 "Back" button
- 6 Multifunction display

Shown on model 292, valid for model 292

- 1 System selection button
- 2 Accept phone call button
- 3 OK button.
- 4 Scroll forward/back button
- 5 "Back" button
- 6 Multifunction display



P00.20-2878-01

| Open workshop level | | | |
|----------------------|--|--|--|
| 1 | Close engine hood, doors and trunk lid or tailgate | | |
| 2 | Switch electronic ignition lock control unit to position "1" (circuit 15R) | i The multifunction display (6) may not have any fault messages on it. | |
| 3 | Press system selection button (1) repeatedly until menu item "Trip" is highlighted in multifunction display (6), and then confirm with OK button . (3) | | |
| 4 | Press scroll forward/back button (4) repeatedly until standard "Total distance" display appears in "Trip" menu in multifunction display (6) | i Operation step 5 must be performed within approx. 5 s after the standard display "Total distance" appears. | |
| 5 | First press and hold down accept phone call button (2), then within 1 s additionally press OK button. (3) and hold down for approx. 5 s | i The workshop menu with the following tabs appears in the multifunction display (6): "Vehicle data", "Dynamometer test", "Change brake lining" (depending on equipment installed), "ASSYST PLUS", "Head-up-display" (depending on equipment installed). | |
| Close workshop level | | | |

| | | | |
|---|---|--|--|
| 6 | Press "Back" button (5) repeatedly until standard display (total distance) appears in multifunction display (6) | | |
| 7 | Switch electronic ignition lock control unit to position "0" | | |