

AH00.00-P-0006-01RM	Notes on threaded connections with aluminum screws/bolts		
---------------------	--	--	--

Model all (4xWD, BUS, CAR, Light transporter)

ⓘ Aluminum screws/bolts are allowed to be used once only and must then be replaced by new ones.
The mating thread must be cleaned before a new aluminum screw/bolt is screwed in.
Otherwise the threaded connection may work loose.