

Open

1 Slide nose (2) of catch spring (3) to position (B).

i Do not pull on the eyelet (1) as the catch spring (3) will lose pretension.

2 Remove hose from component.


3 Replace seal.

Close

4 Slide nose (2) of catch spring (3) to position (A).

5 Slide hose onto component until the catch spring (3) latches.

6 Check connection by slightly pulling.

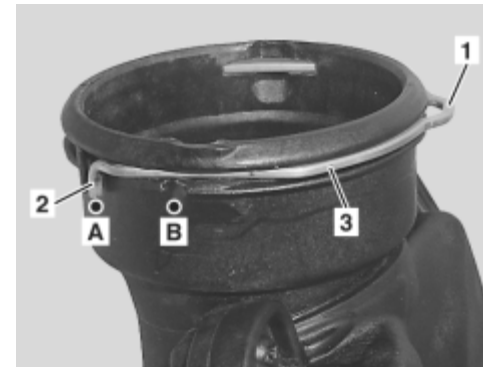

P09.41-2318-01