



Model 212.0/1

- 5 Spare wheel well paneling (without code (669) Spare wheel well on steel rim or without code (690) Emergency spare tire)
- 7 Rear center section paneling
- 10 Trim on trunk floor, front
- 11 Left side paneling
- 12 Right side paneling
- 19 Cross member paneling

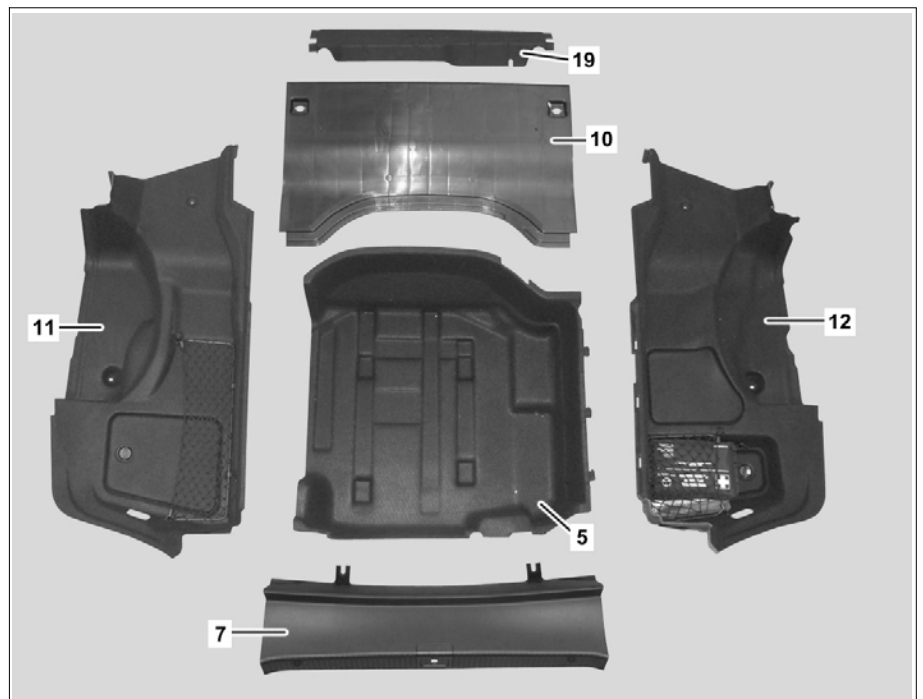

P68.30-3428-06

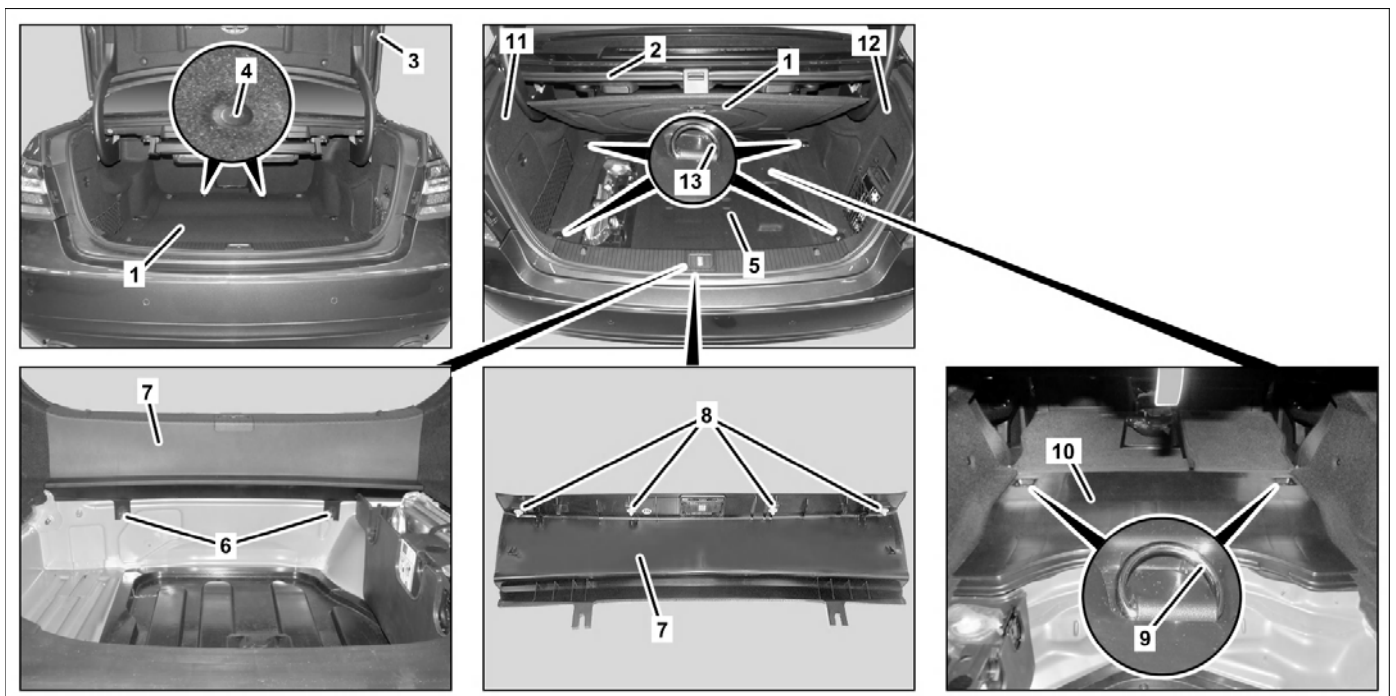


P68.30-3429-09

- 1 Cargo space flap
- 2 Frame seal
- 3 Trunk lid
- 4 Expansion clip
- 5 Spare wheel well paneling (without code (669) Spare wheel well on steel rim or without code (690) Emergency spare tire)

- 6 Nuts
- 7 Rear center section paneling
- 8 Clips
- 9 Anchoring lug
- 10 Trim on trunk floor, front

- 11 Left side paneling
- 12 Right side paneling
- 13 Anchoring lug

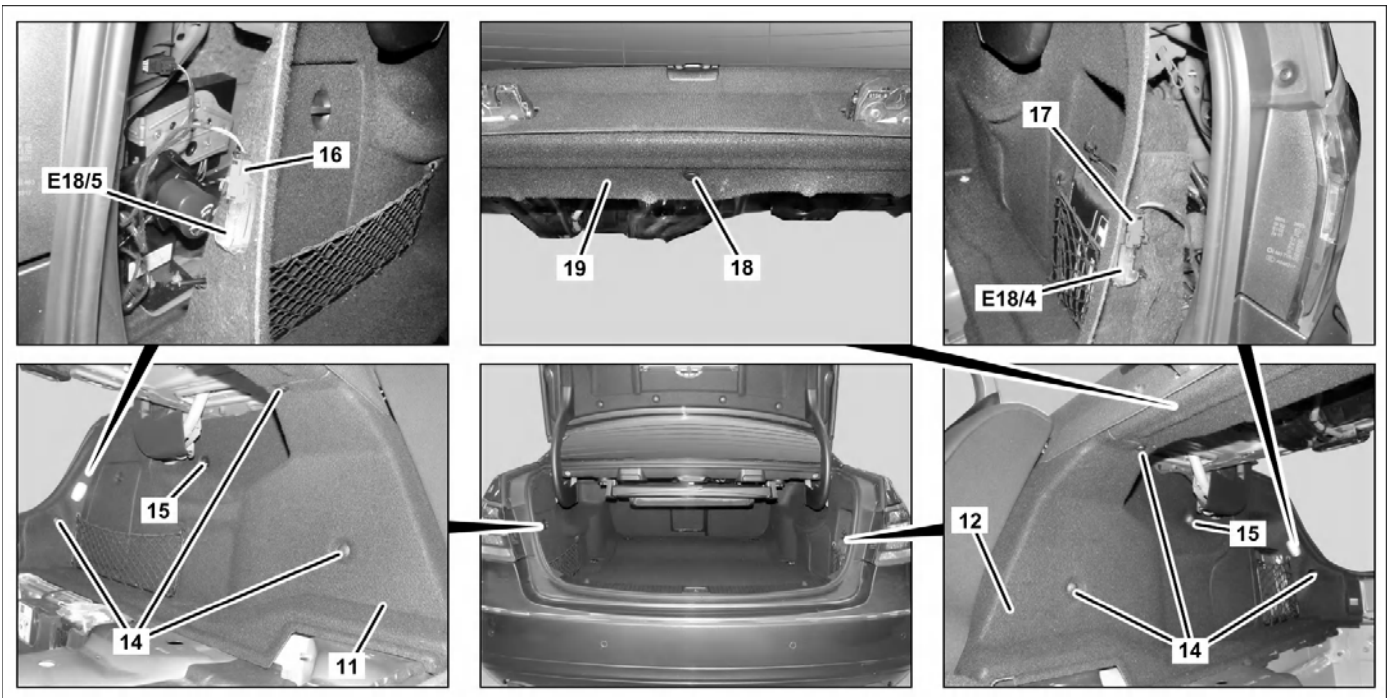

P68.30-3430-09

**Shown with code (287) Through-loading feature**


- |    |                     |    |                       |       |                                |
|----|---------------------|----|-----------------------|-------|--------------------------------|
| 11 | Left side paneling  | 16 | Electrical connector  | E18/4 | Right luggage compartment lamp |
| 12 | Right side paneling | 17 | Electrical connector  | E18/5 | Left luggage compartment lamp  |
| 14 | Expansion clips     | 18 | Expansion clip        |       |                                |
| 15 | Nut                 | 19 | Cross member paneling |       |                                |

	<b>Risk of injury</b> caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
<b>i</b>	Notes on sensor system for trunk lid opening/closing		AH80.61-P-0001-01A
<b>↔</b> <b>↔</b>	<b>Remove/install</b>		
1.1	Lift load compartment flap (1) and hook into sealing frame (2) on trunk lid (3)	If front trunk floor paneling (10) is not removed.	
1.2	Remove expansion clips (4) and load compartment flap (1)	If front trunk floor paneling (10) is removed.	
		<b>☑</b> Clip remover	*452589016300
2	Remove spare tire well paneling (5)	Model 212.0/1 except code 669 (Spare tire on steel rim) except code 690 (Collapsible spare wheel)	
3	Loosen nuts (6)	<b>i</b> Do not unscrew nuts (6) completely.	
4	Unclip rear center section paneling (7) with assembly wedge from clips (8) and remove upward	<b>☑</b> Mounting wedge	*110589035900
5.1	Unlock rear seat backrest and push forward until left side paneling (11) and right side paneling (12) is exposed behind rear seat backrest	Model 212.0/1 except code 287 (Folding rear seat backrests) When removing left side paneling (11) and right side paneling (12).	
5.2	Fold over left and right rear seat backrest	Model 212.0/1 except code 287 (Folding rear seat backrests) When removing left side paneling (11) and right side paneling (12).	
6.1	Remove anchoring lug (9) on left and right on front trunk floor paneling (10)	Model 212.0/1 with code 287 (Folding rear seat backrests) <b>Nm</b> Screw/bolt for tie-down eye	*BA68.50-P-1001-031
6.2	Remove anchoring lug on left and right on front trunk floor paneling (10)	Model 212.0/1 except code 287 (Folding rear seat backrests) <b>i</b> On vehicles without code (287) Through-loading feature, anchoring hooks are installed instead of anchoring lugs (9). <b>Nm</b> Screw/bolt for tie-down eye	*BA68.50-P-1001-031


7	Remove front trunk floor paneling (10)		
8	Remove anchoring lug (13) or anchoring hook from left side paneling (11) and right side paneling (12)	<b>i</b> On vehicles without code (287) Through-loading feature, anchoring hooks are installed instead of anchoring lugs (13). <b>Nm</b> Screw/bolt for tie-down eye	*BA68.50-P-1001-03I
9	Remove expansion clips (14) on left side paneling (11) and right side paneling (12)	<b>S</b> Clip remover	*452589016300
10	Unscrew nuts (15)		
11	Disconnect electrical connector (16) from left trunk lamp (E18/5)		
12	Disconnect electrical connector (17) from right trunk lamp (E18/4)		
13	Loosen from left side paneling (11) and right side paneling (12) in lower area of wheel wells, pull toward center of trunk and remove		
14	Remove expansion clip (18) from crossmember paneling (19)	<b>S</b> Clip remover	*452589016300
15	Remove cross member paneling (19)		
16	Install in the reverse order		

**Nm** Cargo retainers

Number	Designation	Model 212
BA68.50-P-1001-03I	Screw/bolt for tie-down eye	Nm 24

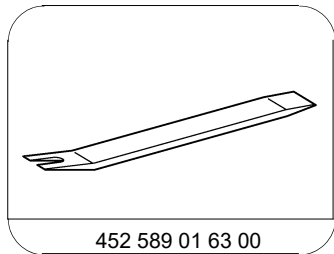

Clip remover

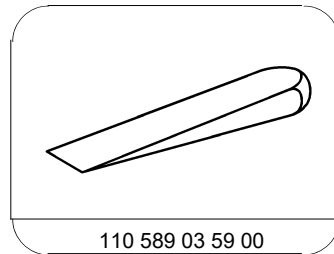

Mounting wedge