

Document number: pe54.15-p-2502-97faa


Document title: Wiring diagram of front backup fuse box (F32)

Code:	Designation:	Position:
A0	Color code key	72L
A32	AC housing	17L
A32x1	Air conditioner housing electrical connector	18H
A32z1	Air conditioner housing connector sleeve	18J
Code 580	Automatic air conditioning	15E
Code 581	Comfort automatic air conditioning	15E
F32	Front electrical prefuse box	4A
F32	Front electrical prefuse box	11A
F32	Front electrical prefuse box	20A
F32	Front electrical prefuse box	28A
F32	Front electrical prefuse box	36A
F32	Front electrical prefuse box	44A
F32	Front electrical prefuse box	52A
F32	Front electrical prefuse box	65A
F32	Front electrical prefuse box	60A
F32f100	Prefuse 100	17C
F32f101	Prefuse 101	36C
F32f102	Prefuse 102	4C
F32f103	Prefuse 103	23C
F32f104	Prefuse 104	59C
F32f105	Prefuse 105	58C
F32f106	Prefuse 106	65C
F32f107	Prefuse 107	21C
F32f108	Prefuse 108	22C
F32f109	Prefuse 109	24C
F32f110	Prefuse 110	24C
F32f88	Pyrofuse 88	46C
F32f89	Prefuse 89	55C
F32f90	Prefuse 90	14C
F32f91	Prefuse 91	41C
F32k2	Quiescent current cutout relay	12A
F34	Interior fuse box	61L
F64/1	Left rear door control unit fuse carrier	28L
F64/2	Right rear door control unit fuse carrier	31L
M4/7	Combustion engine and air conditioning with integrated control fan motor	41L
N10/1	Front SAM control unit with fuse and relay module	38L
N10/1	Front SAM control unit with fuse and relay module	56L
N10/2	Rear SAM control unit with fuse and relay module	12L
N10/2	Rear SAM control unit with fuse and relay module	65L
N2/10	Supplemental restraint system control unit	53L
N69/3	Left rear door control unit	25L
N69/4	Right rear door control unit	34L
R22/3	PTC heater booster	21L
U118	Valid for front battery	7G
U118	Valid for front battery	36E
U119	Valid for rear battery	2G
U119	Valid for rear battery	8E
U12	Valid for left-hand drive vehicles	8E
U13	Valid for right-hand drive vehicles	8F
U152	Valid for gasoline engine 156	7J
U152	Valid for gasoline engine 156	48J
U157	Valid for combustion engine 272 DE	7J
U157	Valid for combustion engine 272 DE	48J
U169	Valid for gasoline engine 271 DE	7J
U169	Valid for gasoline engine 271 DE	48J
U240	Valid for all except ECO start/stop function	14E
U739	Valid for gasoline engine 271 continuous fuel injection system (electronic)	4J

**Document number:** pe54.15-p-2502-97faa  
**Document title:** Wiring diagram of front backup fuse box (F32)


<b>Code:</b>	<b>Designation:</b>	<b>Position:</b>
U739	Valid for gasoline engine 271 continuous fuel injection system (electronic)	45J
U74	Valid for diesel engines	19F
U74	Valid for diesel engines	30E
U740	Valid for diesel engine 646	1J
U740	Valid for diesel engine 646	42J
U75	Valid for gasoline engines	28E
U819	Valid for gasoline engine 272	4J
U819	Valid for gasoline engine 272	45J
U880	Valid for diesel engine 642	1J
U880	Valid for diesel engine 642	42J
U928	Valid for England	23E
U948	Valid for diesel engine 651	1J
U948	Valid for diesel engine 651	42J
W16/3	Left major assembly compartment ground point	9H
W16/4	Right wheelhouse ground point	9H
X18/40	Instrument panel harness and vehicle floor electrical connector	17H
X34/35	Rear door control unit feed-in electrical connector	30H
X35/3	Left rear door electrical connector	25H
X35/4	Right rear door electrical connector	33H
X85/8	PTC heater booster electrical connector	21H



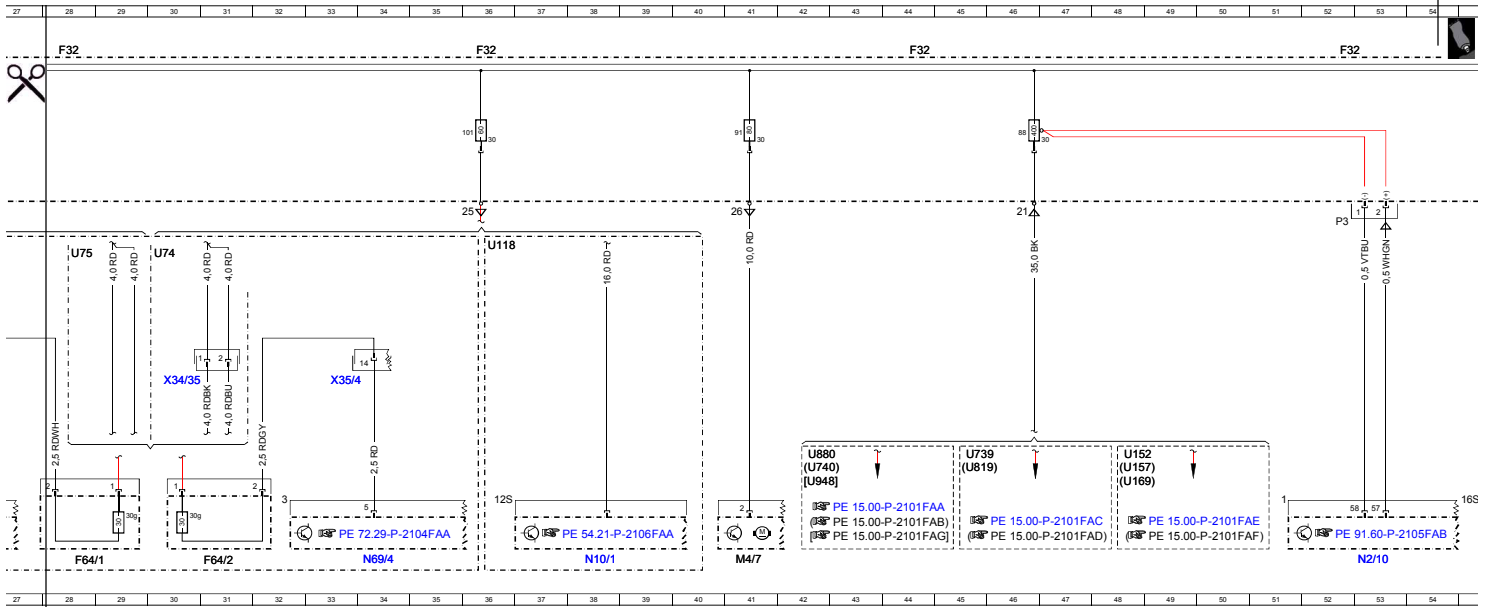

Cut here

▼ Affix page 3 here ▼

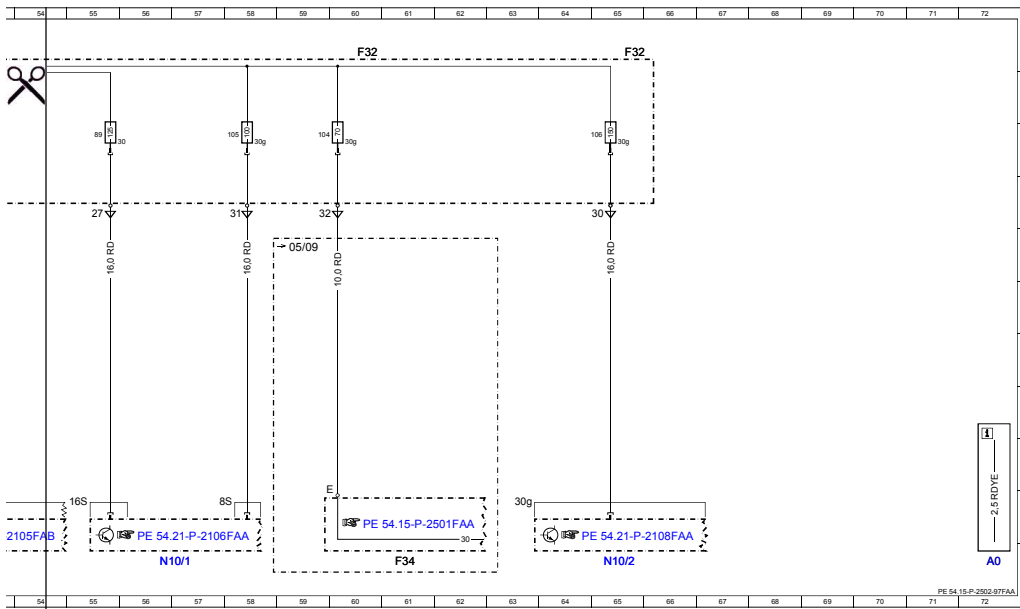

*Cut here*