


**Document title** Fuse and relay box, as-built configuration

**Document number** gf5415p0800cw

MODEL 204.0/2  
up to model year 2008

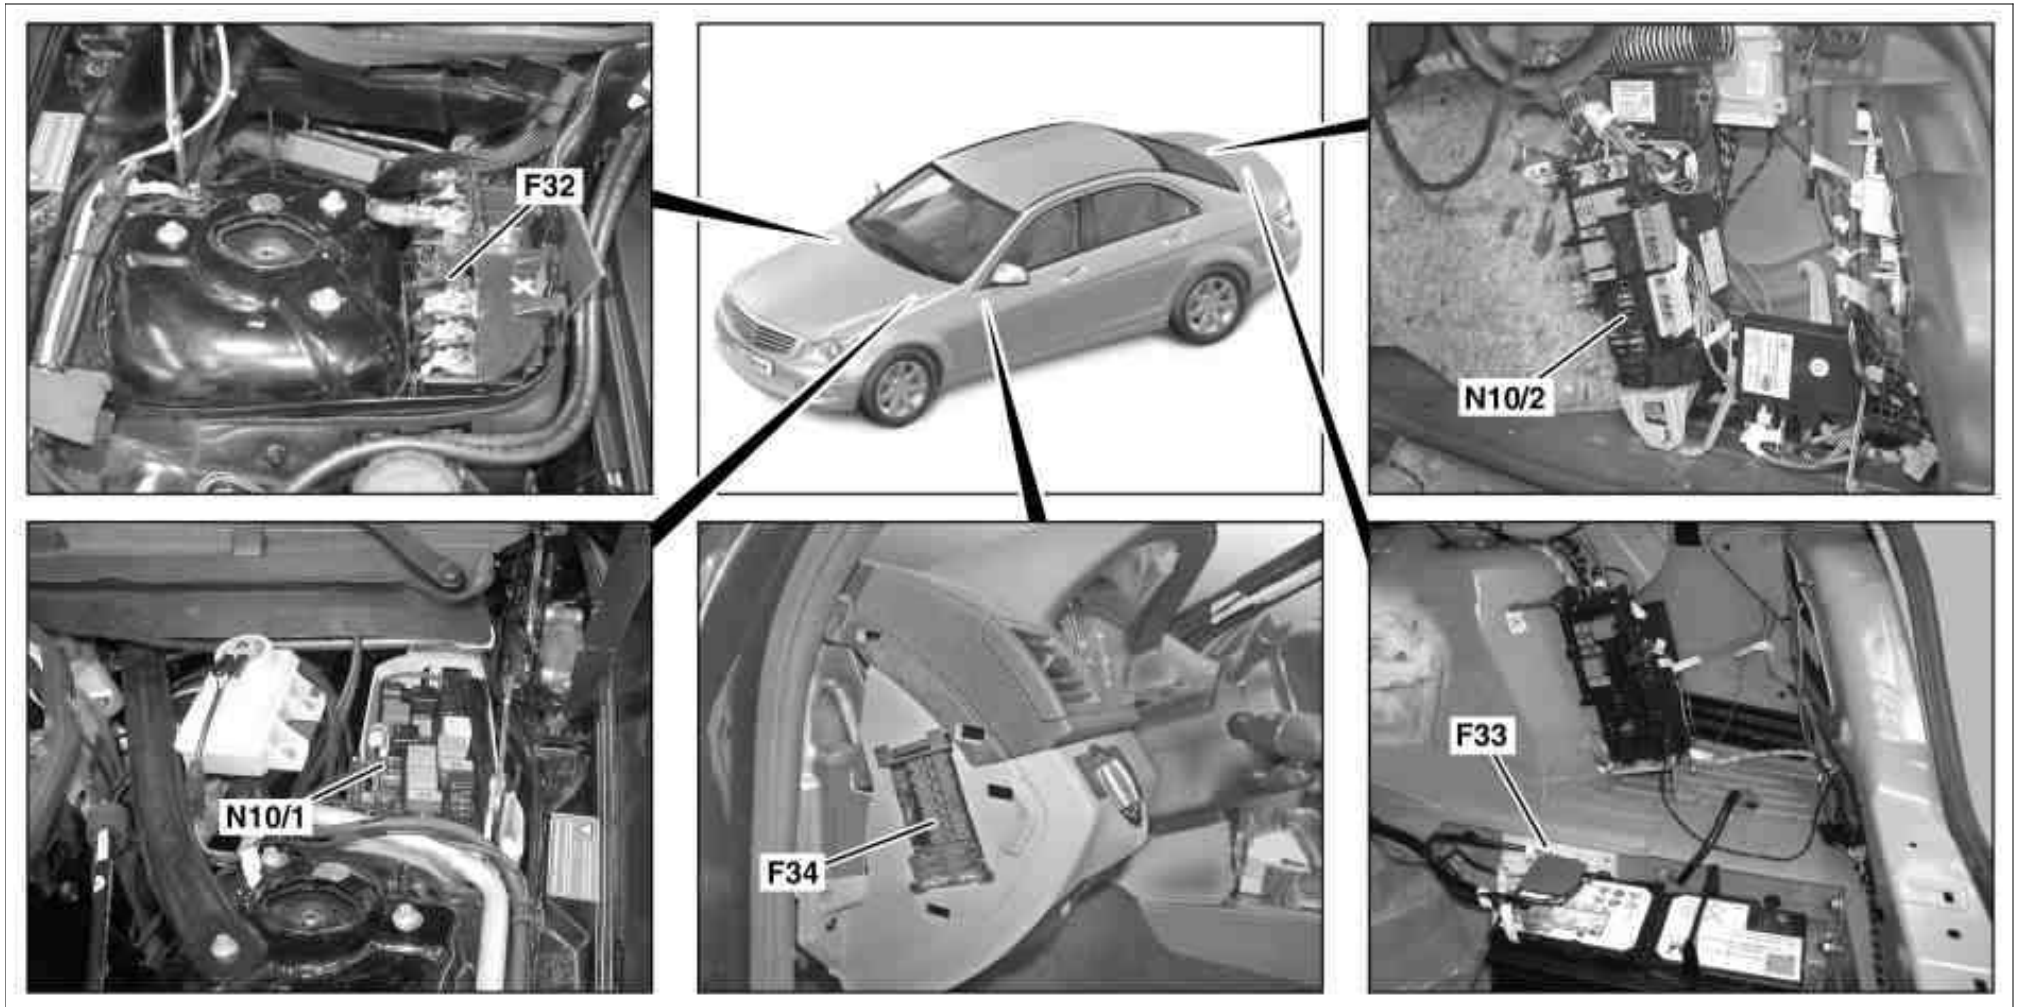

P54.15-3024-09

#### Shown on model 204.0

F32 Front electrical prefuse box

F34 Interior fuse box

N10/2 Rear SAM control unit with fuse and relay module

F33 Rear prefuse box

N10/1 Front SAM control unit with fuse and relay module

	Fuse assignment of fuse and relay box in left engine compartment	N10/1	<a href="#">GF54.15-P-1256-03CW</a>
	Fuse assignment of fuse and relay box in trunk	N10/2	<a href="#">GF54.15-P-1256-06CW</a>
	Fuse assignment of front prefuse box	F32	<a href="#">GF54.15-P-1256-07CW</a>
	Fuse assignment of rear prefuse box	F33	<a href="#">GF54.15-P-1256-08CW</a>
	Fuse assignment of fuse box in left of cockpit	F34	<a href="#">GF54.15-P-1256-13CW</a>
	Relay assignment of fuse and relay box in left side of engine compartment	N10/1	<a href="#">GF54.15-P-1257-03CW</a>
	Relay assignment of fuse and relay box in trunk	N10/2	<a href="#">GF54.15-P-1257-04CW</a>