


MODEL 212.0 /1 with CODE (810) Sound system



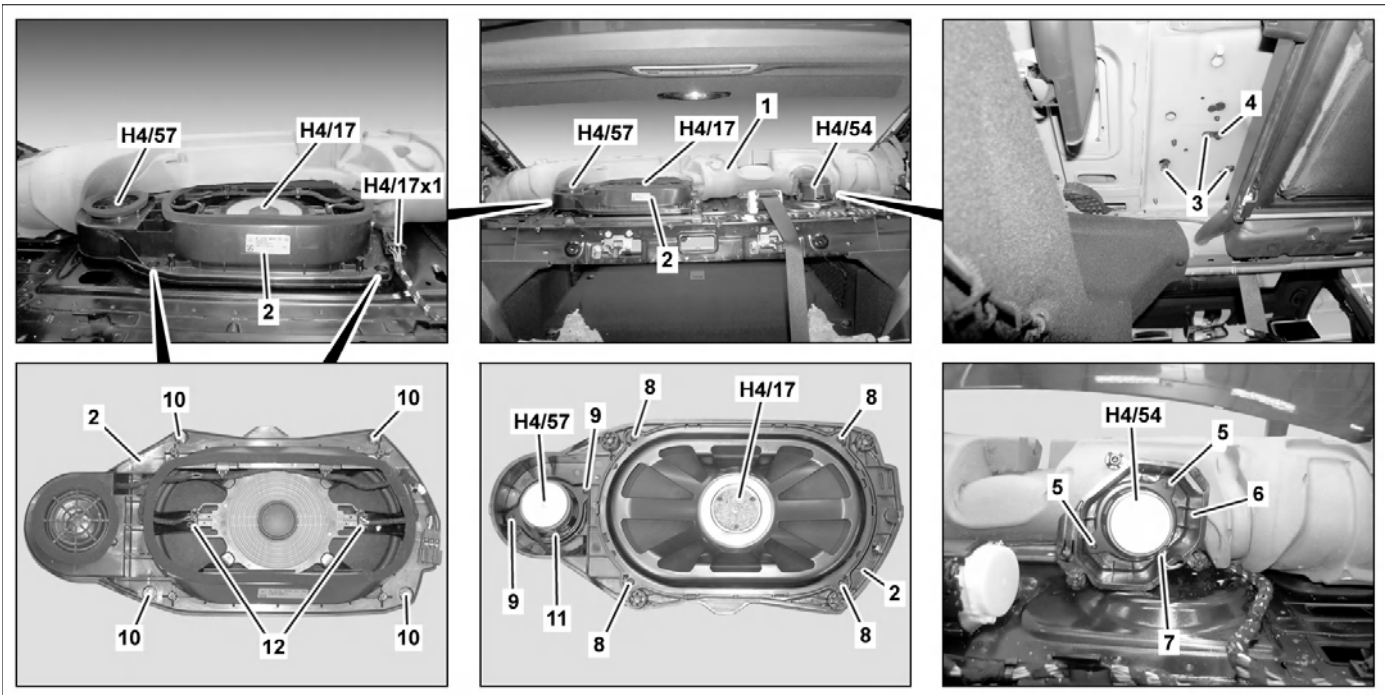

P82.62-3452-09

- 1 Foam rubber
 2 Right speaker housing
 3 Bracket
 4 Catch hook
 5 Screw
 6 Left speaker housing

- 7 Electrical connector
 8 Screw
 9 Screw
 10 Screw
 11 Electrical connector
 12 Electrical connectors

- H4/17 Bass speaker
 H4/54 Left rear surround speaker
 H4/57 Right rear surround speaker
 H4/17x1 Bass speaker electrical connector

 	Remove/install		
1	Remove rear shelf		AR68.30-P-4580EW
2	Fold foam material (1) towards the rear until the bass speaker (H4/17), the left rear surround speaker (H4/54) and the right rear surround speaker (H4/57) are accessible		
3	Release catch hooks (4) and release bracket (3) of left speaker housing (6) by rotating clockwise	When removing the left rear surround speaker (H4/54).	
4	Lift left speaker housing (6) with left rear surround speaker (H4/54), disconnect electrical connector (7) and remove left housing speaker (6) with left rear surround speaker (H4/54)	When removing the left rear surround speaker (H4/54).	
5	Remove screws/bolts (5) and remove the left rear surround speaker (H4/54) from the left speaker housing (6).	When removing the left rear surround speaker (H4/54).	
6	Disconnect bass speaker electrical connector (H4/17x1)	When removing the bass speaker (H4/17) or the right rear surround speaker (H4/57).	
7	Remove screws/bolts (10) and remove right speaker housing (2) with bass speaker (H4/17) and right rear surround speaker (H4/57)	When removing the bass speaker (H4/17) or the right rear surround speaker (H4/57).	
8	Disconnect electrical connector (11), remove screws/bolts (9) and remove right rear surround speaker (H4/57) from right speaker housing (2)	When removing the right rear surround speaker (H4/57).	
9	Disconnect electrical connectors (12), remove screws/bolts (8) and remove bass speaker (H4/17) from right speaker housing (2)	When removing the bass speaker (H4/17).	
10	Install in the reverse order		