

Item	Designation	Coordinates
<u>A0</u>	Color code key	72L
<u>A26/2</u>	Passenger-side front door infrared remote control receiver	27L
<u>A85/1</u>	Right front door lock	19L 23L
<u>A85/1m1</u>	Right front door central locking motor	19L 22L
<u>A85/1m4</u>	Right front door additional door lock actuator motor	24L
<u>A85/1s1</u>	Right front door rotary tumbler switch	20L 23L
<u>Code 889</u>	KEYLESS-GO	17E
<u>E6/6</u>	Right outside mirror turn signal lamp	54L
<u>E6/6x1</u>	Right outside mirror turn signal lamp electrical connector	54H
<u>E17/4</u>	Right front door exit and warning lamp	47L
<u>E17/12</u>	Right front door door handle illumination	45L
<u>E17/44</u>	Right front door ambiance illumination	48L 50L
<u>M10/4</u>	Right front door power window motor	16L
<u>M21/2</u>	Right outside mirror	57L
<u>M21/2e1</u>	Right outside mirror ambient lamp	68L
<u>M21/2e2</u>	Right Blind Spot Assist readiness and warning indicator	66L
<u>M21/2e2x1</u>	Blind Spot Assist warning lamp/right mirror dimming electrical connector	64H
<u>M21/2h1</u>	Automatic dimming mirror	62L 64L
<u>M21/2h1x1</u>	Mirror dimming electrical connector	62H
<u>M21/2m1</u>	Vertical inclination adjustment actuator motor	57K
<u>M21/2m2</u>	Horizontal inclination adjustment actuator motor	57K
<u>M21/2m3</u>	Outside mirror fold-in/fold-out electric motor	61L
<u>M21/2r1</u>	Mirror heater	55L
<u>M21/2r2</u>	Vertical inclination adjustment potentiometer	59K
<u>M21/2r3</u>	Horizontal inclination adjustment potentiometer	59K
<u>N10/1</u>	Front SAM control unit with fuse and relay module	8L
<u>N10/1f3</u>	Fuse 3	7L
<u>N10/2</u>	Rear SAM control unit with fuse and relay module	3L
<u>N10/2f41</u>	Fuse 41	2L
<u>N69/2</u>	Right front door control unit	4A 12A 20A 29A 36A 44A 54A

Item	Designation	Coordinates
		62A 70A
<u>S15/1</u>	Trunk lid release button	40L
<u>S15/3</u>	Driver trunk lid/liftgate control button	40L
<u>S20</u>	Driver-side power window and outside mirror adjustment switch group	32L
<u>S20s1</u>	Left front power window switch	28L
<u>S20s2</u>	Right front power window switch	29L
<u>S20s3</u>	Left rear power window switch	31L
<u>S20s4</u>	Right rear power window switch	32L
<u>S20s5</u>	Rear side window child safety lock switch	30L
<u>S20s9</u>	Outside mirror fold-in/fold-out switch	34L
<u>S20s10</u>	Left outside mirror adjustment switch	35L
<u>S20s11</u>	Right outside mirror adjustment switch	36L
<u>S20s12</u>	Outside mirror adjustment switch	33L
<u>S21/2</u>	Passenger-side power window switch	43L
<u>S23</u>	Right front seat adjustment switch group	52L
<u>S85/6</u>	Right front door central locking interior switch	37L
<u>U12</u>	Valid for left-hand drive vehicles	1E 5E 41E
<u>U13</u>	Valid for right-hand drive vehicles	5E 10C 26E 38E 62E 63E
<u>U57</u>	Valid for model 212.2	38E
<u>U58</u>	Valid for model 212.0/1	38E
<u>U71</u>	Valid for fully electric seat adjustment with memory function	51E 58E
<u>U76</u>	Valid for automatic dimming mirror	62E 63E
<u>U144</u>	Valid for outside mirror fold-in/out function	33J 60E
<u>U344</u>	Valid for all except KEYLESS GO	21E
<u>U416</u>	Valid for one-color ambiance illumination	47A
<u>U417</u>	Valid for three-color ambiance illumination	49A
<u>U897</u>	Valid for intelligent servo module for DIRECT SELECT	10C
<u>U910</u>	Valid for Blind Spot Assist	63E
<u>U921</u>	Not valid for England	17E
<u>U928</u>	Valid for England	21E

Item	Designation	Coordinates
		24F
<u>U951</u>	Valid for ambient lamps	67E
<u>W19</u>	Right front seat crossmember ground point	9E
<u>X30/33</u>	Right vehicle floor interior CAN voltage distributor electrical connector	13L
<u>CAN B</u>	Interior CAN	13K
<u>LIN B5</u>	Left front door LIN	51B
<u>LIN B6</u>	Right front door LIN	28B