



SENSOR-FUEL PRESSURE
MOTOR-BOOST PRESSURE SERVO

MOTOR-INTAKE SWIRL SERVO

SENSOR-INTAKE EXHAUST PRESSURE

GLOW PLUG 5

INJECTOR-FUEL 5

GLOW PLUG 3

INJECTOR-FUEL 3

SENSOR-CAMSHAFT POSITION

INJECTOR-FUEL 1

GLOW PLUG 1

S145

G111

SENSOR-INTAKE AIR TEMPERATURE

VALVE-EGR AIR FLOW CONTROL

SENSOR-BOOST PRESSURE

MODULE-GLOW PLUG

SENSOR-ENGINE COOLANT TEMP

VALVE-EGR PRESSURE

S148

INJECTOR-FUEL 6

INJECTOR-FUEL 4

GLOW PLUG 4

INJECTOR-FUEL 2

GLOW PLUG 2

SOLENOID-FUEL PRESSURE

SENSOR-FUEL TEMPERATURE

SOLENOID-FUEL QUANTITY

SOLENOID-FUEL QUANTITY