



Document title Location and assignment of ground points

Document number gf0019p2000faa

Model 204

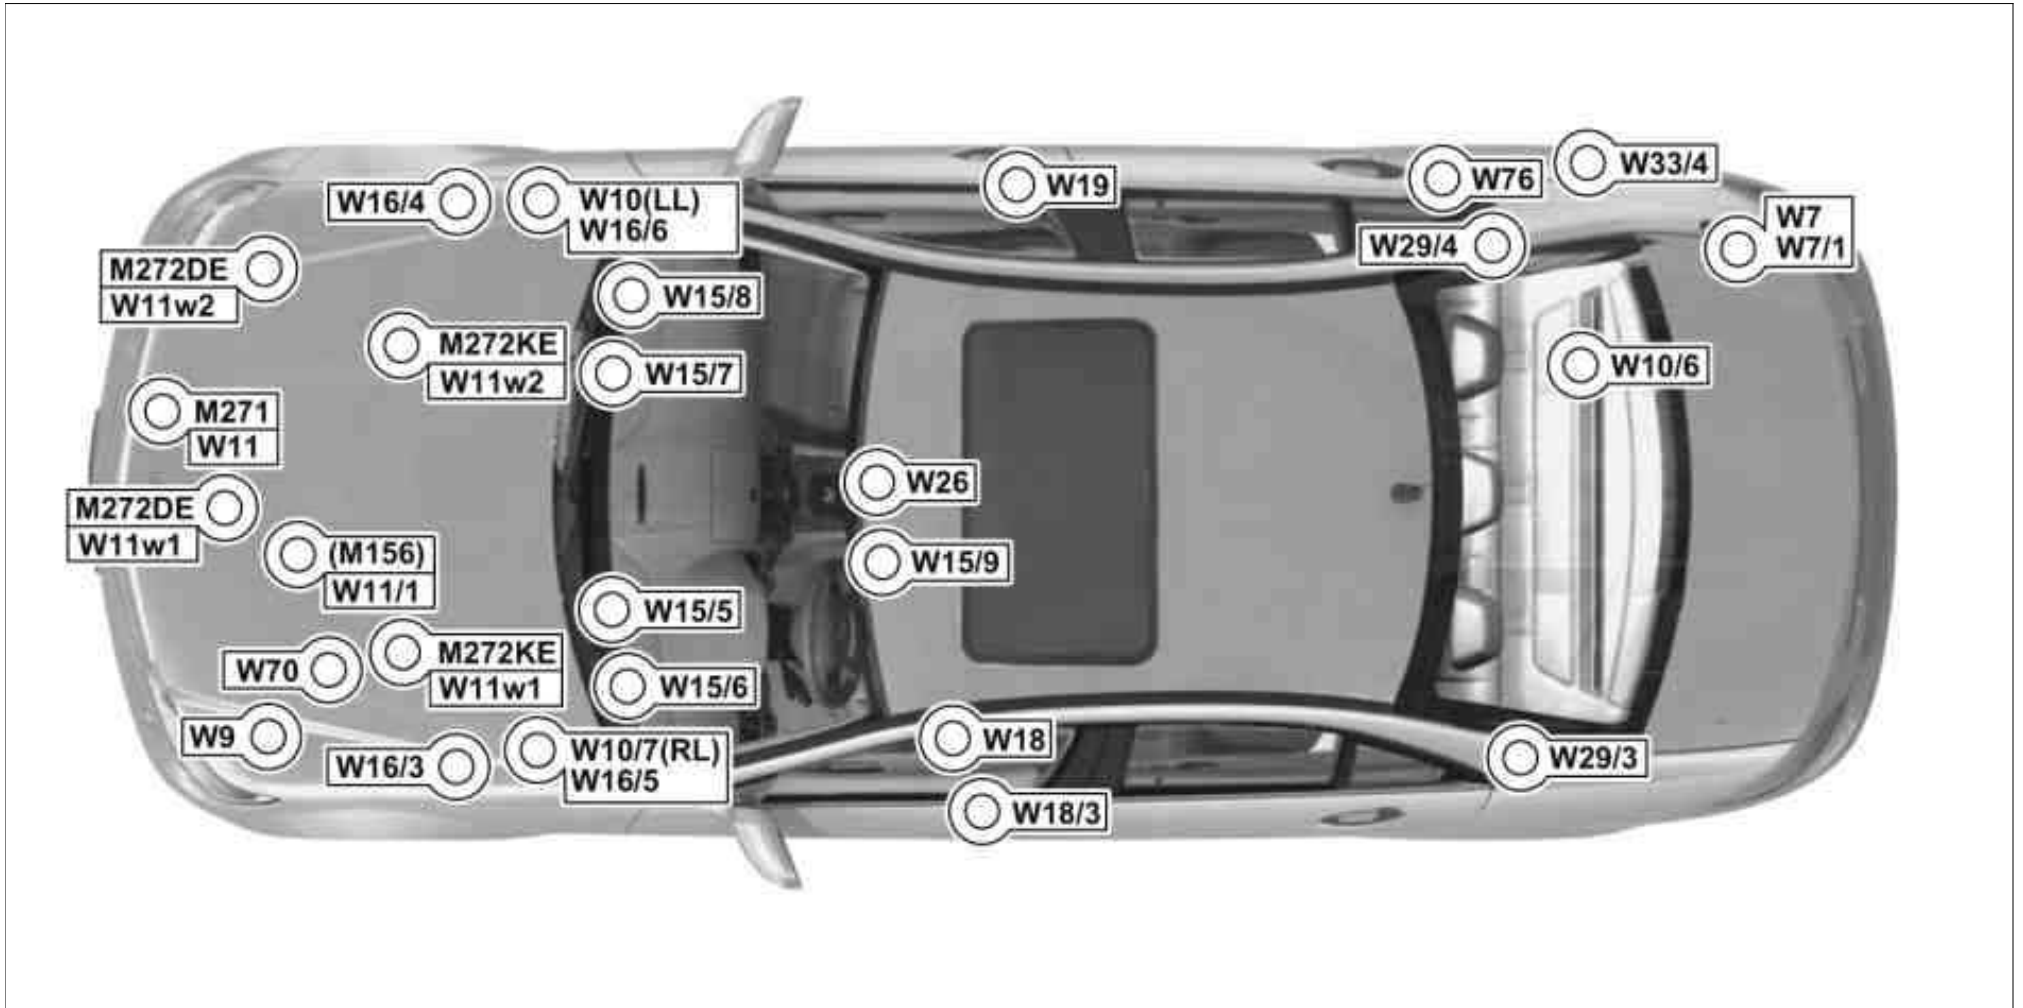


P00.19-4037-09

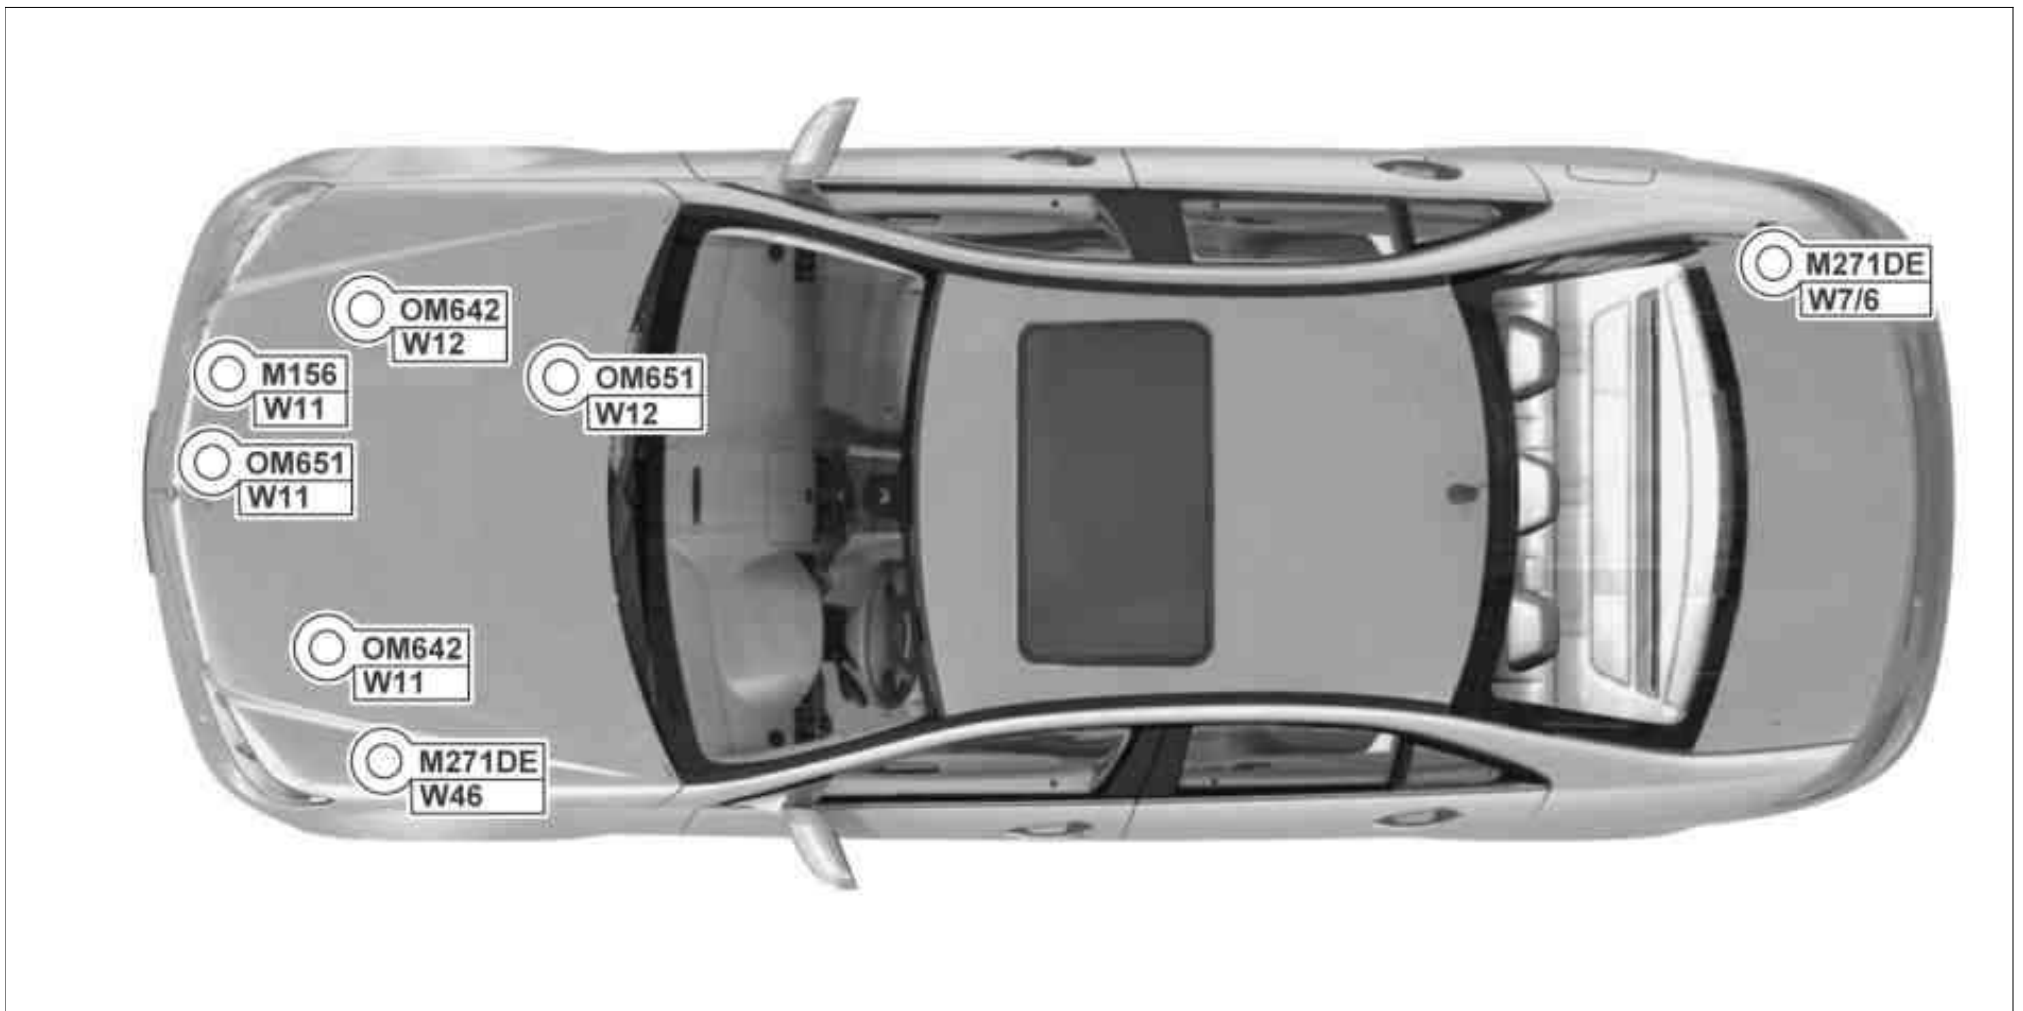

P00.19-4811-09



P00.19-4381-09

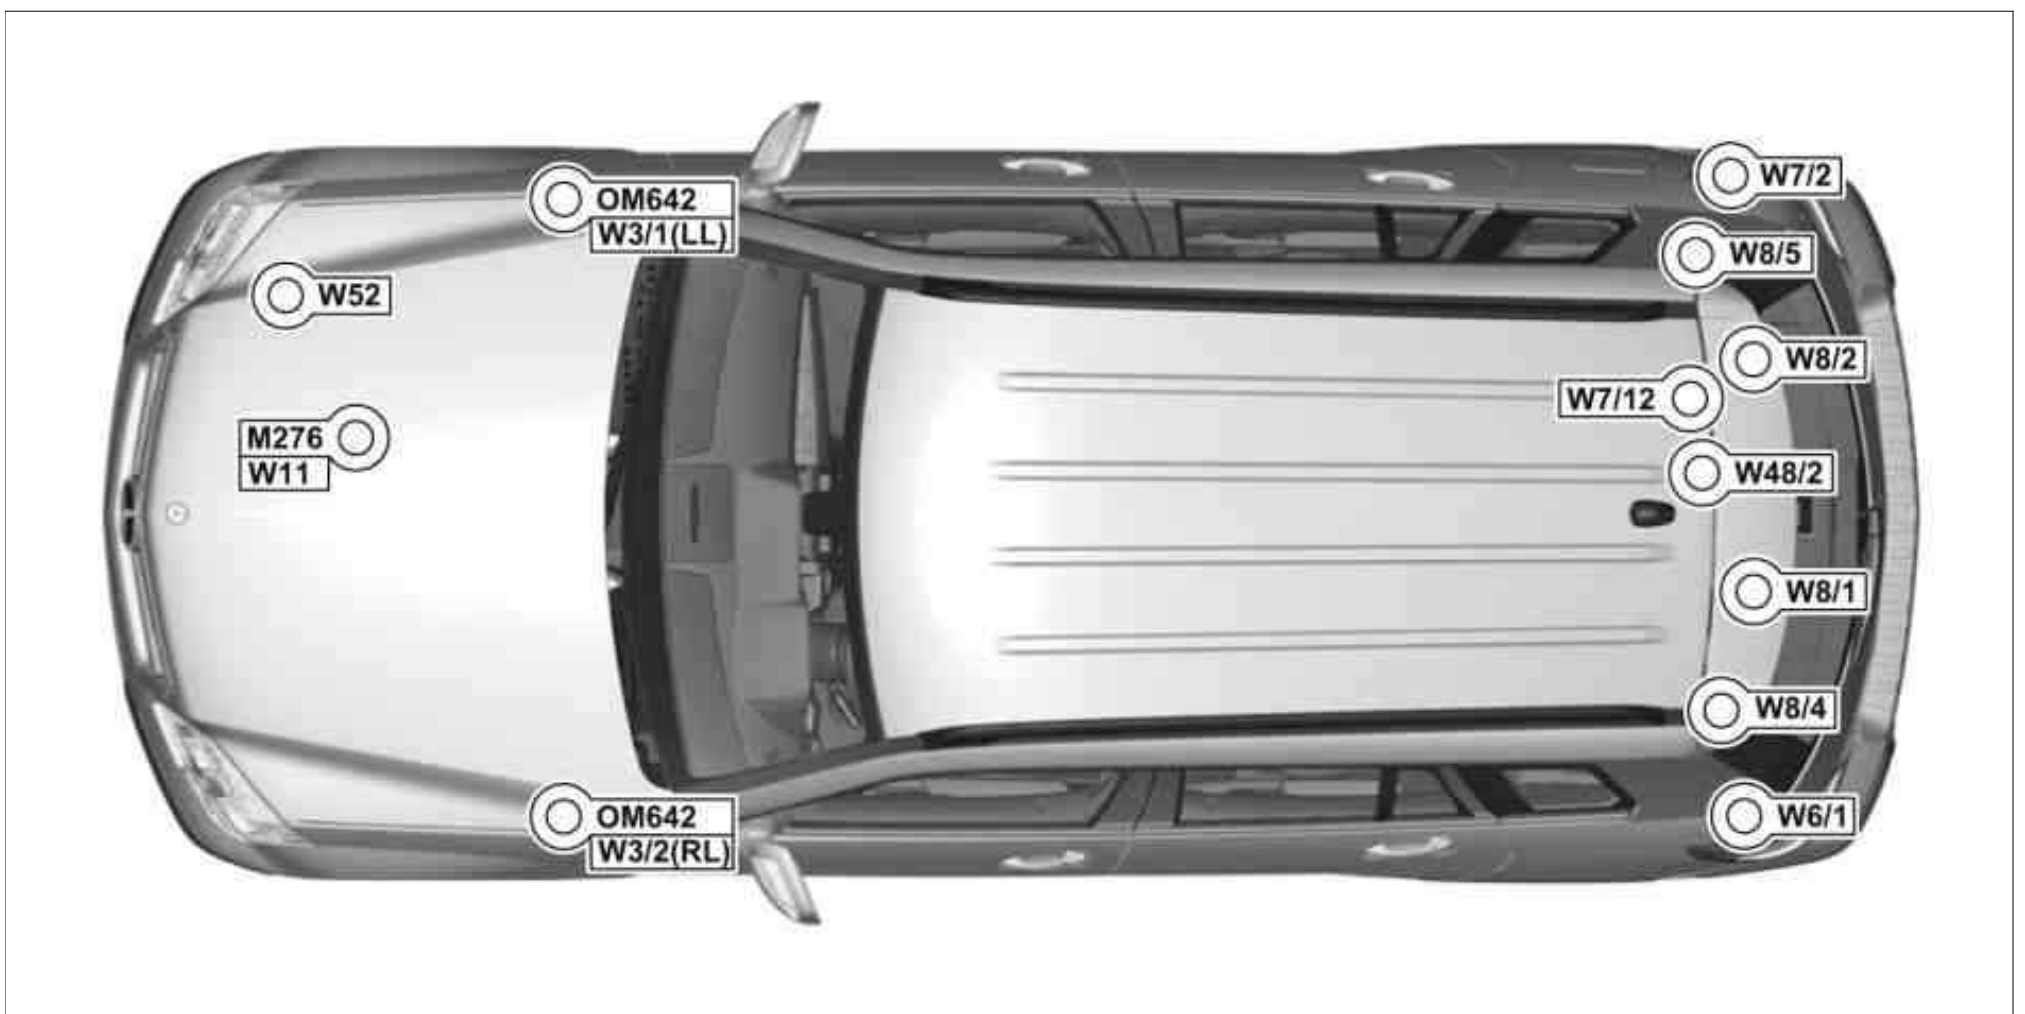

P00.19-4812-09

W3/1	Ground point (right front wheel well)	Location	GF00.19-P-2000-02FAA
		Assignment	PE00.19-P-2800FAF
W3/2	Left front wheel arch ground point	Location	GF00.19-P-2000-01FAA
		Assignment	PE00.19-P-2800FAF
W6/1	Left taillamp trunk ground point	Location	GF00.19-P-2000-21FAA
		Assignment	PE00.19-P-2800FAA
W7	Right wheelhouse trunk ground point	Location	GF00.19-P-2000-09FAA
		Assignment	PE00.19-P-2800FAI
W7/1	Right taillamp trunk ground point	Location	GF00.19-P-2000-09FAA
		Assignment	PE00.19-P-2800FAB
W7	Right wheelhouse trunk ground point	Location	GF00.19-P-2000-21FAA
		Assignment	PE00.19-P-2800FAI
W7/1	Right taillamp trunk ground point	Location	GF00.19-P-2000-21FAA
		Assignment	PE00.19-P-2800FAB
W7/2	Ground / trunk right side wall	Location	GF00.19-P-2000-21FAA
		Assignment	PE54.10-P-2103FAA
W7/6	Rear additional battery ground point	Location for M271 DE ECO Start-Stop	GF00.19-P-2000-09FAA

		Assignment	PE15.00-P-2103FAA
W7/12	Right load compartment floor AdBlue® ground point	Location	GF00.19-P-2000-09FAA
		Assignment	PE14.40-P-2101FAA
W8/1	Left tailgate ground point	Location	GF00.19-P-2000-21FAA
		Assignment	PE00.19-P-2800FAA
W8/2	Right tailgate ground point	Location	GF00.19-P-2000-05FAA
		Assignment	PE00.19-P-2800FAA
W8/2	Right tailgate ground point	Location	GF00.19-P-2000-21FAA
		Assignment	PE00.19-P-2800FAA
W8/4	Left tailgate ground point	Location	GF00.19-P-2000-21FAA
		Assignment	PE00.19-P-2800FAA
W8/5	Right tailgate ground point	Location	GF00.19-P-2000-21FAA
		Assignment	PE00.19-P-2800FAA
W9	Left front ground point (at lamp unit)	Location	GF00.19-P-2000-01FAA
		Assignment	PE00.19-P-2800FAB
W10	Right front battery ground point	Location for M271	GF00.19-P-2000-02FAA
		Assignment	PE15.00-P-2101FAC
W10	Right front battery ground point	Location for M272	GF00.19-P-2000-02FAA
		Assignment	PE15.00-P-2101FAD
W10	Right front battery ground point	Location for M156	GF00.19-P-2000-02FAA
		Assignment	PE15.00-P-2101FAE
W10	Right front battery ground point	Location for M272.982	GF00.19-P-2000-02FAA
		Assignment	PE15.00-P-2101FAF
W10/6	Rear battery ground point	Location for OM642.9	GF00.19-P-2000-09FAA
		Assignment	PE15.00-P-2101FAA
W10/6	Rear battery ground point	Location for OM646.8	GF00.19-P-2000-09FAA
		Assignment	PE15.00-P-2101FAB
W10/6	Rear battery ground point	Location for OM651	GF00.19-P-2000-09FAA
		Assignment	PE15.00-P-2101FAG
W10/7	Left front battery ground point	Location for M271	GF00.19-P-2000-01FAA
		Assignment	PE15.00-P-2101FAC
W10/7	Left front battery ground point	Location for M272	GF00.19-P-2000-01FAA
		Assignment	PE15.00-P-2101FAD
W10/7	Left front battery ground point	Location for M156	GF00.19-P-2000-01FAA
		Assignment	PE15.00-P-2101FAE
W10/7	Left front battery ground point	Location for M272.982	GF00.19-P-2000-01FAA
		Assignment	PE15.00-P-2101FAF
W11	Combustion engine ground point	Location for M156	GF00.19-P-2000-02FAA
		Assignment	PE07.61-P-2101FAE
W11	Combustion engine ground point	Location for M271	GF00.19-P-2000-01FAA
		Assignment	PE07.61-P-2101FAA
W11	Combustion engine ground point	Location for M271.86	GF00.19-P-2000-01FAA
		Assignment	PE07.08-P-2101FAC
W11	Combustion engine ground point	Location for M276	GF00.19-P-2000-02FAA
		Assignment	PE07.08-P-2101FAE
W11	Combustion engine ground point	Location for OM642	GF00.19-P-2000-01FAA
		Assignment	PE15.00-P-2101FAA
W11	Combustion engine ground point	Location for OM646.8	GF00.19-P-2000-01FAA
		Assignment	PE15.00-P-2101FAB
W11	Combustion engine ground point	Location for OM651	GF00.19-P-2000-01FAA
		Assignment	PE15.00-P-2101FAG
W11w1	Left cylinder bank ground point (engine)	Location for M272	GF00.19-P-2000-01FAA
		Assignment	PE00.19-P-2800FAB
W11w2	Right cylinder bank ground point (engine)	Location for M272	GF00.19-P-2000-02FAA
		Assignment	PE00.19-P-2800FAB
W11/1	Combustion engine ground point (ground strap)	Location for M156	GF00.19-P-2000-01FAA
		Assignment	PE07.61-P-2101FAE
W12	Ground point for fuel filter with heating element	Location for OM642	GF00.19-P-2000-02FAA
		Assignment	PE07.16-P-2101FAB
W12	Ground point for fuel filter with heating element	Location for OM651	GF00.19-P-2000-02FAA
		Assignment	PE07.16-P-2101FAF
W15/5	Left front footwell ground point	Location	GF00.19-P-2000-04FAA
		Assignment	PE00.19-P-2800FAC
W15/6	Ground point (left front footwell CAN)	Location	GF00.19-P-2000-04FAA
		Assignment	PE00.19-P-2800FAC
W15/7	Right front footwell ground point	Location	GF00.19-P-2000-05FAA
		Assignment	PE00.19-P-2800FAD
W15/8	Ground point (right front footwell CAN)	Location	GF00.19-P-2000-05FAA
		Assignment	PE00.19-P-2800FAD
W15/9	Ground point / PTC heater booster	Location	GF00.19-P-2000-04FAA
		Assignment	PE83.40-P-2101FAA

W15/9	Ground point / PTC heater booster	Location	GF00.19-P-2000-04FAA
		Assignment	PE83.40-P-2101FAC
W16/3	Left major assembly compartment ground point	Location	GF00.19-P-2000-01FAA
		Assignment	PE00.19-P-2800FAE
W16/4	Right wheelhouse ground point	Location	GF00.19-P-2000-02FAA
		Assignment	PE00.19-P-2800FAE
W16/5	Left major assembly compartment electronics ground point	Location	GF00.19-P-2000-01FAA
		Assignment	PE00.19-P-2800FAF
W16/6	Right major assembly compartment ground point	Location	GF00.19-P-2000-02FAA
		Assignment	PE00.19-P-2800FAF
W18	Left front seat crossmember ground point	Location	GF00.19-P-2000-04FAA
		Assignment	PE00.19-P-2800FAG
W18/3	Left front seat crossmember ground point 2	Location	GF00.19-P-2000-04FAA
		Assignment	PE00.19-P-2800FAG
W19	Right front seat crossmember ground point	Location	GF00.19-P-2000-05FAA
		Assignment	PE00.19-P-2800FAH
W26	Supplemental restraint system (SRS) control unit ground point	Location	GF00.19-P-2000-04FAA
		Assignment	PE91.60-P-2105FAA
W29/3	Left C-pillar ground point	Location	GF00.19-P-2000-04FAA
		Assignment	PE54.21-P-2108FAG
W29/4	Ground point / right C-pillar	Location	GF00.19-P-2000-09FAA
		Assignment	PE54.21-P-2108FAG
W33/4	Fuel tank filler neck ground point	Location	GF00.19-P-2000-09FAA
		Assignment	PE54.21-P-2108FAA
W46	Air pump ground point	Location for M271DE	GF00.19-P-2000-01FAA
		Assignment	PE54.21-P-2106FAE
W48/2	Ground (central roof frame)	Location	GF00.19-P-2000-05FAA
		Assignment	PE00.19-P-2800FAA
W48/2	Ground (central roof frame)	Location	GF00.19-P-2000-21FAA
		Assignment	PE00.19-P-2800FAA
W52	Ground (right front longitudinal member)	Location	GF00.19-P-2000-02FAA
		Assignment	PE46.35-P-2101FAA
W70	Electronic Stability Program ground point	Location	GF00.19-P-2000-01FAA
		Assignment	PE42.47-P-2000FAA
W76	Fuel pump ground point	Location for M271, M272	GF00.19-P-2000-05FAA
		Assignment	PE47.40-P-2101FAA
W76	Fuel pump ground point	Location for M156	GF00.19-P-2000-05FAA
		Assignment	PE47.40-P-2101FAB
	Location and assignment of ground points - Engine compartment, left	Model 204	GF00.19-P-2000-01FAA
	Location and assignment of ground points - Engine compartment, right	Model 204	GF00.19-P-2000-02FAA
	Location and assignment of ground points - Vehicle interior, left	Model 204	GF00.19-P-2000-04FAA
	Location and assignment of ground points - Vehicle interior, right	Model 204	GF00.19-P-2000-05FAA
	Location and assignment of ground points - trunk right	Model 204	GF00.19-P-2000-09FAA
	Location and assignment of ground points - Rear end	Model 204	GF00.19-P-2000-21FAA